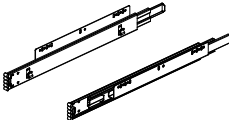
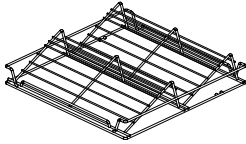




INSTALLATION INSTRUCTIONS

For SR-060SM~SR-090SM

A*1pair	B*1pc
	

Step 1:

A	600	800	900
B	497	697	797

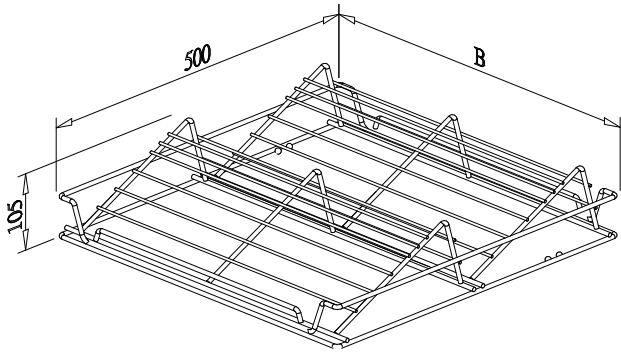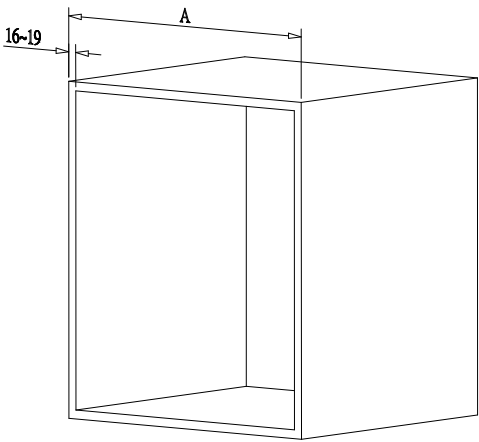

Step 2:

