










Suitable for 450mm cabinets

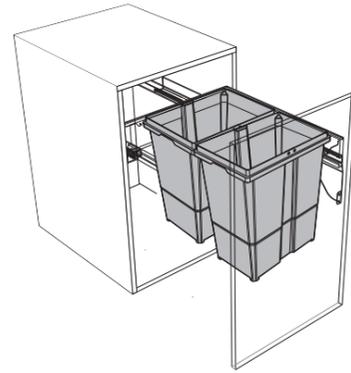

Suitable for 500mm cabinets

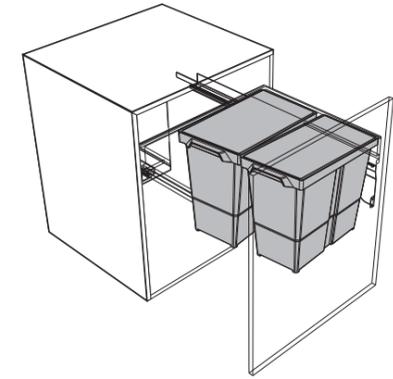

Suitable for 600mm cabinets

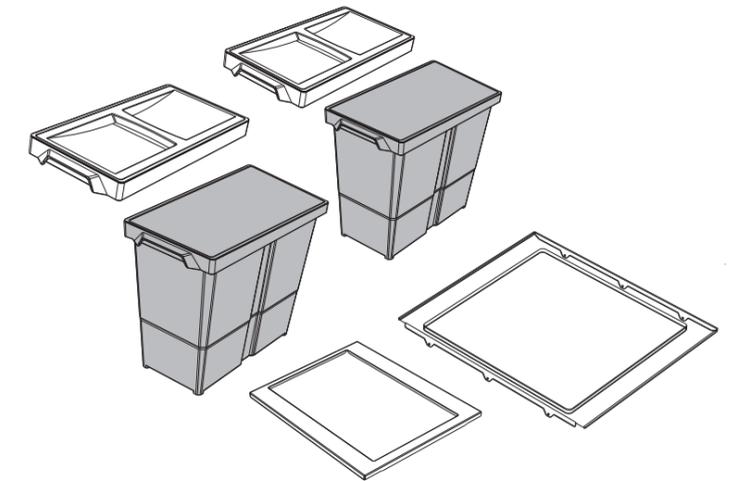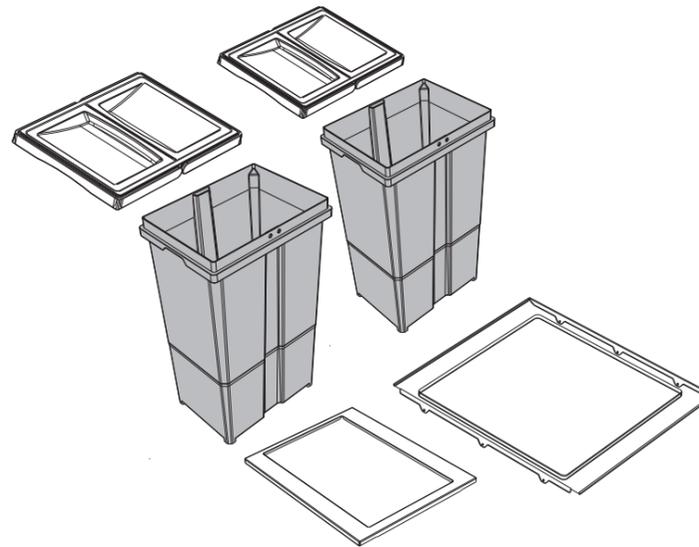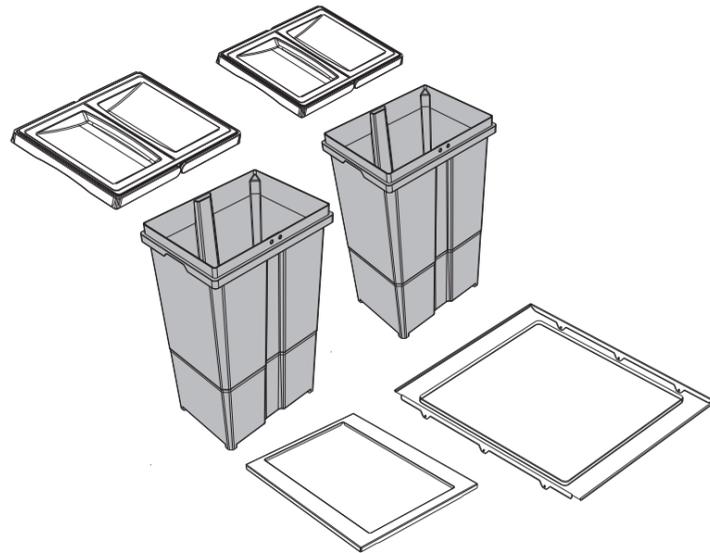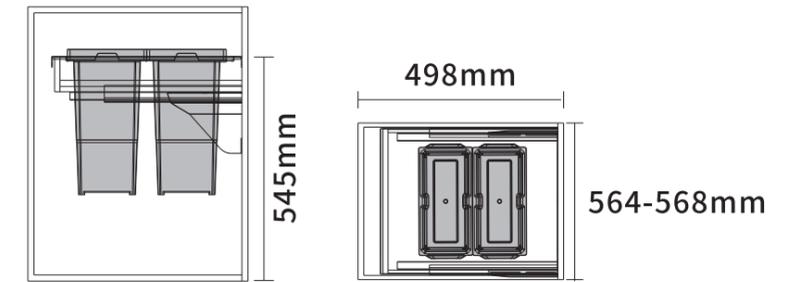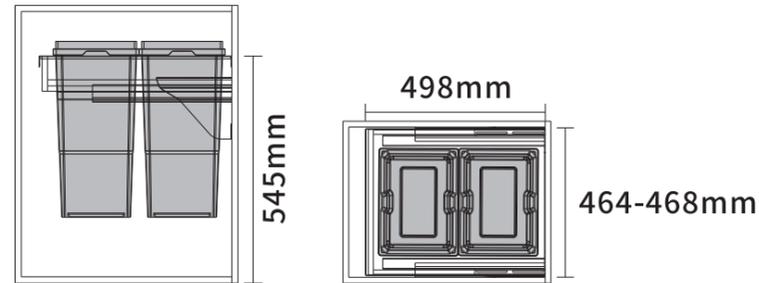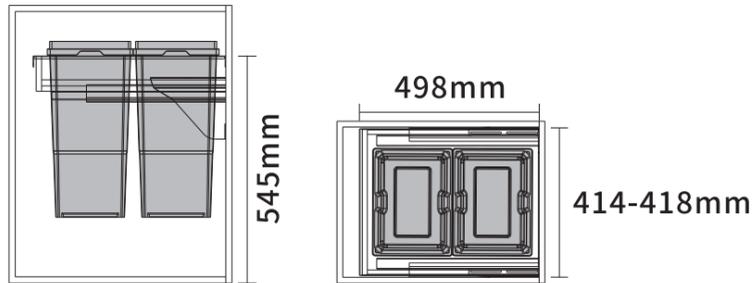


M5 x 8mm bolts x 6PCS




M3.5 self-tapping screws
6PCS for 450mm cabinets
8PCS for 600mm cabinets




15mm diameter x 1mm thickness
single-sided silicone pad x 6 PCS

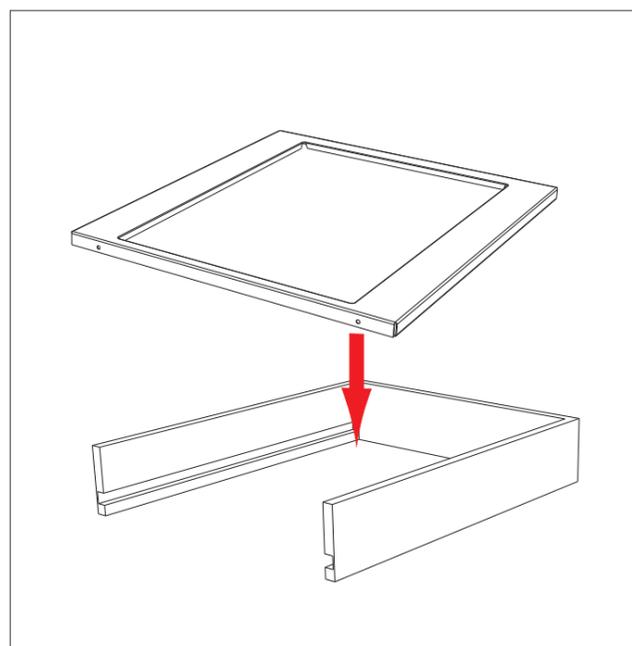


1. Install this support frame, which acts as drawer bottom.

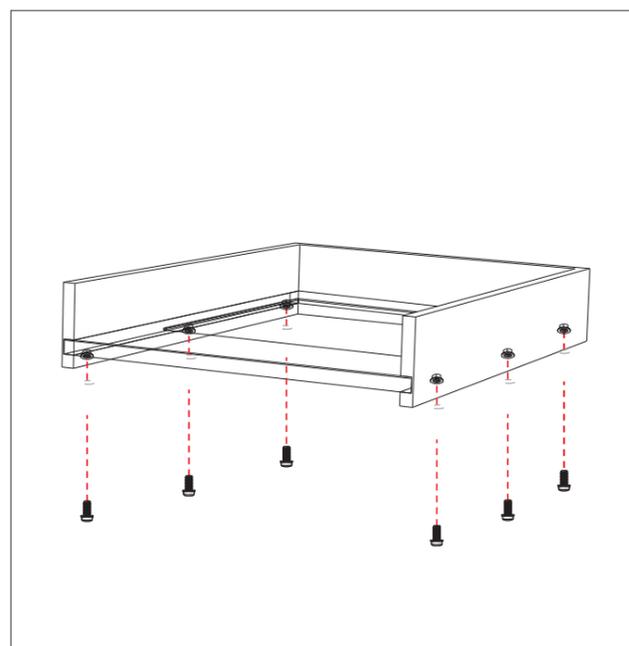


2. Secure with M5 screws from the bottom.

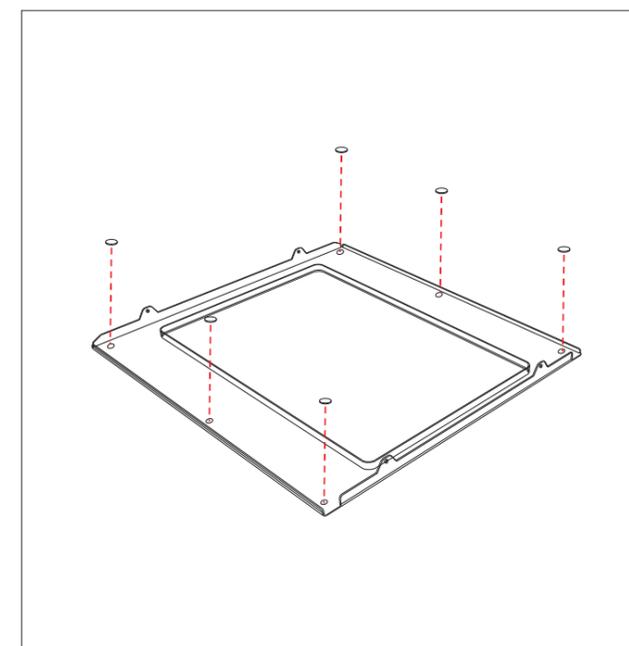


3. Attach M15 × 1mm silicone pads to the back of the metal frame.

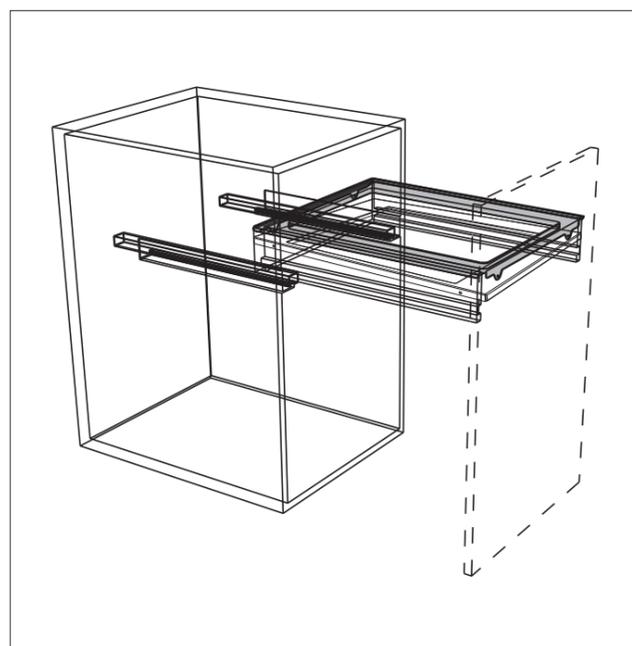

4. Place the metal frame directly onto the drawer sides.

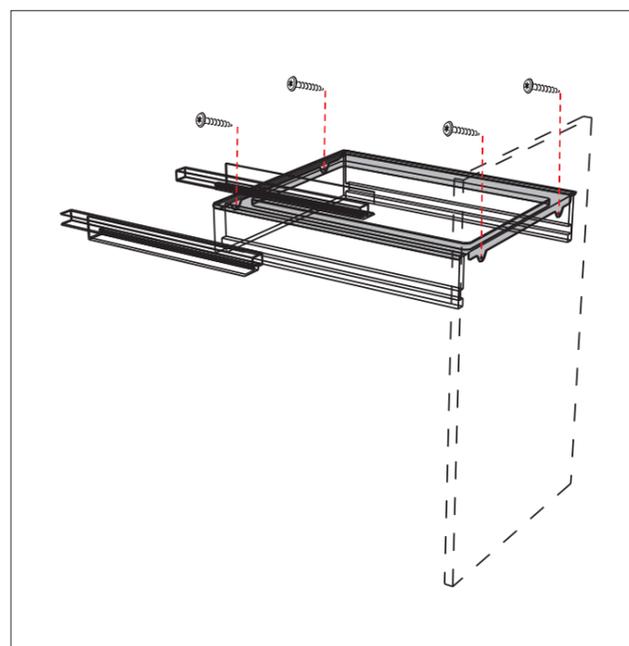

5. Secure the metal frame with M3.5 self-tapping screws.

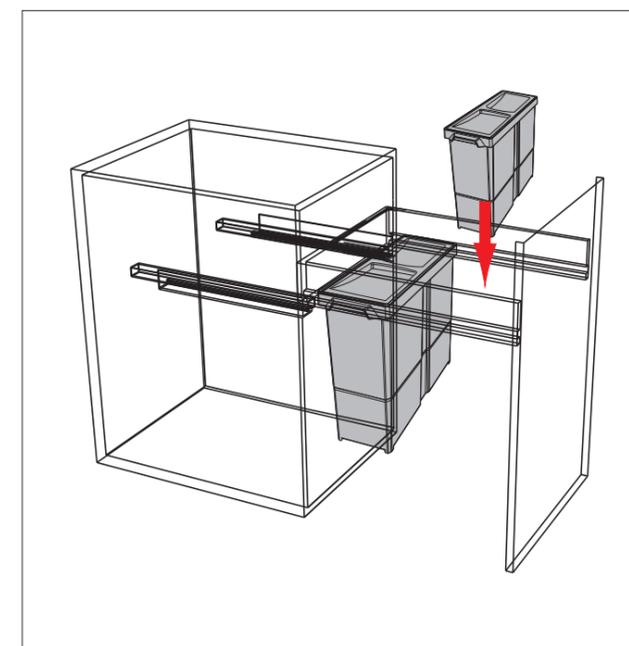

8. Finally, insert the waste bins into the metal frame.