



PANTS RACK INSTALLATION INSTRUCTIONS


to add Washer for 16mm partition

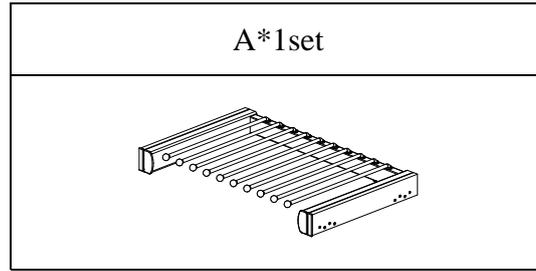


Step 1: Push part "B" to get the inner channel out.

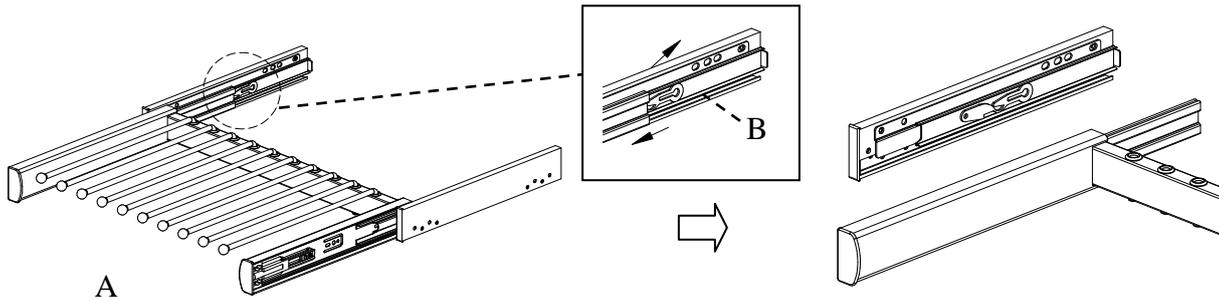

Step 2: If the cupboard is 16mm thickness, washer can be added to the aluminum spacer.

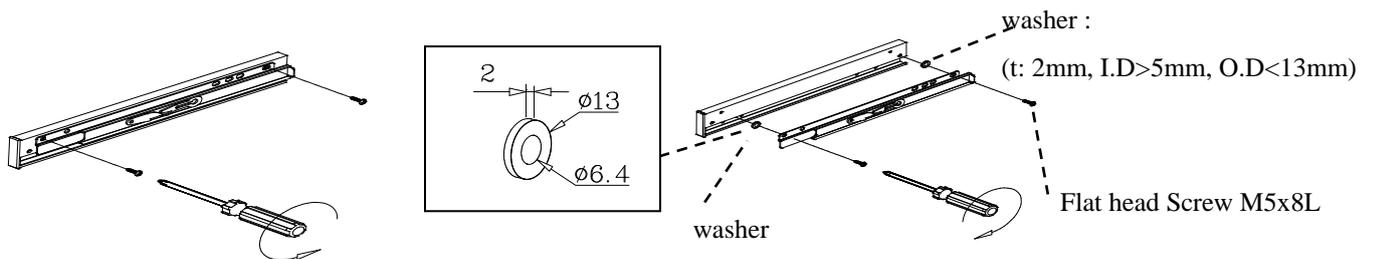

Step 3: Screw aluminum spacer to the partition wall.

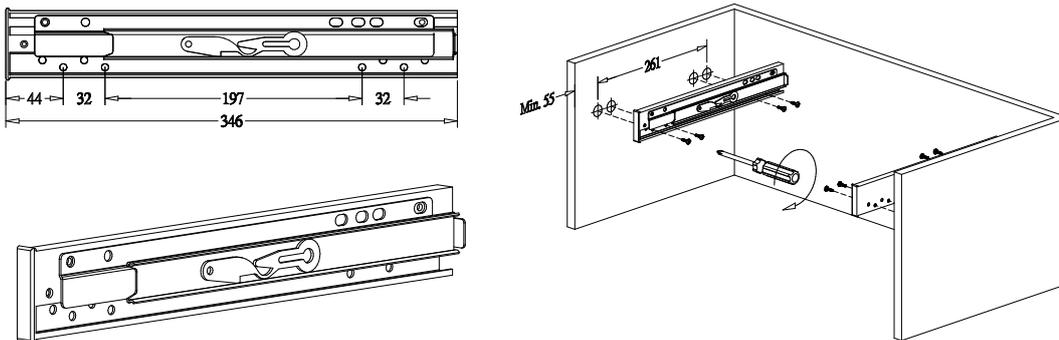

Step 4: Join outer slide together with the inner channel.

