



The ARC-H through surface wireless charger offers the ultimate in charging convenience. With a charging range of 15-30mm, ARC-H can be installed without the need to rout into the underside of the surface for surface thicknesses up to 25mm. Once installed ARC-H is completely hidden requiring a simple decal to guide placement of mobiles on the surface.

With 10W of charging power ARC-H is one of the fastest sub surface wireless chargers on the market, convenient for a quick boost or a full charge when you need it most.

ARC-H is designed for the easiest of installations. Simply place the marker decal on the surface and using the unique magnet alignment method locate and secure the ARC-H charging module to the underside using screws.

ARC-H will not charge the Apple iPhone 12 series. The ARC-80 integrated wireless charger will charge all wireless enabled phones including the iPhone 12 series.

FEATURES

- Charging range of 15-30mm - no routing < 25mm
- Powerful 10 Watts of charging power
- Fast charge for Samsung (10W) Apple (7.5W)
- Convenient for a quick boost or full charge
- 4 phone placement guide decals supplied
- Hidden underneath for a clutter free workspace




ARC-H Wireless Charger Code - **7112185**

ARC-H TECHNICAL

Specifications

Output Power	Up to 10W
Input Power	19V/0.94A
Standby Power	0.2W
Charging Range	15-30 mm (coil to coil)
Desk Thickness	No routing for surfaces up to 25mm thick.
Certification	IEC 60950-1 (Safety) EN62311 (Health) EN 301 489-1, EN 301 489-3 (EMC)EN 303 417 (Radio)
In The Box	Wireless charger (1) Power adapter (1) Desktop decals (4) Moveable magnet (1) Cardboard placement guide with fixed magnet (1) Cable clips (3) Install Manual (1) 3M Tape for additional hold

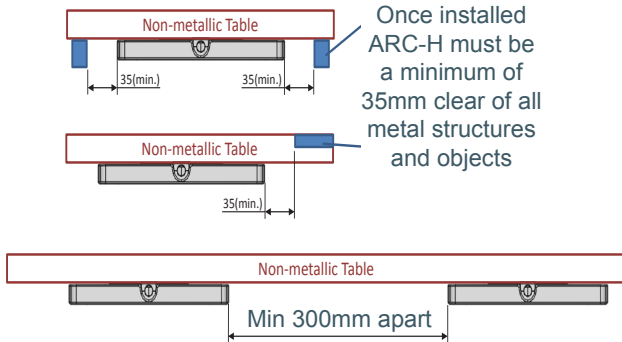

Once installed ARC-H must be a minimum of 35mm clear of all metal structures and objects



Pyrography files available on request



40mm & 80mm desktop decals - choose your size and colour

INSTALLATION: ARC-H has a wireless range 15-30mm, no routing is required for thicknesses up to 25mm.



Position your wireless charging marker decal on the desk where you would charge your phone. Under desk / surface must be clear of framing, metal objects and metal structures.



Remove the backing from the wireless decal marker and stick firmly onto the clean surface. Place the magnet provided in the center of the sticker.



Hold the top magnet firmly in place while aligning with the cardboard magnet template under the surface to find the correct position for the ARC-H. Use a pencil to mark the screw hole locations.



The charging coil is centered under the arc logo. This must be in alignment with the desk decal.

Use screws to secure the ARC-H wireless charger in place. Plug in the power supply and use cable clips to manage any loose cables. (ensure the arc logo is aligned with desktop decal marker)