

Application

Suitable for interior cavity door applications in residential and commercial environments.

Hangers come standard with a steel bracket and four nylon tyred wheels with precision bearings.

Panel Specification

Track System:	Cavity Run 60
For Individual Panels:	
Max Panel Weight	60kg
Max Panel Height	2400mm
Min Panel Thickness	19mm

Standard Sets and Packs

Sets comprise of top track, hangers, guide, spanner and timber screws.

Set No.	Panel width	Track Length
CR60-20/1	610mm to 915mm	2000mm
CR60-30/1	915mm to 1525mm	3000mm

Pack No.	
CR60-1PK	Fitting pack only, no track

Hardware Specification

Track:	60A
Material	Aluminium, Mill
Standard lengths	2000mm, 3000mm, 4000mm and 6000mm

Hangers (2 per panel):	608
-------------------------------	-----



Hanger has a nylon body and comes standard with zinc plated steel bracket and four nylon tyred wheels with chrome precision bearings.

Guide:	C155LS
Nylon guide for cavity panel applications.	


Spanner:	
Pressed steel zinc plated.	805-SPN to suit 608 Hanger

Accessories:	
Soft Close	60SCT
Suitable for panels up to 60kg.	


Cavity Buffer	C153B
Rubber buffer and fixing screw.	

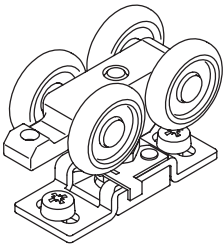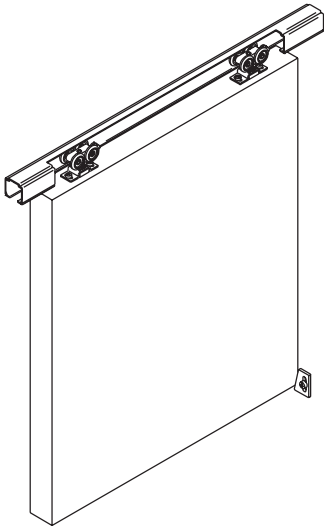

No. 608
HANGER

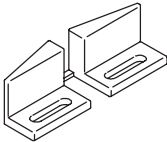

No. C155LS
CAVITY GUIDE




No. 805-SPN
SPANNER


ACCESSORY



No. C153B
CAVITY BUFFER

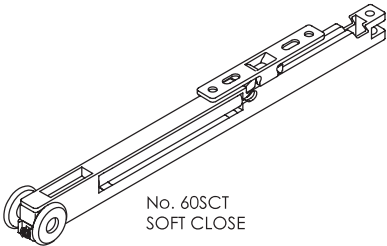

No. 60SCT
SOFT CLOSE

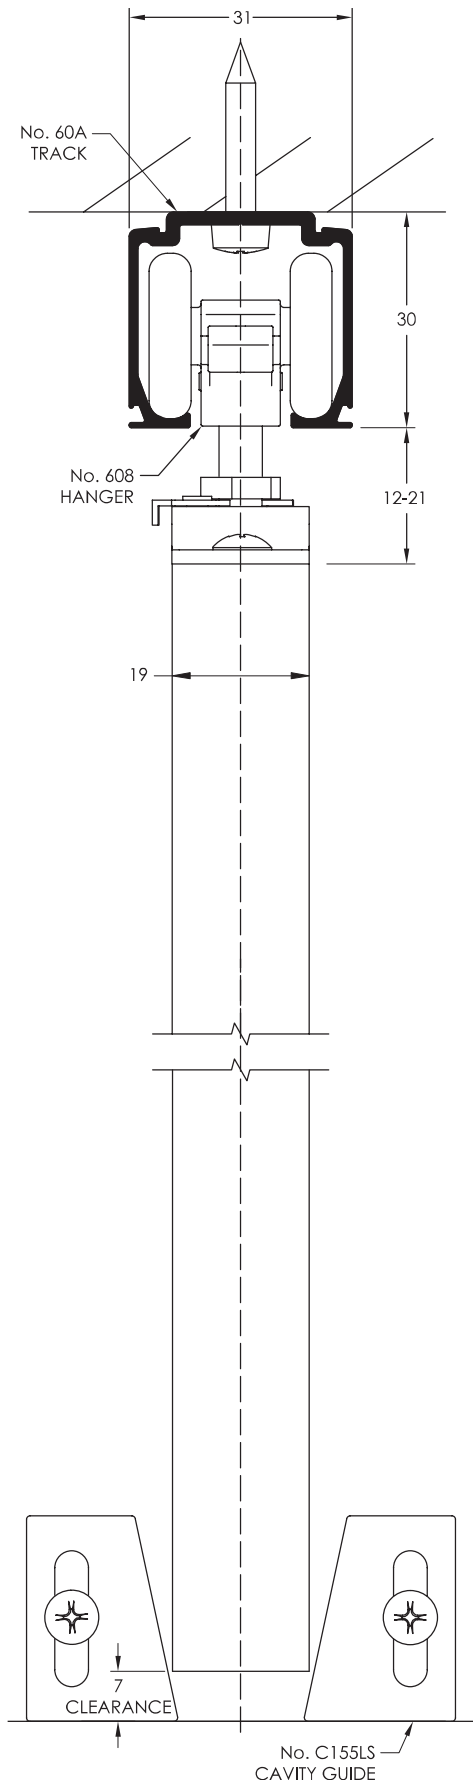

INSTALLATION INSTRUCTIONS

- 1 Prepare Hardware**
 Screw hanger bolts into hangers.
 Insert hangers into track.
- 2 Attach Hardware to Panel**
 Hanger mounting plates should be positioned centrally to panel thickness.
 Plates should be facing the same direction.
 Opening facing cavity opening.
- 3 Fix Track Parallel to Floor**
 Position 8g screws first 50mm in from each end and every 300mm between.
- 4 Fit Panel**
 With the latch on the mounting plates open, bring panel up to hangers and push hanger bolt into plate. Close latches when bolts are in the plates.
- 5 Adjust Panel**
 Screw bolt in or out of hanger to adjust panel height. Adjust height so panel is square.
- 6 Fit Guide**
 Locate at opening jamb. With door hanging plumb fix guides to either side of door.
- 7 Fit Soft Closes**
 Soft close - install as per INST60SCT.

