





MEDIUMFLEXIBLE FLAP

SUITABLE FOR:

MEDIUM SECURITY SCREEN PETWAY PET DOOR (PDM)

MEDIUM TIMBER PETWAY PET DOOR (PDMT)

MEDIUM GLASS PETWAY PET DOOR (PDMG)














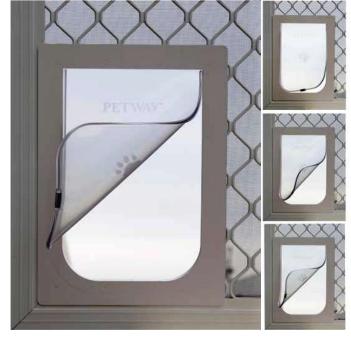







- 1. Unscrew top 4 screws and 2 side screws of fitted Petway Pet Door.
- 2. Spread frames apart to release existing flap.
- 3. Insert flexible flap up into the gap between the frames with the word **PETWAY** facing outside.
- 4. Check the polarity of the flap magnet is correct. If repelling reverse the flap.
- 5. Re-screw all screws (Do not over tighten screws).

WARNING: Wet Flea Treatment can stain the pet door flap, please ensure it is dry on your pet before using the pet door.













