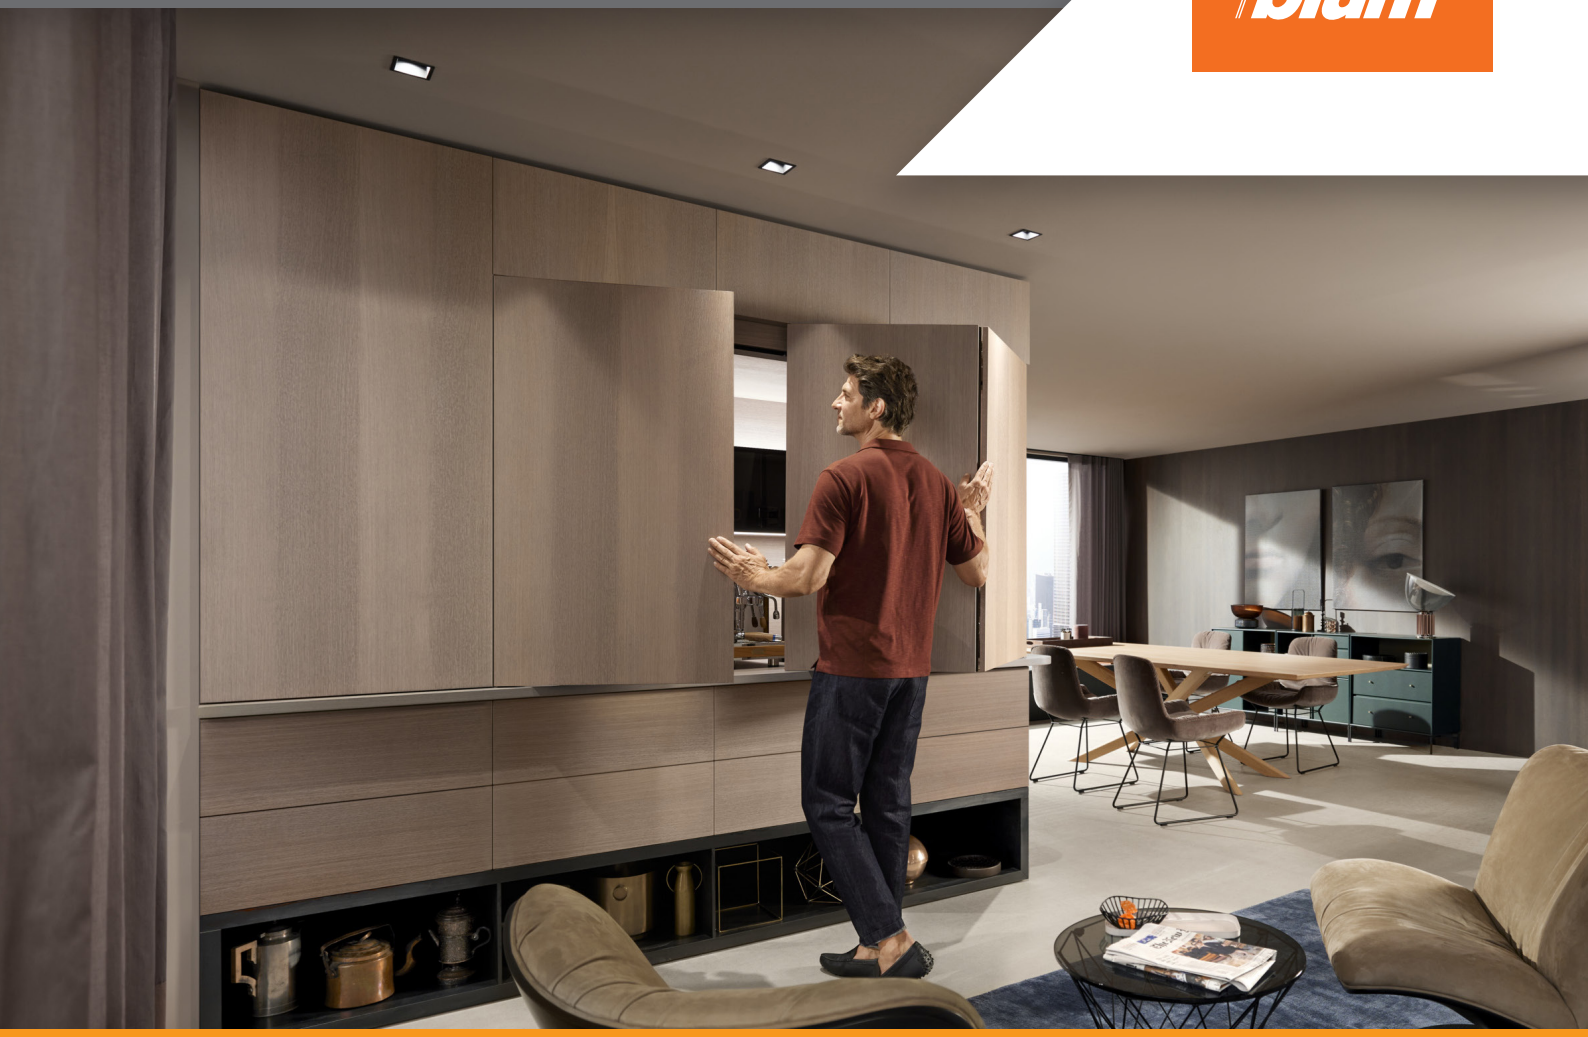

Blum REVEGO

› Pocket systems for new space concepts

LINCOLN® SENTRY

Proudly distributing Blum for 40 years

We are Lincoln Sentry

The cabinetmaker's choice for specialty hardware

From our humble beginnings in Brisbane 40 years ago, Lincoln Sentry's reputation has continued to grow and evolve as one of Australia's leading distributors of world class speciality hardware and smart solutions to the commercial, new home and renovation sectors.

We love the trade. It's why we're so passionate about the industry and the partnerships we have with you - the expert craftsmen and design specialists who transform ordinary spaces into the extraordinary.

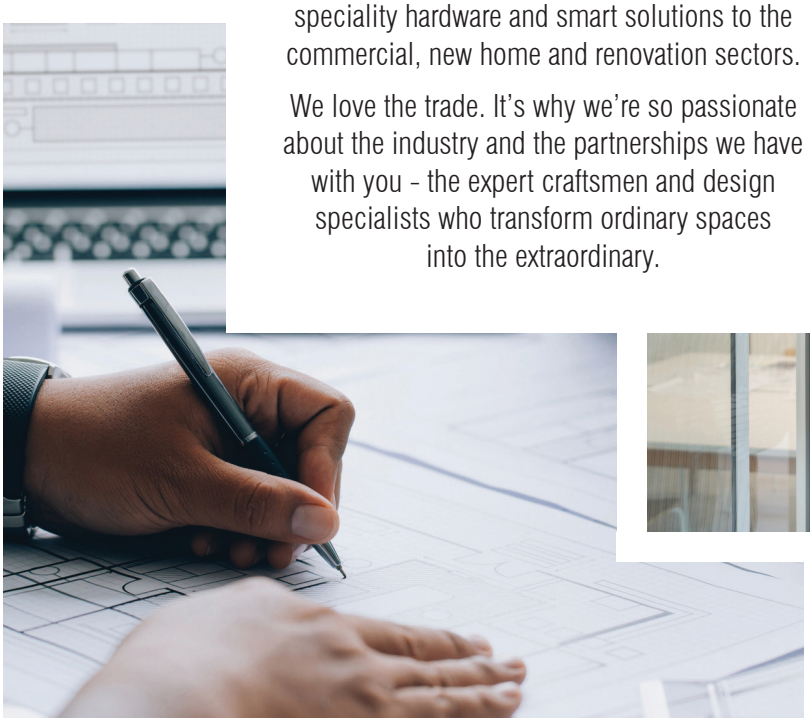

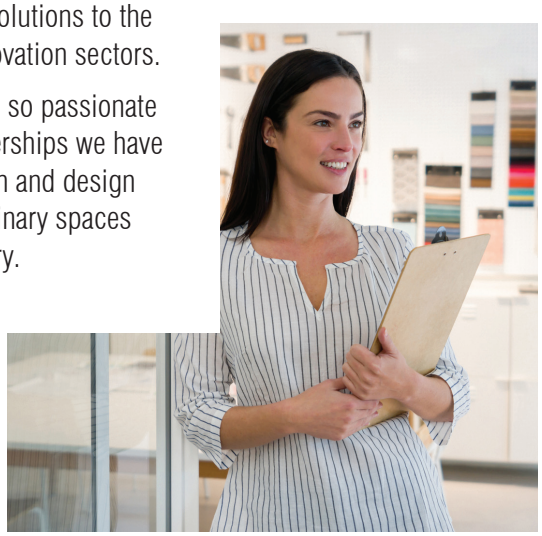

Extensive product range

We aim to help our customers deliver quality work, backed by reliable and innovative hardware and solutions. Offering a diverse product portfolio sourced from across the globe and locally within Australia, we are committed to providing high quality specialty hardware solutions that help you create exciting spaces that shape the way people interact with where they work, live and play.

Expert support

Whether you're a cabinetmaker, shopfitter, joiner or designer, our dedicated National Customer Support Centre (NCSC) and technical specialists are the experts you can count on. Problem solvers at heart, their expert knowledge and advice enables you to bring your smart and functional ideas to life.

With boots on the ground in 23 locations and counting, we're local and always close by to assist you with the best products, technical advice and support on offer.

And, our Online Store at www.lincolnsentry.com.au brings us even closer with fast access to Australia's largest range of cabinet hardware products from wherever you are, whenever it's convenient for you.

GERMAN DESIGN AWARD WINNER 2022

reddot winner 2022

DESIGN AWARD 2022

More and more people are merging their kitchen, dining, living and working space. This trend places high demands on modern living concepts. Pocket systems make it possible to quickly, easily and intuitively open up entire spaces when needed, and close them off again when not in use. This gives you completely new design possibilities for a wide range of applications.

Blum's new product category is the solution for optimum space utilisation:
REVEGO pocket systems is a unique slide - in door system with sophisticated technology integrated into its own narrow cabinet - the pocket.

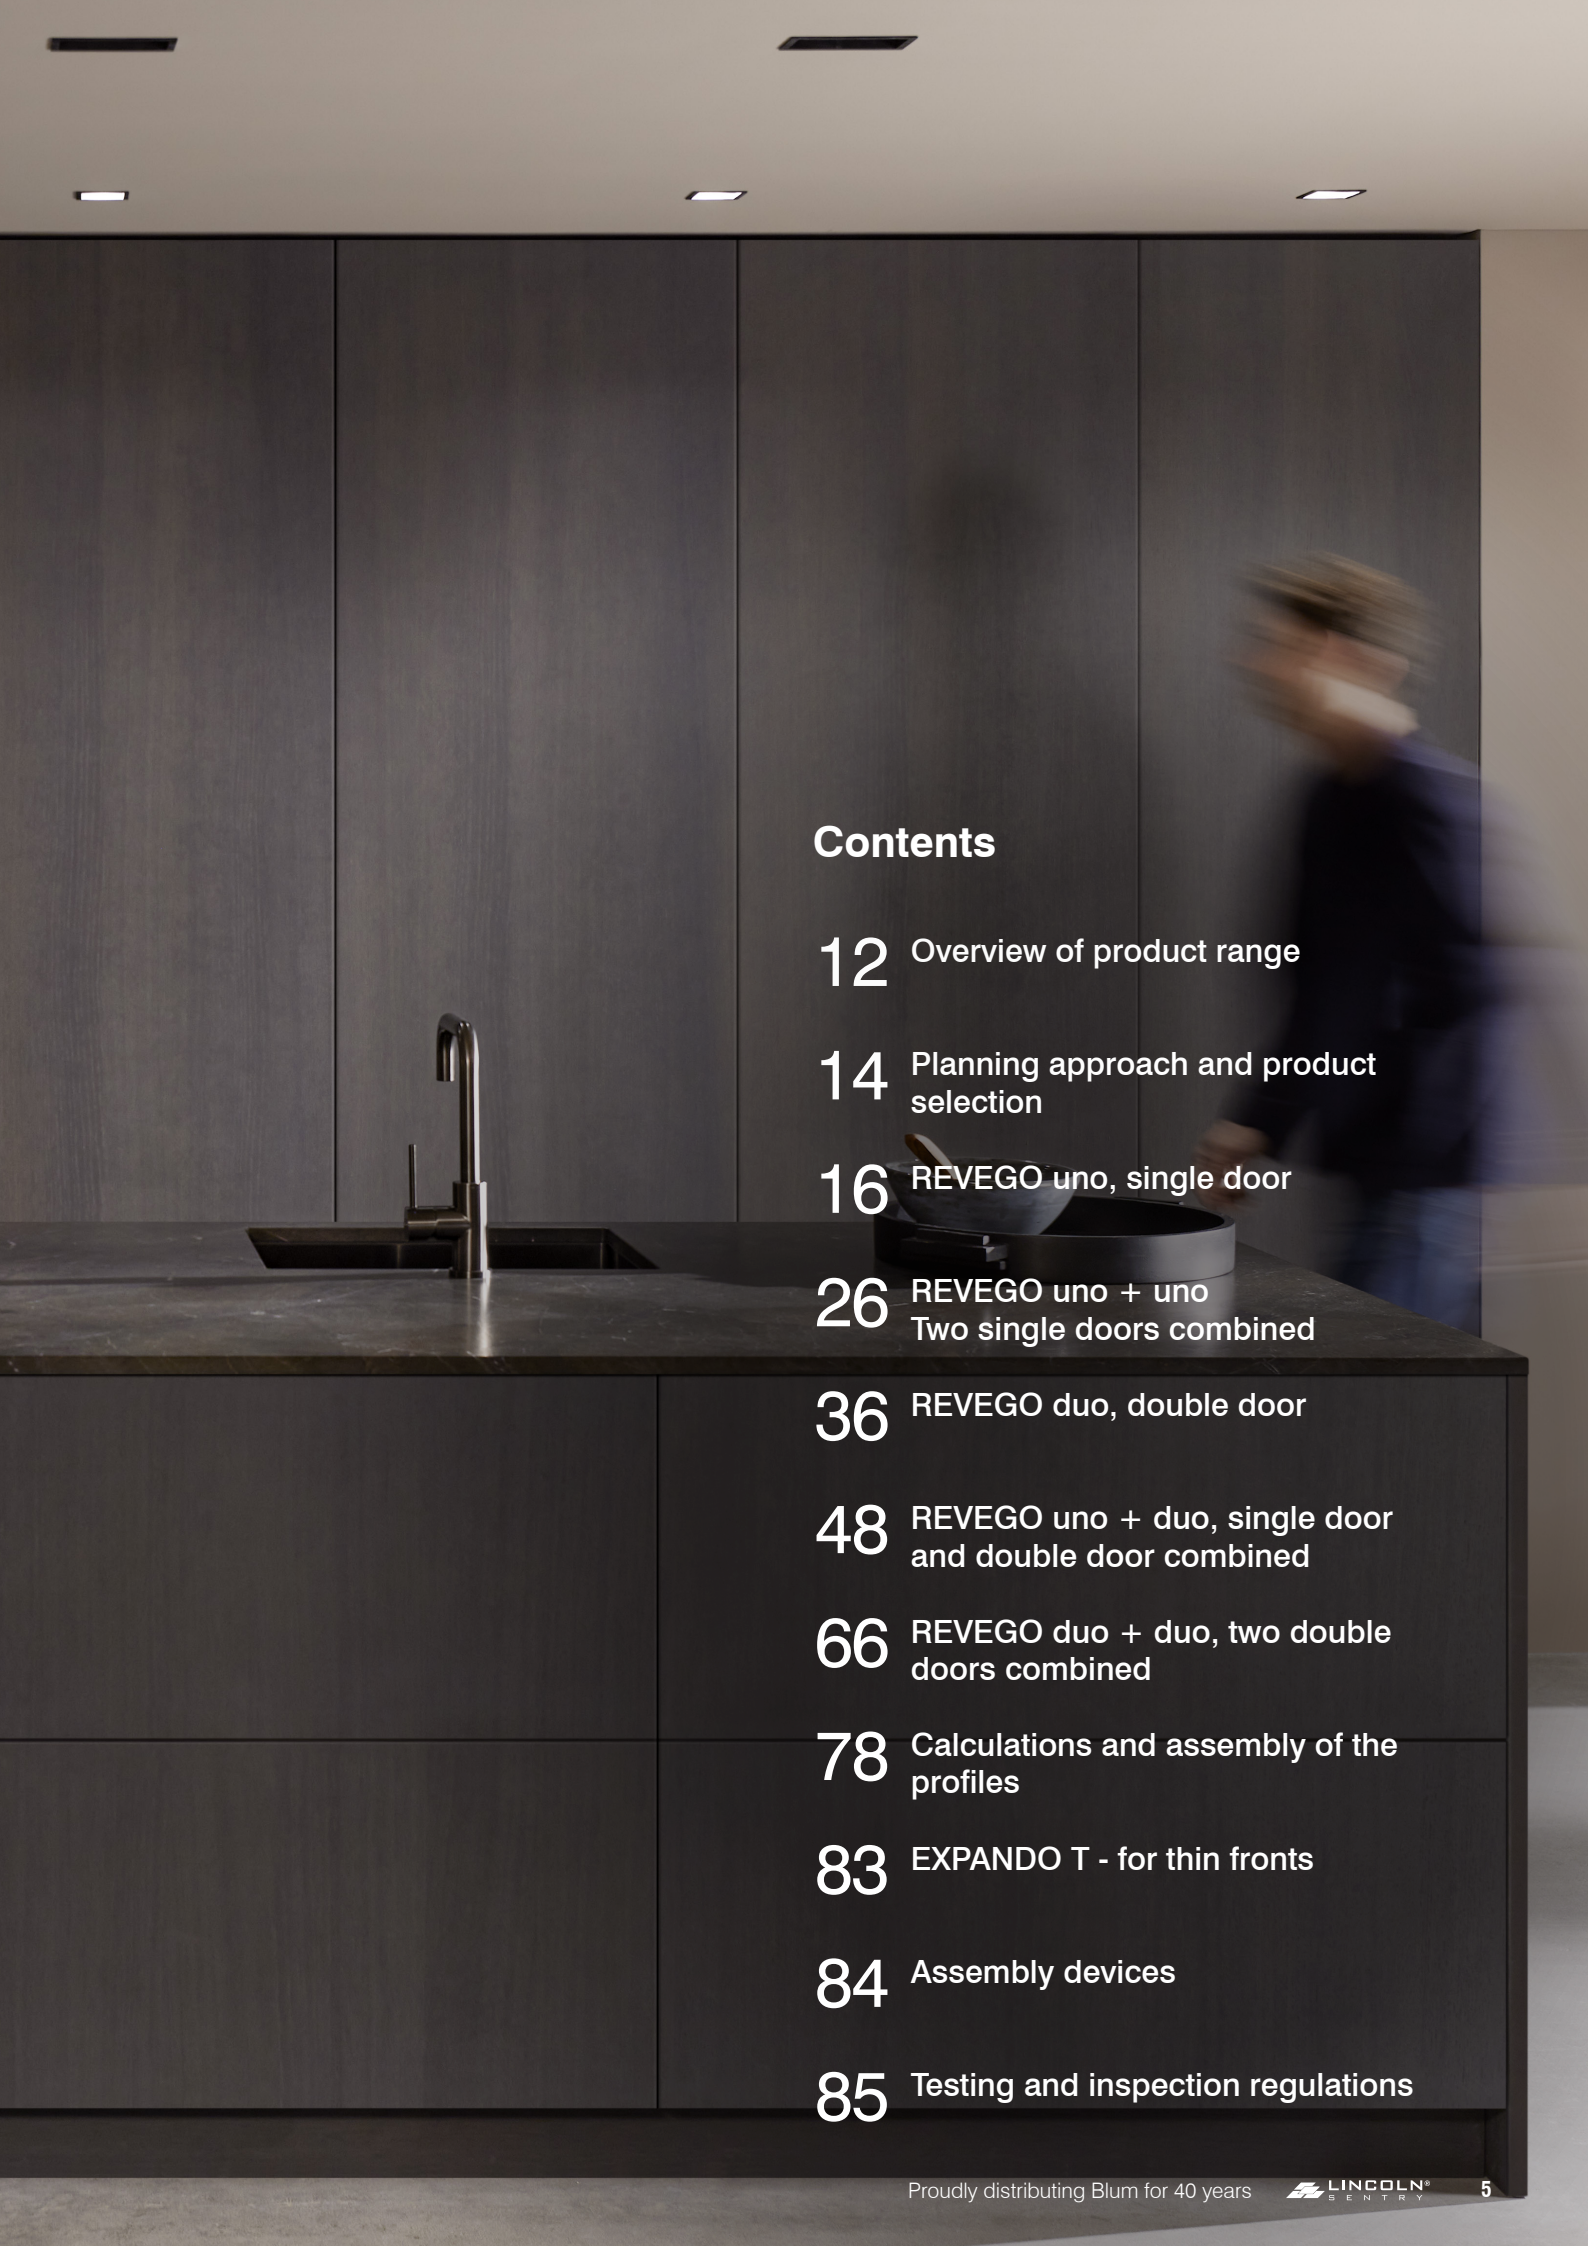

Contents

12 Overview of product range

14 Planning approach and product selection

16 REVEGO uno, single door

26 REVEGO uno + uno
Two single doors combined

36 REVEGO duo, double door

48 REVEGO uno + duo, single door and double door combined

66 REVEGO duo + duo, two double doors combined

78 Calculations and assembly of the profiles

83 EXPANDO T - for thin fronts

84 Assembly devices

85 Testing and inspection regulations

Efficient manufacturing

REVEGO comes with all essential components thanks to the unique pocket construction with fully integrated fittings. You can easily pre - assemble pocket systems in your workshop or premises and transport them to end users in a carefully packaged state. This makes installation on site easier and increases efficiency.

Download on the App Store

Get a life - like experience of REVEGO.
Download the AR application and get started:

www.blum.com/rev3

Rapid on - site installation

Final assembly on site is simplicity itself: set up, align and mount the pockets; install the doors and track; make adjustments to the gap layout - and that's it! The 3 - dimensional adjustment options are easily accessible and intuitive to use. And thanks to the integrated service interface, it is really simple to remove the fittings - even from built - in furniture.

Easy planning

Standardised pocket widths of 100mm for REVEGO uno single door and 150mm for REVEGO duo double door give you the freedom to design the furniture around the pocket exactly as you wish. Single and double door applications can be individually combined.

The ultimate in convenience

No need for handles thanks to TIP - ON motion technology; users can open cabinet doors with a single touch and slide them away completely into the pocket. To close off the space, the user simply presses the door to release it from the pocket and then presses it again to elegantly conceal the entire area.

REVEGO at a glance

- Fast and easy installation thanks to pre - mounted fittings
- Unique pocket construction with fully integrated technology
- Easy planning thanks to predefined pocket widths
- Enhanced ease and mesmerising motion
- Individual design possibilities through the combination of REVEGO uno (1) and REVEGO duo (2)
- Different nominal lengths allow you to adapt applications to the installation situation
- Smooth opening and closing without a handle thanks to integrated TIP - ON motion technology
- Can be designed with or without plinth option or as a worktop - mounted cabinet
- Precise and easily accessible 3 - dimensional adjustment options
- Full overlay fronts completely conceal the pocket when closed for a perfect gap layout
- Pocket systems can be used in all living areas
- Suitable for systems to conceal runs of cabinets or walk - in solutions such as dressing rooms or pantries, etc.
- Fittings can be easily removed (even from built - in furniture) thanks to an integrated service interface

Use REVEGO uno single doors on their own, or combine them with REVEGO duo double doors as desired.
The full overlay fronts with a height of up to 2980mm conceal the pocket completely when closed.

It is easy to implement solutions with internal cabinetry or walk - in solutions such as dressing rooms or pantries.

From a front height of 1130mm, REVEGO can also be implemented as a worktop - mounted cabinet.

Easy product selection

Our Product Configurator makes it easy for you to choose your products and provides checked parts lists, planning information and CAD data.

www.blum.com/rev1

Our services at a glance

Our services support you every step of the way - from planning and design through to manufacturing and assembly. Take advantage of our tried - and - tested and user - friendly services for your projects with REVEGO.

Concept, planning and product selection

Our Product Configurator will help you select the right products quickly and efficiently. It gives you checked parts lists and planning information, as well as accurate production drawings.

Design

You can export REVEGO projects in various CAD formats for use in your own design software. Together with selected partners, we have also established interfaces for the straightforward transfer of data and completion of your project in your design software.

Ordering

Simply transfer your parts lists from the Product Configurator directly to the web shop of selected distributors. Your REVEGO configurations are easily saved to "My projects", where you can then manage your customer projects.

Manufacturing

Speed up your production process with our Product Configurator. Transfer the planning results to MINIPRESS top with EASYSTICK (using BXF) or directly to your CNC machine. In order to transfer the data to your CNC machine, you'll receive specially prepared CAM data (CAM DXF or complete WOP drilling programs) in the Product Configurator.
This makes production processes on the CNC machine even quicker and easier.

Find out more about our digital services:

www.blum.com/pcfg1

Register now free of charge to take advantage of the digital services.

www.blum.com/esvs1

Overview of applications and planning notes

REVEGO uno - single door right or left

Page 14

- Number of fronts: 1
- Installation width: 450 to 900mm
- Internal width within the application: 350 to 800mm
- Front width: 442 - 898mm

REVEGO uno + uno - two single doors combined

Page 24

- Number of fronts: 2
- Installation width: 900 to 1800mm
- Internal width within the application: 700 to 1600mm
- Front width: 442 - 898mm

REVEGO duo - double door right or left

Page 34

- Number of fronts: 2
- Installation width: 900 to 1500mm
- Internal width within the application: 750 to 1350mm
- Front width: 442 - 748mm

Overview of applications and planning notes

REVEGO uno + duo - single door and double door combined

Page 46

- Number of fronts: 3
- Installation width: 1350 to 2400mm
- Internal width within the application: 1100 to 2150mm
- Front width: 442 - 748mm and 442 - 898mm

REVEGO duo + duo - two double doors combined

Page 64

- Number of fronts: 4
- Installation width: 1800 to 3000mm
- Internal width within the application: 1500 to 2700mm
- Front width: 442 - 748mm

Watch assembly video:
www.blum.com/rev2

Planning approach and product selection

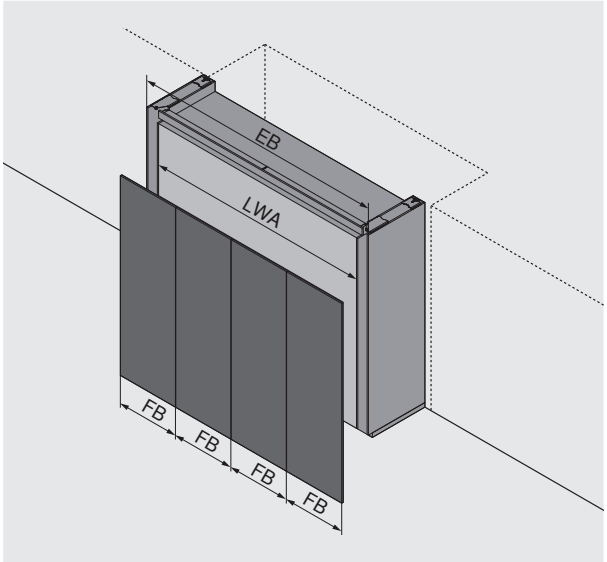

EB	Installation width
LWA	Internal width within the application
FB	Front width

Niche installation

Planning approach from outside moving inward with fixed installation width EB for the entire application. The space available determines the installation width EB and is the decisive factor for the number of fronts, front widths FB and thus for the choice of application. The fittings and cabinet dimensions within the application can be determined in the next step.

1.	2.	3.
What recess width is available for the application?	Determine the possible number of fronts and front widths FB based on the installation width EB.	The pocket dimensions, front protrusion FU and internal dimensions can now be defined on the planning pages of the respective application, and additional fittings can be selected.
The recess width is the installation width EB for the application.	This will determine the type of application.	

Free - standing installation

Planning approach from the inside moving outward with focus on the cabinet width KB and cabinetry within the application. The cabinetry to be concealed is the decisive factor for the potential number of fronts, front widths FB and thus for the choice of application. The installation dimensions and fittings are determined in the next step.

1.	2.	3.
What is the cabinet width KB that needs to be concealed?	Determine the possible number of fronts and front widths FB based on the internal width within the application LWA.	The pocket dimensions and front protrusion FU can now be defined on the planning pages of the respective application, and additional fittings can be selected.
The cabinet width KB is the internal width within the application LWA.	This will determine the type of application and its installation width EB.	

Front width FB and number of fronts

Planning approach with pre - defined front widths FB and number of fronts. The pre - defined front width FB and the number of fronts determine the choice of application and are the decisive factor for the installation width of the entire application. The fittings and cabinet dimensions within the application can be determined in the next step.

1.	2.	3.
What front width FB and what number of fronts were selected?	The type of application and desired front width FB plus the side gaps determine the installation width.	The pocket dimensions, front protrusion FU and internal dimensions can now be defined on the planning pages of the respective application, and additional fittings can be selected.
The number of fronts defines the type of application.		

Planning approach and product selection

Min. distance

REVEGO uno

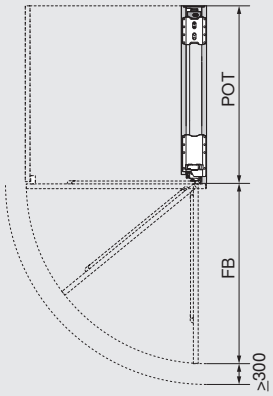

REVEGO duo

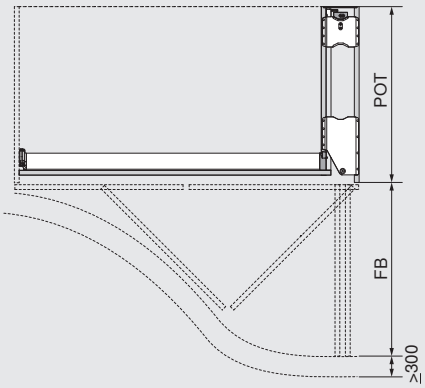

A minimum distance to the nearest element in front of the pocket must be kept free for safety reasons!

FB + min. 300mm

FB	Front width
POT	Pocket depth

Front protrusion FU

The minimum front protrusion results from the combination of nominal length, front width and the TIP - ON trigger path (AW) when using standard nominal lengths (pocket profile set with TIP - ON). By cutting the profiles to size, the front protrusion (FU) can be customised (min. FU = 7mm).

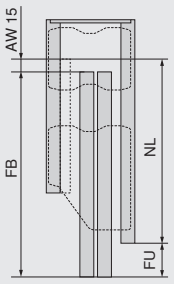

Example

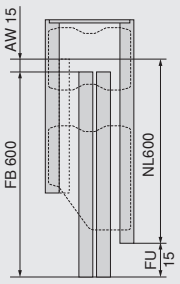

FU = FB + AW - NL	
AW	TIP - ON trigger path
FB	Front width
FU	Front protrusion
NL	Nominal length

Depth requirement

The depth requirement is the pocket depth (POT) and is determined by the nominal length + 100mm, plus the pocket back.

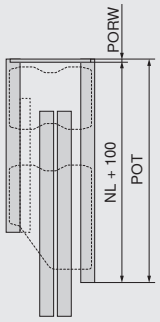

NL	Nominal length
PORW	Pocket back
POT	Pocket depth

Note

- The internal dimensions within the application (internal width | internal height | internal depth) define the maximum space available for internal cabinetry
- Design the widest front first for combined applications
- The manual operating force is less than 70 N according to the durability test
- Drilling patterns, cut - to - size dimensions and detailed parts lists can be found in the Product Configurator

Assembly

- You will need a CNC machine or MINIPRESS top with EASYSTICK from Blum to machine the wooden parts
- Please note that both horizontal drillings and additional wood machining (e.g. a track cut - out) will be needed
- We recommend using the drilling template for REVEGO for the horizontal drillings
- See appendix for calculation and assembly information for cutting profiles to size

For more safety information, please go to:

www.blum.com/rev4

REVEGO uno | Single door

REVEGO uno - single door right or left

Space requirement			
Installation dimensions (mm)	**Installation width EB**	**Installation height EH**	**Installation depth ET**
	450 - 900	1155 - 3012	from 573
Internal dimensions within the application (mm)	**Internal width within the application LWA**	**Internal height within the application LHA**	**Internal depth within the application LTA**
	up to 800	up to 2999	from 518
Pocket dimensions (mm)	**Pocket width POB**	**Pocket height POH**	**Pocket depth POT**
	100	1142 - 2999	from 553
Front dimensions (mm)	**Front width FB**	**Front height FH**	**Front thickness FD**
	442 - 898	1130 - 2980	18 - 26
Front weight FG	up to 35 kg per front		

Overview

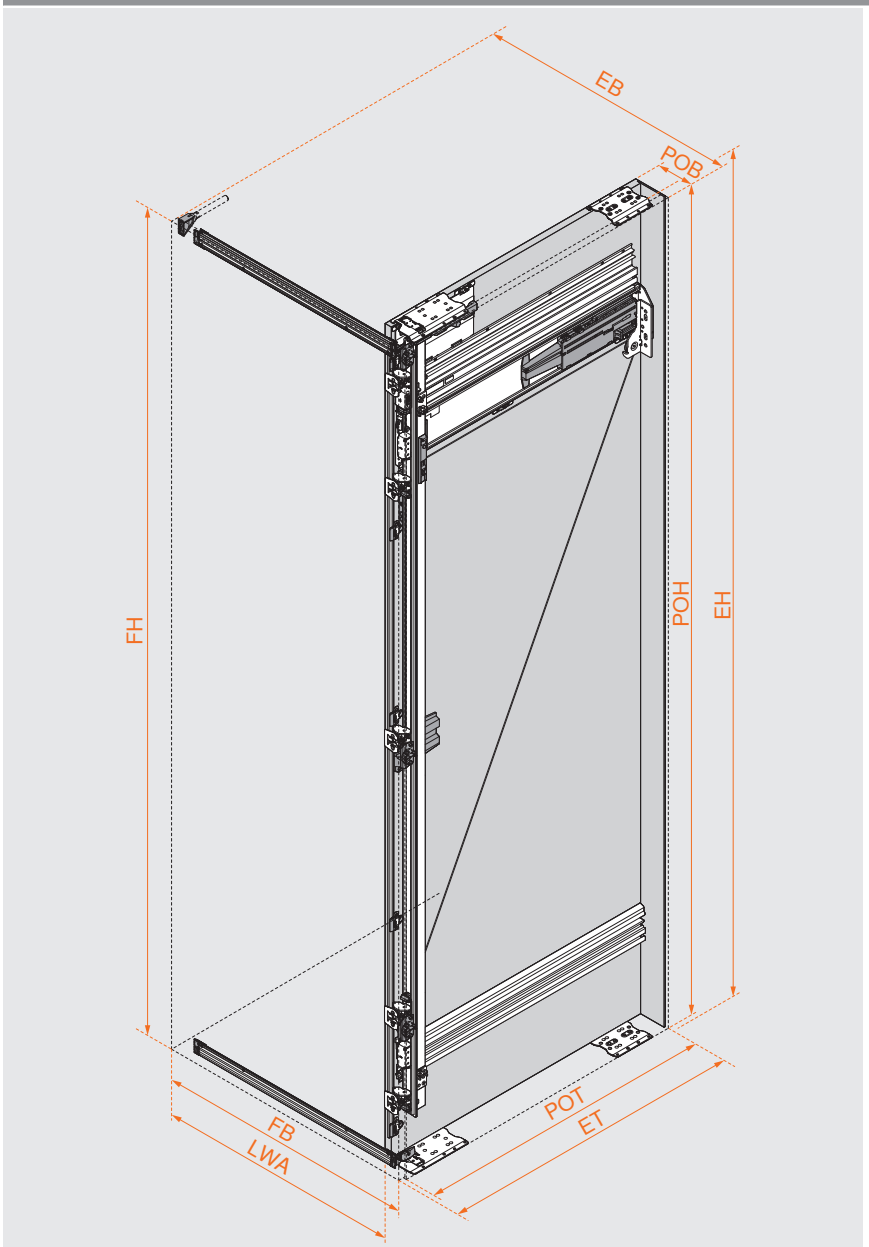

Fittings selection made easy

It is easy to work out the fittings and drilling positions you need using the Product Configurator.

With every product configuration, you will receive manufacturing drawings, cutting lists for wooden parts and fittings, 3D CAD data for your design software, as well as CAM programs including drilling information for direct machining on your CNC machine, in addition to the checked parts list.

Enter the web code in the Product Configurator, click on the short URL or scan the QR code.
Don't have login information for digital services yet? Register here and get access free of charge.

Web code **DQIU7Y**

Product Configurator
www.blum.com/rev8

Assembly and adjustment
www.blum.com/rev5

REVEGO uno | Single door

Component overview

Pocket

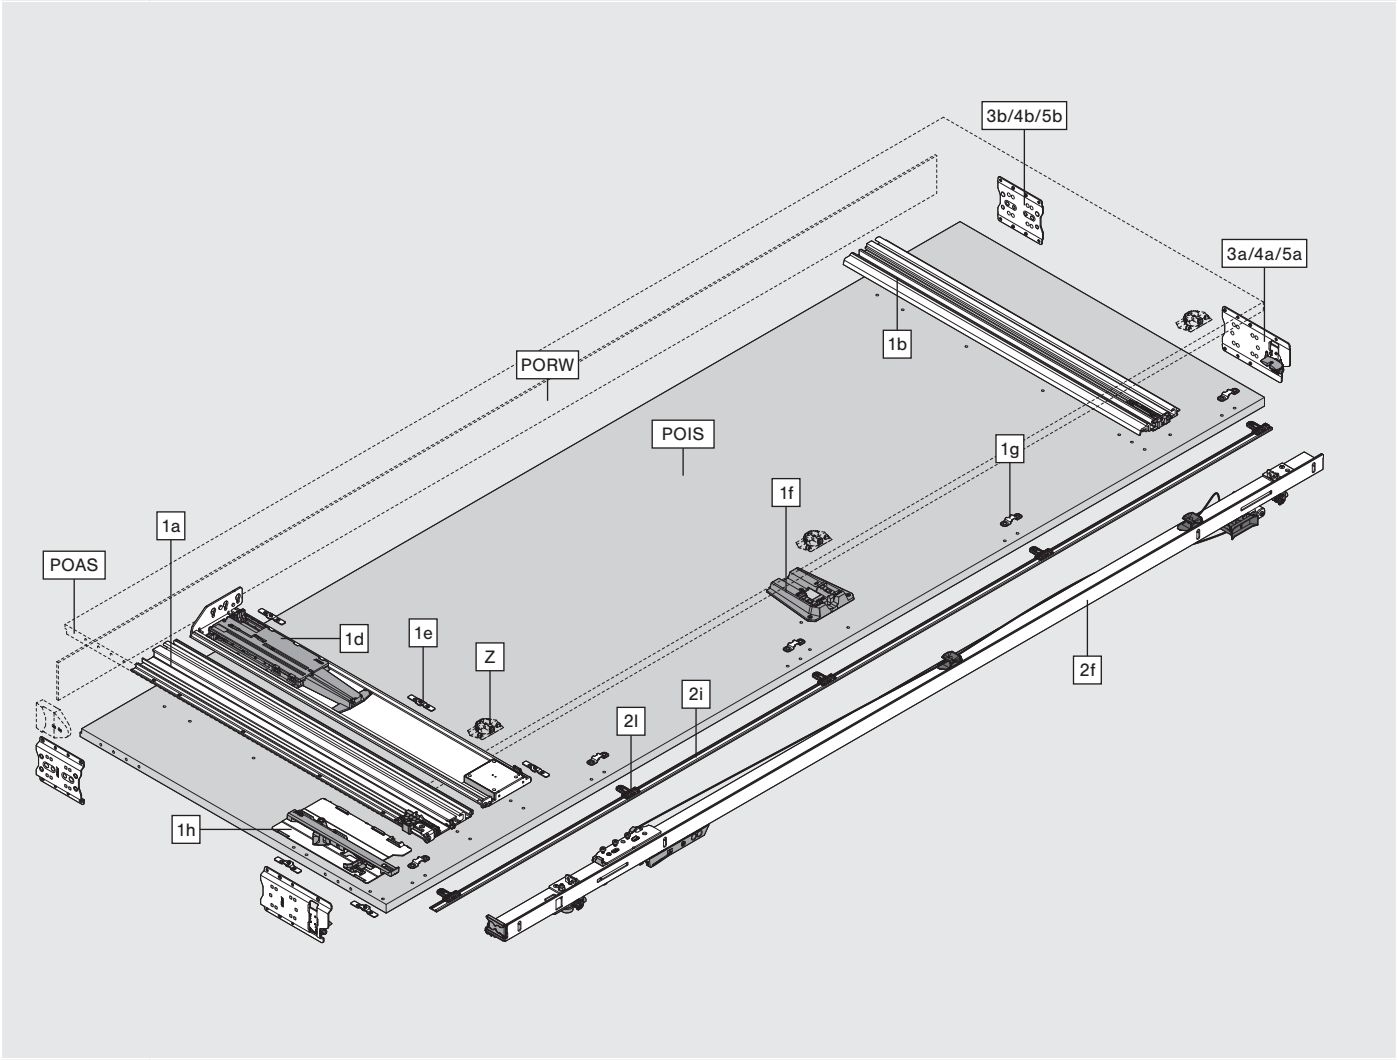

Consisting of:	
1a	Top pocket profile
1b	Bottom pocket profile
1d	TIP - ON unit pocket
1e	Fixing clips
1f	BLUMOTION unit pocket
1g	Attachment for pocket cover strip
1h	BLUMATIC unit
2f	Hinge bracket
2i	Pocket cover strip
2l	Mounting for pocket cover strip
3a/4a/5a	Front pocket connector
3b/4b/5b	Rear pocket connector
Z	Scuff guard
POAS	External pocket side
POIS	Internal pocket side
PORW	Pocket back

REVEGO uno | Single door

Component overview

Front

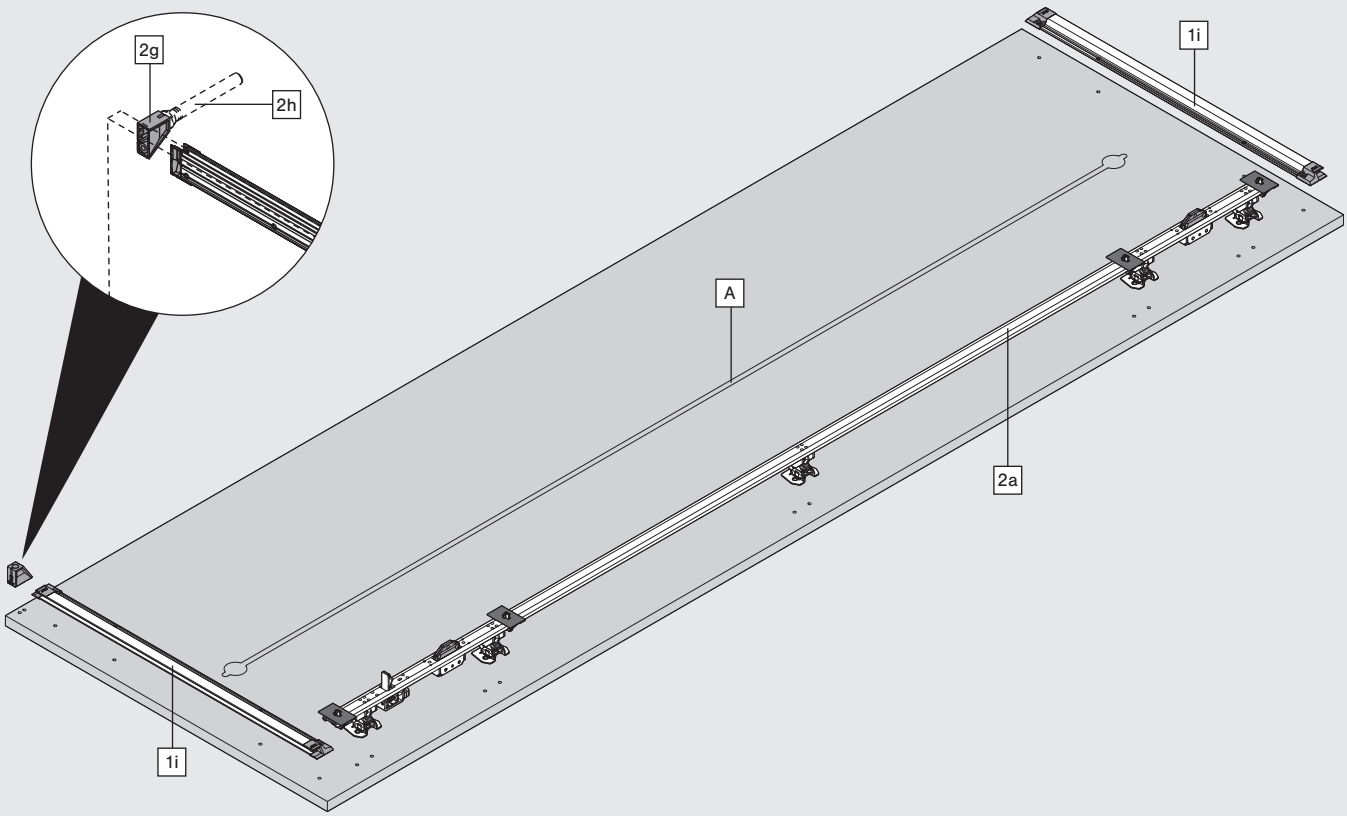

Consisting of:	
1i	Door stabiliser
2a	Hinge strip
2g	TIP - ON spacer
2h	TIP - ON incl. catch plate

A We recommend at least one alignment fitting with a maximum installation height of 3mm.
Alignment fittings with a height of more than 3mm must not be used in the pocket.

REVEGO uno | Single door

Ordering information

1	Pocket profile set with TIP - ON		Blum No		Code	
	Nominal length NL (mm)	Min. pocket depth POT* (mm)	Left	Right	Left	Right
	450	550	801P450E.L3	801P450E.R3	7116404	7116405
	500	600	801P500E.L3	801P500E.R3	7116466	7116467
	600	700	801P600E.L3	801P600E.R3	7116468	7116469
	700	800	801P700E.L3	801P700E.R3	7116470	7116471
	800	900	801P800E.L3	801P800E.R3	7116472	7116473

* Specification without pocket back. A back construction with a thickness of at least 3mm is required.
Pocket profiles and TIP - ON unit pocket can be shortened to any nominal length.

Consisting of:		
1a	1 x	Top pocket profile
1b	1 x	Bottom pocket profile
1d	1 x	TIP - ON unit pocket
1e	5 x	Fixing clips
1f	1 x	BLUMOTION unit pocket
1g	5 x	Attachment for pocket cover strip
1h	1 x	BLUMATIC unit
1i	2 x	Door stabiliser: runner profile incl. end cap, black anodised

2	Hinge bracket set with TIP - ON	Blum No		Code	
	Pocket height (mm)	Left	Right	Left	Right
	1142 - 1356	801T1140.L3	801T1140.R3	7116474	7116475
	1357 - 1506	801T1350.L3	801T1350.R3	7116476	7116477
	1507 - 1656	801T1500.L3	801T1500.R3	7116478	7116479
	1657 - 1806	801T1650.L3	801T1650.R3	7116480	7116481
	1807 - 1956	801T1800.L3	801T1800.R3	7116482	7116483
	1957 - 2106	801T1950.L3	801T1950.R3	7116484	7116485
	2107 - 2256	801T2100.L3	801T2100.R3	7116486	7116487
	2257 - 2406	801T2250.L3	801T2250.R3	7116488	7116489
	2407 - 2556	801T2400.L3	801T2400.R3	7116490	7116491
	2557 - 2706	801T2550.L3	801T2550.R3	7116492	7116493
	2707 - 2856	801T2700.L3	801T2700.R3	7116494	7116495
	2857 - 2999	801T2850.L3	801T2850.R3	7116496	7116497

Cover strips must be shortened to the required length

Consisting of:		
2a	1 x	Hinge strip, black
2f	1 x	Hinge bracket
2g	1 x	TIP - ON spacer
2h	1 x	TIP - ON incl. catch plate, black
2i	1 x	Pocket cover strip, black anodised
2l	3 - 5 x	Mountings for pocket cover strip
-	21 x	System screws for 1i, 2a and 2g, 6 x 14.5mm, black

REVEGO uno | Single door

Ordering information

Pocket connector set					
3	Application with plinth			Blum No	Code
	Pocket side thickness (mm)	Colour			
	15 - 19	Black		801V505B	**7115172**
Pocket connector top + bottom: POVH 10mm for 0 - 6mm gap					
POVH Pocket connector height					
Consisting of:					
3a	**2 x**	Front pocket connector			
3b	**2 x**	Rear pocket connector			

Pocket connector set						
4	Application with plinth		Blum No		Code	
	Pocket side thickness (mm)	Colour	Left	Right	Left	Right
	15 - 19	Black	801V605B.L1	801V605B.R1	**7115173**	**7115174**
Top pocket connector: POVH 10mm for 0 - 6mm gap						
Bottom pocket connector: POVH 3mm for gap from 7 - 13mm						
POVH Pocket connector height						
Consisting of:						
4a	**2 x**	Front pocket connector				
4b	**2 x**	Rear pocket connector				

Pocket connector set						
5	Worktop - mounted cabinet application		Blum No		Code	
	Pocket side thickness (mm)	Colour	Left	Right	Left	Right
	15 - 19	Black	801V705B.L3	801V705B.R3	**7116498**	**7116499**
Top pocket connector: POVH 10mm for 0 - 6mm gap						
Bottom pocket connector: POVH 3mm for gap from 3 - 6mm						
POVH Pocket connector height						
Consisting of:						
5a	**2 x**	Front pocket connector				
5b	**2 x**	Rear pocket connector				

REVEGO uno | Single door

Ordering information

Z	Accessories

	Scuff Guard	Blum No	Code
	For front thicknesses starting from 23mm	801ZA00S	7115175
	For front thicknesses less than 23mm, the scuff guard can be used as additional front protection		
Consisting of:			
3 x	External pocket side scuff guard (POAS)		

	Screws	Pack Qty	Blum No	Code
	6 x 14.5mm system screws, nickel plated	1,000	661.1450.HG	7115105
	6 x 14.5mm system screws, onyx black	1,000	661.1450.HG	7116554

	Pocket Connector	Blum No	Code
	Rear pocket connector, pocket connector height (POVH) 10mm	801V5002	7116576
Additional pocket connector for set - back plinth leg			

	EXPANDO T - for thin fronts	Blum No	Code
	EXPANDO T - single	70T4532T	7102466
EXPANDO T suitable for thin fronts - see page 83			
For front thicknesses less than 18mm, we recommend a trial application			
Screws are not included in the scope of delivery			

Alignment/adjustment fitting for distorted doors		Code
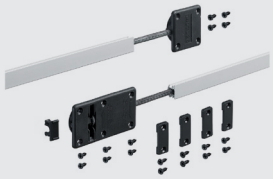	Alignment/adjustment fitting – Aluminium - For door / front thicknesses of 18-30mm. - Maximum door / front panel height 2600mm. - Length of the adjustment fitting 1990mm, can be shortened as required. - It is recommended that 2 vertical adjustment fittings are installed near the outer edge.	7113636
	Alignment/adjustment fitting – Plastic - For door / front panel thicknesses from 16mm. - Maximum door / front panel height 2600mm. - Length of the adjustment fitting 1990mm, can be shortened as required. - It is recommended that 2 vertical adjustment fittings are installed near the outer edge.	7113858

Please refer to the Lincoln Sentry website for installation instructions and drilling information.

REVEGO uno | Single door

Planning

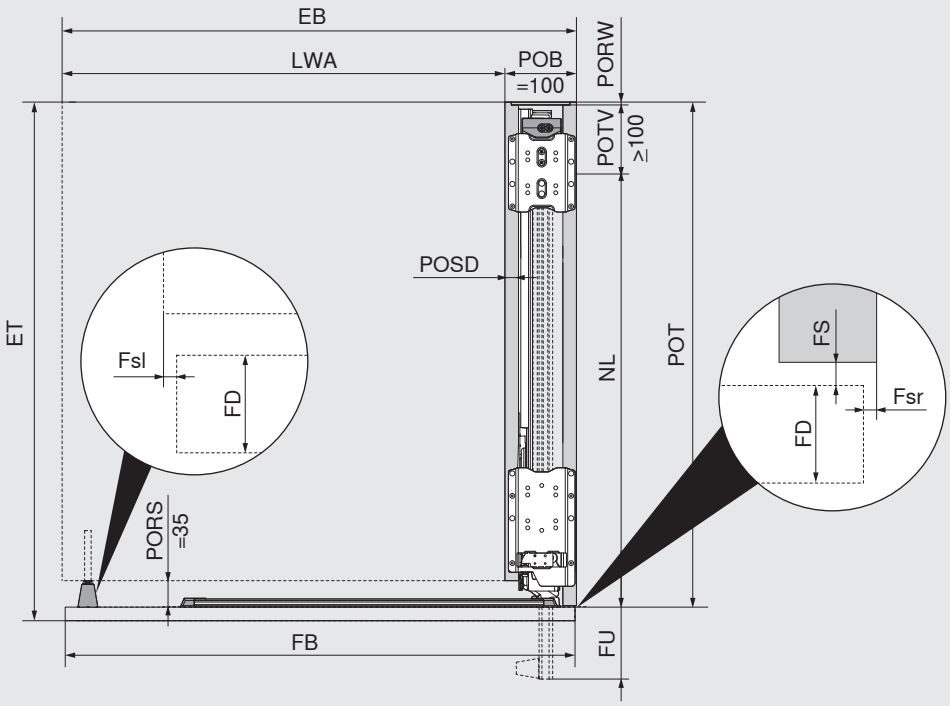

Installation depth/pocket depth
ET = POT + FS (2mm) + FD
Min. POT = NL + POTV (≥ 100mm) + PORW (≥ 3mm)
Installation width/internal width within the application
EB = LWA + POB (100mm)
FB = EB - Fsl - Fsr
Fsl/Fsr = 1.0 - 4.0mm
Max. NL = FB + 8mm
FU = FB - NL + 15mm
(min. FU = 7mm)
FD = 18 - 26mm

- By cutting the profiles to size, the front protrusion (FU) can be customised.
- To ensure optimum functionality, the fronts are at a slight angle inside the pocket.
- A partition side is required for a stand - alone application, or one adjacent to a worktop area.
- The internal width within the application determines the maximum width available for the internal cabinetry.
- For front thicknesses (FD) less than 18mm (possible depending on material/stability), we recommend a trial application.

EB	Installation width
ET	Installation depth
Fsl	Gap left
Fsr	Gap right
FB	Front width
FD	Front thickness
FS	Front gap
FU	Front protrusion
LWA	Internal width within the application
NL	Nominal length
POB	Pocket width
POT	Pocket depth
PORS	Pocket back cut
PORW	Pocket back
POSD	Pocket side thickness
POTV	Pocket depth loss

REVEGO uno | Single door

Planning

Minimum side gap

Pocket to pocket/adjacent cabinet

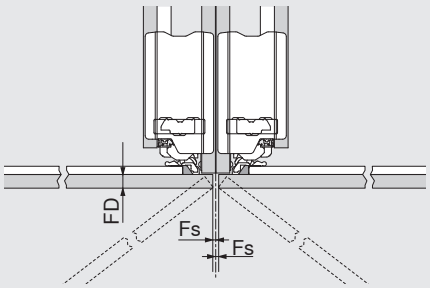

Pocket to wall/decor panel

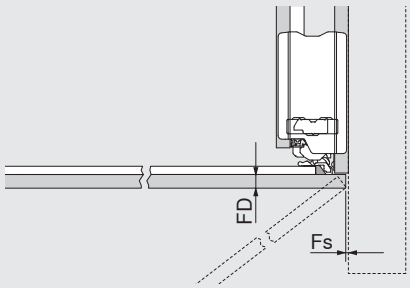

FD (mm)	Min. Fs (mm)
18 - 20	2
20.1 - 23	2.5
23.1 - 26	3

FD Front thickness
Fs Side gap

Installation height, front height

Application with plinth

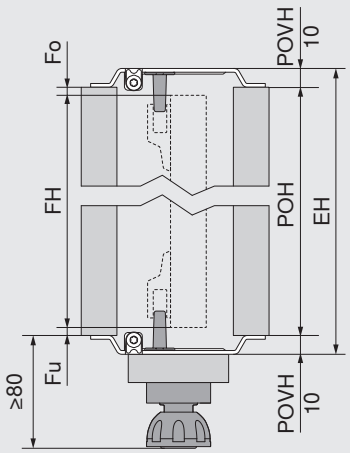

FH = POH - Fo - Fu

EH = POH + POVH top and bottom

POVH 10mm: gap 0 - 6mm

- Take into account that the pocket must be tilted during installation.
- Minimum distance to the next movable element above 3mm, for non - movable elements a front insertion space of 6mm must be taken into account
- The pocket connector height must be taken into account during planning
- Minimum plinth height 80mm

EH Installation height
Fo Top gap
Fu Bottom gap
FH Front height
POH Pocket height
POVH Pocket connector height

Application with set - back plinth

Additional rear pocket connector

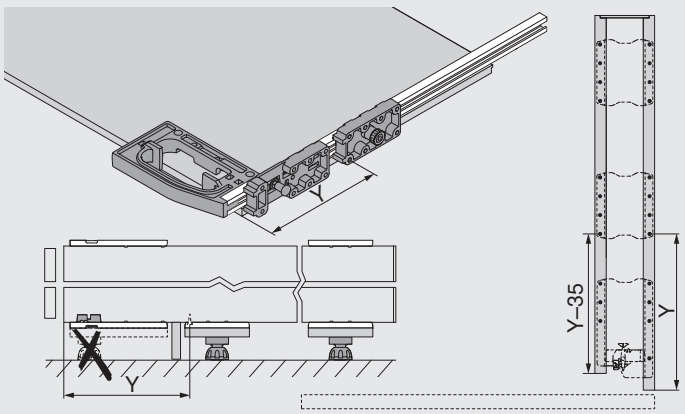

REVEGO uno | Single door

Planning

Installation height, front height

Application without plinth

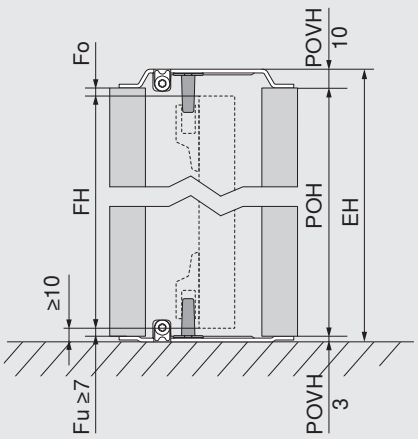

FH = POH - Fo - Fu

EH = POH + POVH top and bottom

POVH top 10mm: gap 0 - 6mm

POVH bottom 3mm: gap from 7 - 13mm

- Take into account that the pocket must be tilted during installation.
- Minimum distance from the bottom front edge to the floor or next element below is 10mm
- Minimum distance to the next movable element above 3mm,
  for non - movable elements a front insertion space of 6mm must be taken into account
- The pocket connector height must be taken into account during planning

EH	Installation height
Fo	Top gap
Fu	Bottom gap
FH	Front height
POH	Pocket height
POVH	Pocket connector height

Installation height, front height

Worktop - mounted cabinet application

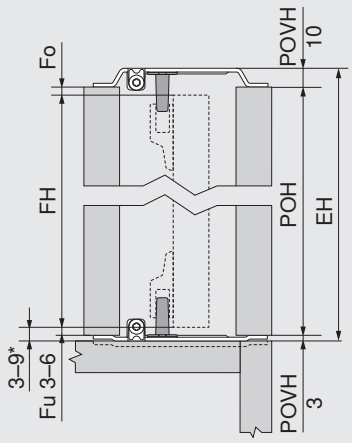

* If the distance between the front and the next element below is < 6mm, the pocket connector must be embedded in the worktop

FH = POH - Fo - Fu

EH = POH + POVH top and bottom

POVH top 10mm: gap 0 - 6mm

POVH bottom 3mm: gap from 3 - 6mm

- Take into account that the pocket must be tilted during installation.
- The minimum distance between the front and the next element below with a flush front
  (e.g. worktop is not visible) is 3mm
- The minimum distance between the front and the next element below with a protruding element
  (e.g. worktop is visible) is 6mm
- The minimum distance to the next movable element above is 3mm,
  for non - movable elements a front insertion space of 6mm must be taken into account
- A trial application is recommended in the edge areas
- The pocket connector height must be taken into account during planning
- The distance between the front and the next element above and below is made up of Fu or Fo + POVH

EH	Installation height
Fo	Top gap
Fu	Bottom gap
FH	Front height
POH	Pocket height
POVH	Pocket connector height

REVEGO uno | Single door

Planning

Max. front weights for worktop - mounted cabinets in kg per front

Front height FH (mm)	Front width FB (mm)						
	450	500	550	600	650	700	750
1130 - 1349	22	20	18	16	15	14	13
1350 - 1499	23	21	19	18	17	16	15
1500 - 1649	25	23	21	19	18	17	16
1650 - 1799	27	25	23	21	20	19	18

Note

- The max. front width when planning a worktop - mounted cabinet is 750mm
- The max. pocket height when planning a worktop - mounted cabinet is 1806mm

Internal height and internal depth within the application

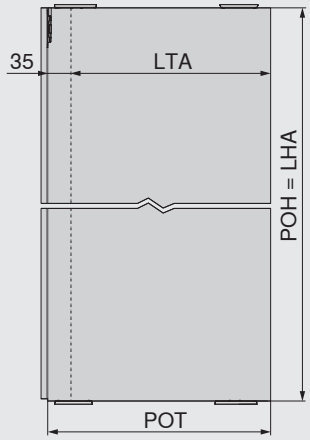

LHA = POH

LTA = POT - 35mm

- The internal height/internal depth within the application determines the maximum height/depth available for the internal cabinetry.

LHA	Internal height within the application
LTA	Internal depth within the application
POH	Pocket height
POT	Pocket depth

REVEGO uno + uno | Two single doors combined

REVEGO uno + uno - single door right and single door left

Space requirement			
Installation dimensions (mm)	**Installation width EB**	**Installation height EH**	**Installation depth ET**
	900 - 1800	1155 - 3012	from 573
Internal dimensions within the application (mm)	**Internal width within the application LWA**	**Internal height within the application LHA**	**Internal depth within the application LTA**
	up to 1600	up to 2999	from 518
Pocket dimensions (mm)	**Pocket width POB**	**Pocket height POH**	**Pocket depth POT**
	100	1142 - 2999	from 553
Front dimensions (mm)	**Front width FB**	**Front height FH**	**Front thickness FD**
	442 - 898	1130 - 2980	18 - 26
Front weight FG	up to 35 kg per front		

Overview

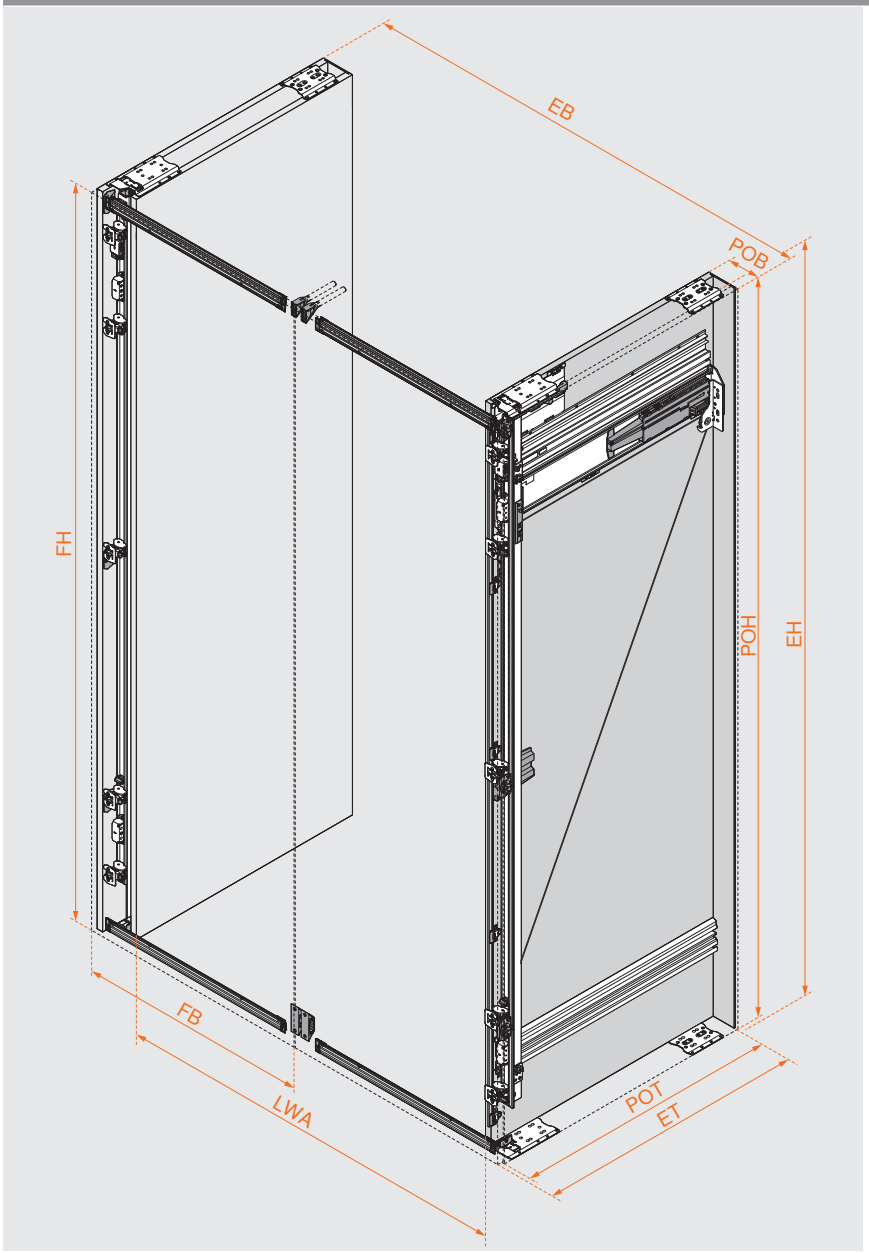

Fittings selection made easy

It is easy to work out the fittings and drilling positions you need using the Product Configurator.

With every product configuration, you will receive manufacturing drawings, cutting lists for wooden parts and fittings, 3D CAD data for your design software, as well as CAM programs including drilling information for direct machining on your CNC machine, in addition to the checked parts list.

Enter the web code in the Product Configurator, click on the short URL or scan the QR code.
Don't have login information for digital services yet? Register here and get access free of charge.

Web code **DQDN1C**

Product Configurator
www.blum.com/rev9

Assembly and adjustment
www.blum.com/rev5

REVEGO uno + uno | Two single doors combined

Component overview

Pocket

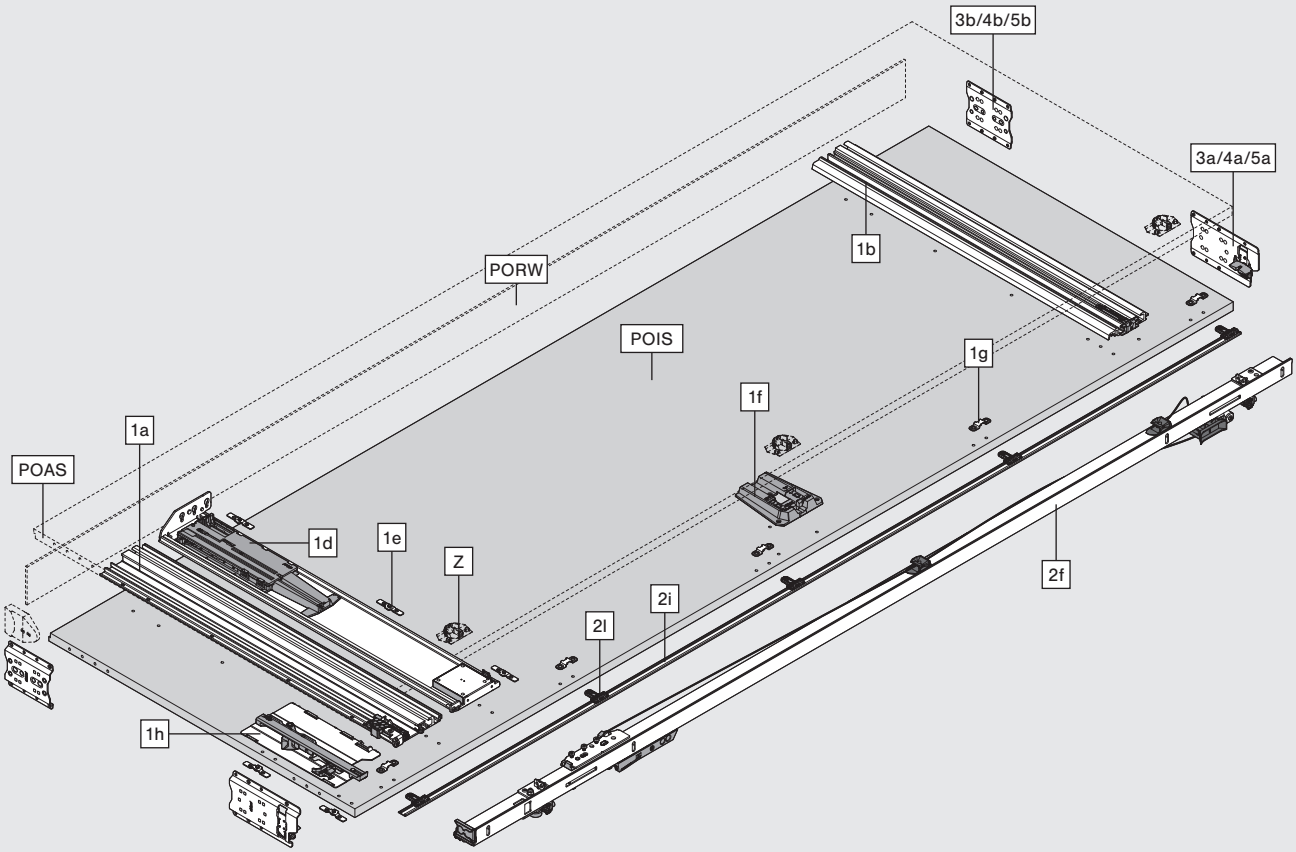

Consisting of:	
1a	Top pocket profile
1b	Bottom pocket profile
1d	TIP - ON unit pocket
1e	Fixing clips
1f	BLUMOTION unit pocket
1g	Attachment for pocket cover strip
1h	BLUMATIC unit
2f	Hinge bracket
2i	Pocket cover strip
2l	Mounting for pocket cover strip
3a/4a/5a	Front pocket connector
3b/4b/5b	Rear pocket connector
Z	Scuff guard
POAS	External pocket side
POIS	Internal pocket side
PORW	Pocket back

REVEGO uno + uno | Two single doors combined

Component overview

Front

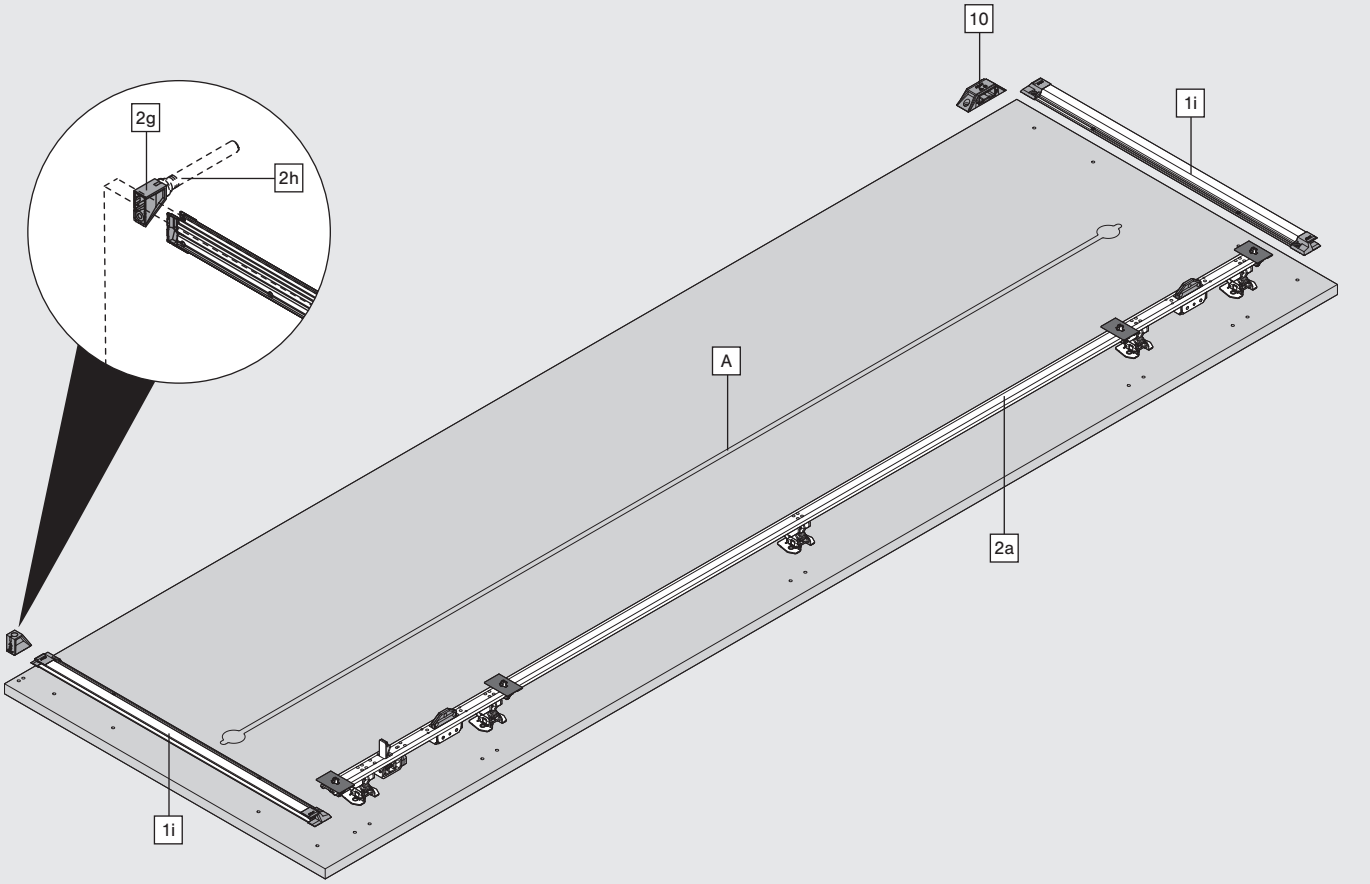

Consisting of:	
1i	Door stabiliser
2a	Hinge strip
2g	TIP - ON spacer
2h	TIP - ON incl. catch plate
10	Inter - door support

A We recommend at least one alignment fitting with a maximum installation height of 3mm.
Alignment fittings with a height of more than 3mm must not be used in the pocket.

REVEGO uno + uno | Two single doors combined

Ordering information

1	Pocket profile set with TIP - ON		Blum No		Code	
	Nominal length NL (mm)	Min. pocket depth POT* (mm)	Left	Right	Left	Right
	450	550	801P450E.L3	801P450E.R3	7116404	7116405
	500	600	801P500E.L3	801P500E.R3	7116466	7116467
	600	700	801P600E.L3	801P600E.R3	7116468	7116469
	700	800	801P700E.L3	801P700E.R3	7116470	7116471
	800	900	801P800E.L3	801P800E.R3	7116472	7116473

* Specification without pocket back. A back construction with a thickness of at least 3mm is required.
Pocket profiles and TIP - ON unit pocket can be shortened to any nominal length.

Consisting of:		
1a	1 x	Top pocket profile
1b	1 x	Bottom pocket profile
1d	1 x	TIP - ON unit pocket
1e	5 x	Fixing clips
1f	1 x	BLUMOTION unit pocket
1g	5 x	Attachment for pocket cover strip
1h	1 x	BLUMATIC unit
1i	2 x	Door stabiliser: runner profile incl. end cap, black anodised

Order set for each single door, 1x left and 1x right

2	Hinge bracket set with TIP - ON	Blum No		Code	
	Pocket height (mm)	Left	Right	Left	Right
	1142 - 1356	801T1140.L3	801T1140.R3	7116474	7116475
	1357 - 1506	801T1350.L3	801T1350.R3	7116476	7116477
	1507 - 1656	801T1500.L3	801T1500.R3	7116478	7116479
	1657 - 1806	801T1650.L3	801T1650.R3	7116480	7116481
	1807 - 1956	801T1800.L3	801T1800.R3	7116482	7116483
	1957 - 2106	801T1950.L3	801T1950.R3	7116484	7116485
	2107 - 2256	801T2100.L3	801T2100.R3	7116486	7116487
	2257 - 2406	801T2250.L3	801T2250.R3	7116488	7116489
	2407 - 2556	801T2400.L3	801T2400.R3	7116490	7116491
	2557 - 2706	801T2550.L3	801T2550.R3	7116492	7116493
	2707 - 2856	801T2700.L3	801T2700.R3	7116494	7116495
	2857 - 2999	801T2850.L3	801T2850.R3	7116496	7116497

Cover strips must be shortened to the required length

Consisting of:		
2a	1 x	Hinge strip, black
2f	1 x	Hinge bracket
2g	1 x	TIP - ON spacer
2h	1 x	TIP - ON incl. catch plate, black
2i	1 x	Pocket cover strip, black anodised
2l	3 - 5 x	Mountings for pocket cover strip
-	21 x	System screws for 1i, 2a and 2g, 6 x 14.5mm, black

Order set for each single door, 1x left and 1x right

REVEGO uno + uno | Two single doors combined

Ordering information

Pocket connector set					
3	Application with plinth			Blum No	Code
	Pocket side thickness (mm)	Colour			
	15 - 19	Black		801V505B	**7115172**
Pocket connector top + bottom: POVH 10mm for 0 - 6mm gap					
POVH Pocket connector height					
Consisting of:					
3a	**2 x**	Front pocket connector			
3b	**2 x**	Rear pocket connector			
Order 1x per single door					

Pocket connector set						
4	Application with plinth		Blum No		Code	
	Pocket side thickness (mm)	Colour	Left	Right	Left	Right
	15 - 19	Black	801V605B.L1	801V605B.R1	**7115173**	**7115174**
Top pocket connector: POVH 10mm for 0 - 6mm gap						
Bottom pocket connector: POVH 3mm for gap from 7 - 13mm						
POVH Pocket connector height						
Consisting of:						
4a	**2 x**	Front pocket connector				
4b	**2 x**	Rear pocket connector				
Order set for each single door, 1x left and 1x right						

Pocket connector set						
5	Worktop - mounted cabinet application		Blum No		Code	
	Pocket side thickness (mm)	Colour	Left	Right	Left	Right
	15 - 19	Black	801V705B.L3	801V705B.R3	**7116498**	**7116499**
Top pocket connector: POVH 10mm for 0 - 6mm gap						
Bottom pocket connector: POVH 3mm for gap from 3 - 6mm						
POVH Pocket connector height						
Consisting of:						
5a	**2 x**	Front pocket connector				
5b	**2 x**	Rear pocket connector				
Order set for each single door, 1x left and 1x right						

10	Assembly set for two single doors combined	Blum No	Code
	Colour		
	Black	800ZA02S	**7115176**
Consisting of:			
1 x	Inter - door support (right + left)		

REVEGO uno + uno | Two single doors combined

Ordering information

Z	Accessories

	Scuff Guard	Blum No	Code
	For front thicknesses starting from 23mm	801ZA00S	7115175
	For front thicknesses less than 23mm, the scuff guard can be used as additional front protection		
Consisting of:			
3 x	External pocket side scuff guard (POAS)		

	Screws	Pack Qty	Blum No	Code
	6 x 14.5mm system screws, nickel plated	1,000	661.1450.HG	7115105
	6 x 14.5mm system screws, onyx black	1,000	661.1450.HG	7116554

	Pocket Connector	Blum No	Code
	Rear pocket connector, pocket connector height (POVH) 10mm	801V5002	7116576
Additional pocket connector for set - back plinth leg			

	EXPANDO T - for thin fronts	Blum No	Code
	EXPANDO T - single	70T4532T	7102466
EXPANDO T suitable for thin fronts - see page 83			
For front thicknesses less than 18mm, we recommend a trial application			
Screws are not included in the scope of delivery			

Alignment/adjustment fitting for distorted doors		Code
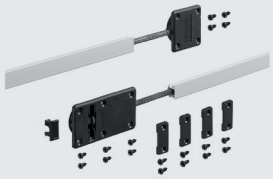	Alignment/adjustment fitting – Aluminium - For door / front thicknesses of 18-30mm. - Maximum door / front panel height 2600mm. - Length of the adjustment fitting 1990mm, can be shortened as required. - It is recommended that 2 vertical adjustment fittings are installed near the outer edge.	7113636
	Alignment/adjustment fitting – Plastic - For door / front panel thicknesses from 16mm. - Maximum door / front panel height 2600mm. - Length of the adjustment fitting 1990mm, can be shortened as required. - It is recommended that 2 vertical adjustment fittings are installed near the outer edge.	7113858

Please refer to the Lincoln Sentry website for installation instructions and drilling information.

REVEGO uno + uno | Two single doors combined

Planning

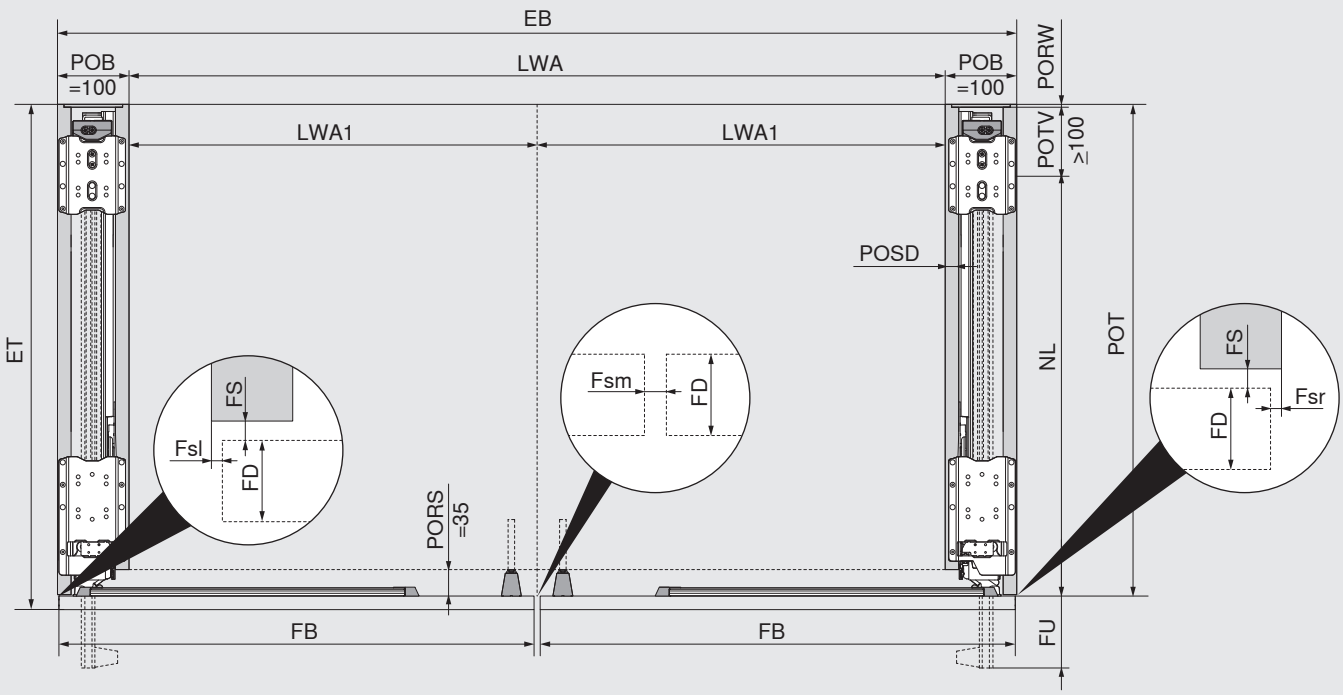

Installation depth/pocket depth
ET = POT + FS (2mm) + FD
Min. POT = NL + POTV (≥ 100mm) + PORW (≥ 3mm)
Installation width/internal width within the application
EB = 2 x LWA1 + 2 x POB (100 + 100mm)
FB = EB - Fsl - Fsr
Fsl/Fsr = 1.0 - 4.0mm; Fsm = 2.0 - 8.0mm
FD = 18 - 26mm
Max. NL = FB + 8mm
FU = FB - NL + 15mm
(min. FU = 7mm)
FD = 18 - 26mm

- By cutting the profiles to size, the front protrusion (FU) can be customised.
- To ensure optimum functionality, the fronts are at a slight angle inside the pocket.
- A partition side is required for a stand - alone application, or one adjacent to a worktop area.
- The internal width within the application determines the maximum width available for the internal cabinetry.
- For front thicknesses (FD) less than 18mm (possible depending on material/stability), we recommend a trial application.

EB	Installation width
ET	Installation depth
Fsl	Gap left
Fsr	Gap right
Fsm	Centre side gap (between the fronts)
FB	Front width
FD	Front thickness
FS	Front gap
FU	Front protrusion
LWA	Internal width within the application
LWA1	Internal width within the application, single door
NL	Nominal length
POB	Pocket width
POT	Pocket depth
PORS	Pocket back cut
PORW	Pocket back
POSD	Pocket side thickness
POTV	Pocket depth loss

REVEGO uno + uno | Two single doors combined

Planning

Minimum side gap

Pocket to pocket/adjacent cabinet

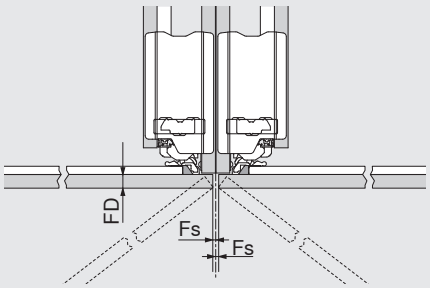

Pocket to wall/decor panel

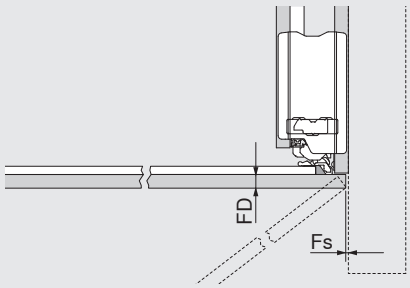

FD (mm)	Min. Fs (mm)
18 - 20	2
20.1 - 23	2.5
23.1 - 26	3

FD	Front thickness
Fs	Side gap

Installation height, front height

Application with plinth

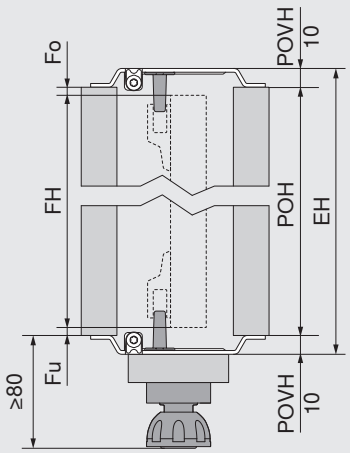

FH = POH - Fo - Fu

EH = POH + POVH top and bottom

POVH 10mm: gap 0 - 6mm

- Take into account that the pocket must be tilted during installation.
- Minimum distance to the next movable element above 3mm, for non - movable elements a front insertion space of 6mm must be taken into account
- The pocket connector height must be taken into account during planning
- Minimum plinth height 80mm

EH	Installation height
Fo	Top gap
Fu	Bottom gap
FH	Front height
POH	Pocket height
POVH	Pocket connector height

Application with set - back plinth

Additional rear pocket connector

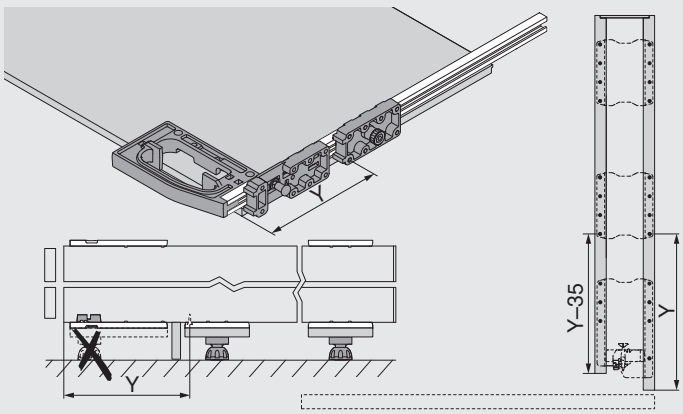

REVEGO uno + uno | Two single doors combined

Planning

Installation height, front height

Application without plinth

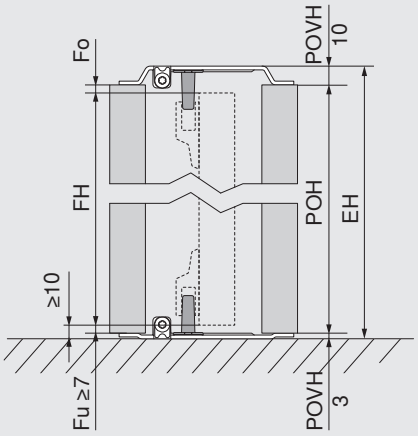

FH = POH - Fo - Fu

EH = POH + POVH top and bottom

POVH top 10mm: gap 0 - 6mm

POVH bottom 3mm: gap from 7 - 13mm

- Take into account that the pocket must be tilted during installation.
- Minimum distance from the bottom front edge to the floor or next element below is 10mm
- Minimum distance to the next movable element above 3mm,
  for non - movable elements a front insertion space of 6mm must be taken into account
- The pocket connector height must be taken into account during planning

EH	Installation height
Fo	Top gap
Fu	Bottom gap
FH	Front height
POH	Pocket height
POVH	Pocket connector height

Installation height, front height

Worktop - mounted cabinet application

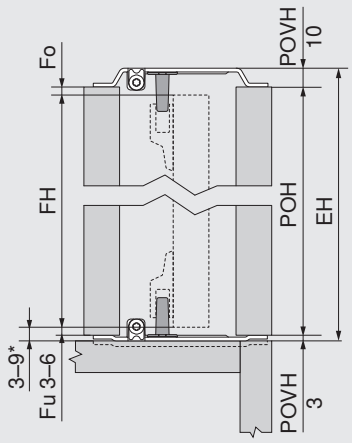

* If the distance between the front and the next element below is < 6mm, the pocket connector must be embedded in the worktop

FH = POH - Fo - Fu

EH = POH + POVH top and bottom

POVH top 10mm: gap 0 - 6mm

POVH bottom 3mm: gap from 3 - 6mm

- Take into account that the pocket must be tilted during installation.
- The minimum distance between the front and the next element below with a flush front
  (e.g. worktop is not visible) is 3mm
- The minimum distance between the front and the next element below with a protruding element
  (e.g. worktop is visible) is 6mm
- The minimum distance to the next movable element above is 3mm,
  for non - movable elements a front insertion space of 6mm must be taken into account
- A trial application is recommended in the edge areas
- The pocket connector height must be taken into account during planning
- The distance between the front and the next element above and below is made up of Fu or Fo + POVH

EH	Installation height
Fo	Top gap
Fu	Bottom gap
FH	Front height
POH	Pocket height
POVH	Pocket connector height

REVEGO uno + uno | Two single doors combined

Planning

Max. front weights for worktop - mounted cabinets in kg per front

Front height FH (mm)	Front width FB (mm)						
	450	500	550	600	650	700	750
1130 - 1349	22	20	18	16	15	14	13
1350 - 1499	23	21	19	18	17	16	15
1500 - 1649	25	23	21	19	18	17	16
1650 - 1799	27	25	23	21	20	19	18

Note

- The max. front width when planning a worktop - mounted cabinet is 750mm
- The max. pocket height when planning a worktop - mounted cabinet is 1806mm

Internal height and internal depth within the application

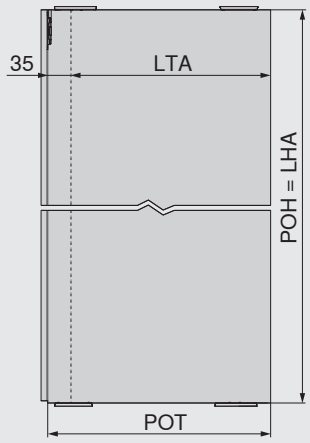

LHA = POH

LTA = POT - 35mm

- The internal height/internal depth within the application determines the maximum height/depth available for the internal cabinetry.

LHA	Internal height within the application
LTA	Internal depth within the application
POH	Pocket height
POT	Pocket depth

Inter - door support

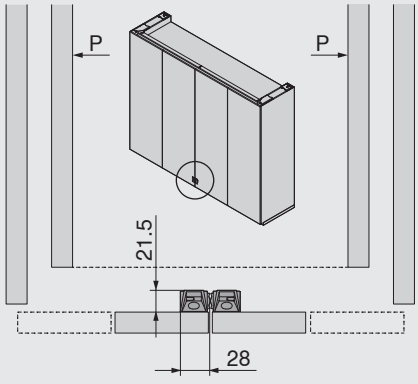

- Supports a single door against a double door, two single doors against each other or two double doors against each other

P	Pocket

REVEGO duo | Double door

REVEGO duo - double door right or left

Space requirement			
Installation dimensions (mm)	**Installation width EB**	**Installation height EH**	**Installation depth ET**
	900 - 1500	1155 - 3012	from 573
Internal dimensions within the application (mm)	**Internal width within the application LWA**	**Internal height within the application LHA**	**Internal depth within the application LTA**
	up to 1350	up to 2884	from 483
Pocket dimensions (mm)	**Pocket width POB**	**Pocket height POH**	**Pocket depth POT**
	150	1142 - 2999	from 553
Front dimensions (mm)	**Front width FB**	**Front height FH**	**Front thickness FD**
	442 - 748	1130 - 2980	18 - 26
Front weight FG	up to 35 kg per front		

Overview

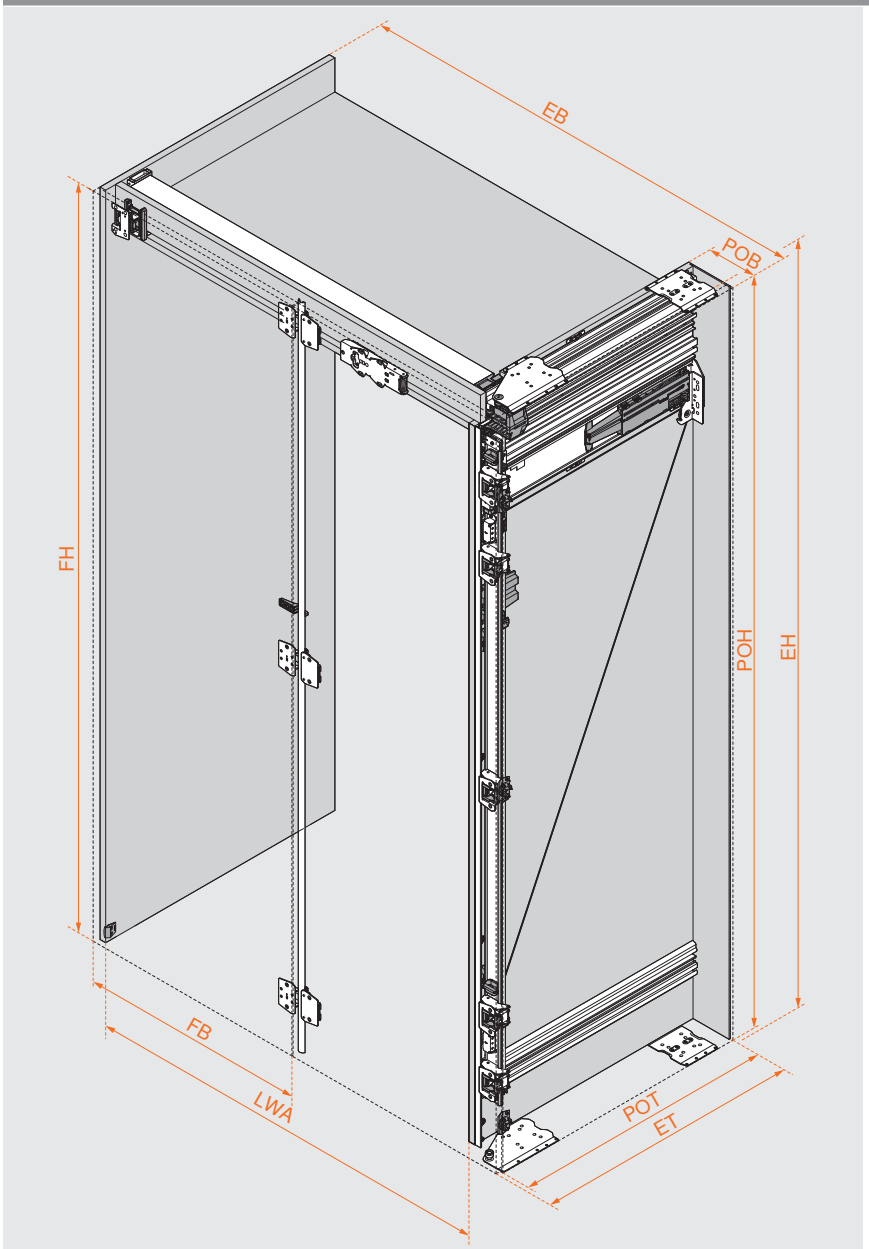

Fittings selection made easy

It is easy to work out the fittings and drilling positions you need using the Product Configurator.

With every product configuration, you will receive manufacturing drawings, cutting lists for wooden parts and fittings, 3D CAD data for your design software, as well as CAM programs including drilling information for direct machining on your CNC machine, in addition to the checked parts list.

Enter the web code in the Product Configurator, click on the short URL or scan the QR code.
Don't have login information for digital services yet? Register here and get access free of charge.

Web code **DQITIM**

Product Configurator
www.blum.com/rev10

Assembly and adjustment
www.blum.com/rev6

REVEGO duo | Double door

Component overview

Pocket

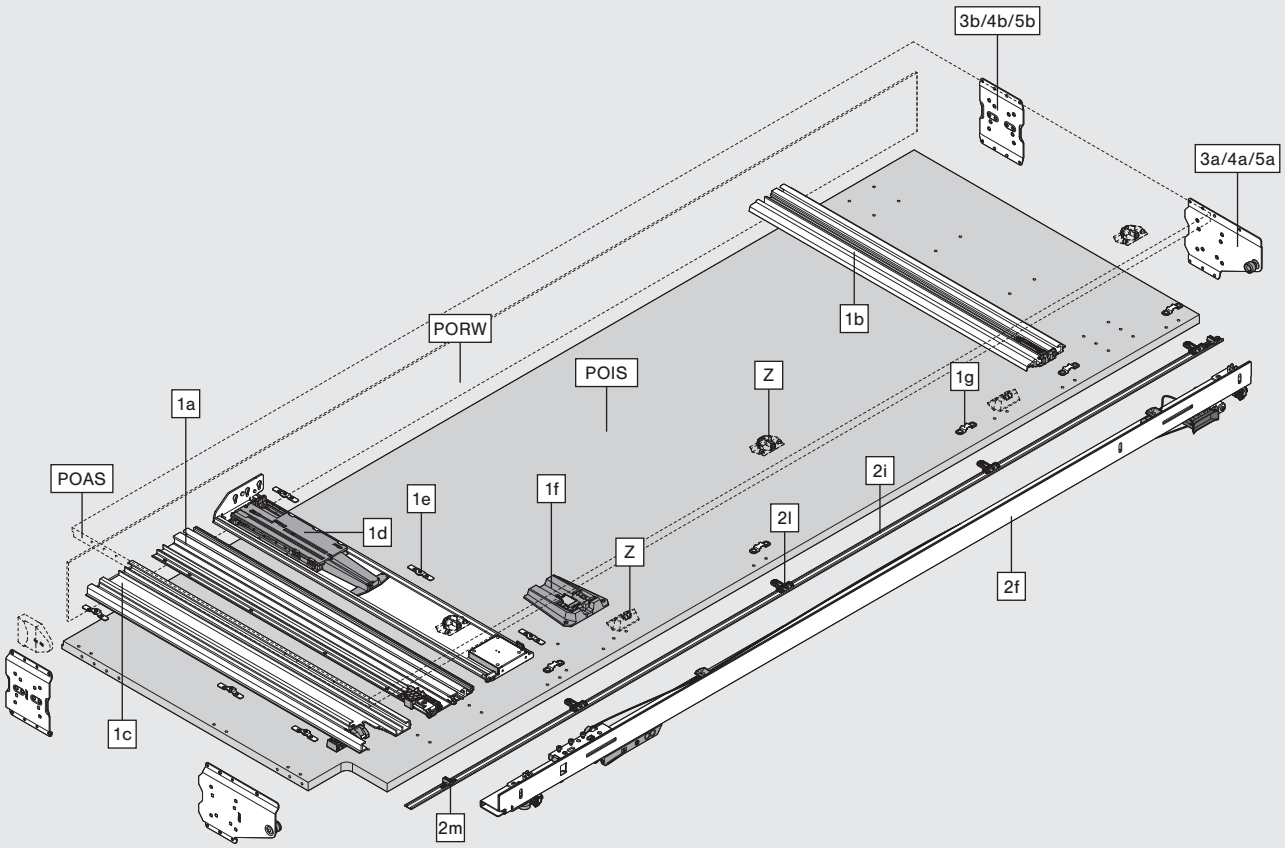

Consisting of:	
1a	Top pocket profile
1b	Bottom pocket profile
1c	Roller profile
1d	TIP - ON unit pocket
1e	Fixing clips
1f	BLUMOTION unit pocket
1g	Attachment for pocket cover strip
2f	Hinge bracket
2i	Pocket cover strip
2l	Mounting for pocket cover strip
2m	Pocket cover strip support
3a/4a/5a	Front pocket connector
3b/4b/5b	Rear pocket connector
Z	Scuff guard
POAS	External pocket side
POIS	Internal pocket side
PORW	Pocket back

REVEGO duo | Double door

Component overview

Front

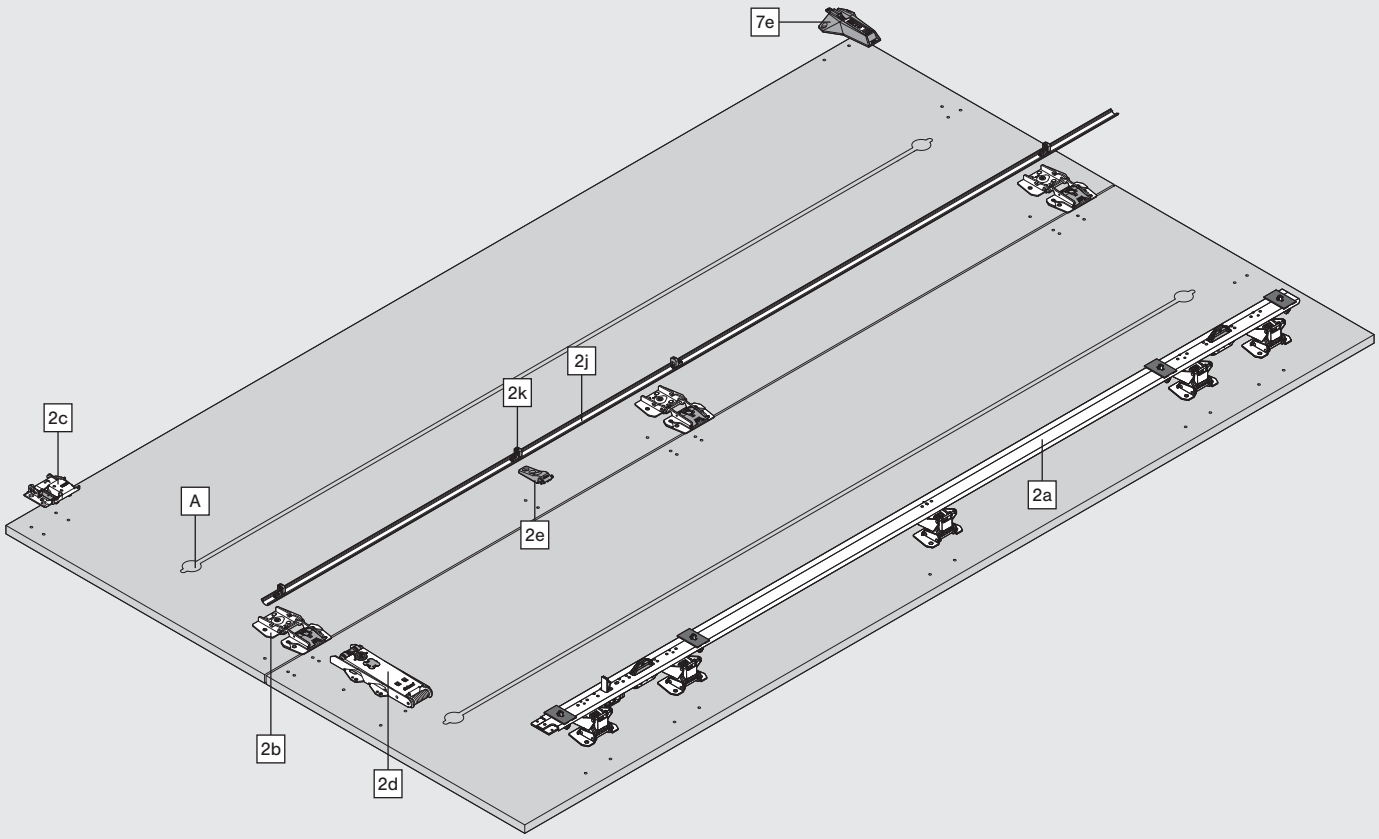

Consisting of:	
2a	Hinge strip
2b	Centre hinge
2c	Roller carriage hinge
2d	TIP - ON unit door
2e	Support for door cover strip
2j	Door cover strip
2k	Mounting for door cover strip
7e	Door support for decor panel/cabinet side

A We recommend at least one alignment fitting per front with a maximum installation height of 20mm.
The space available between the pair of folding fronts is 20mm.

REVEGO duo | Double door

Component overview

Track

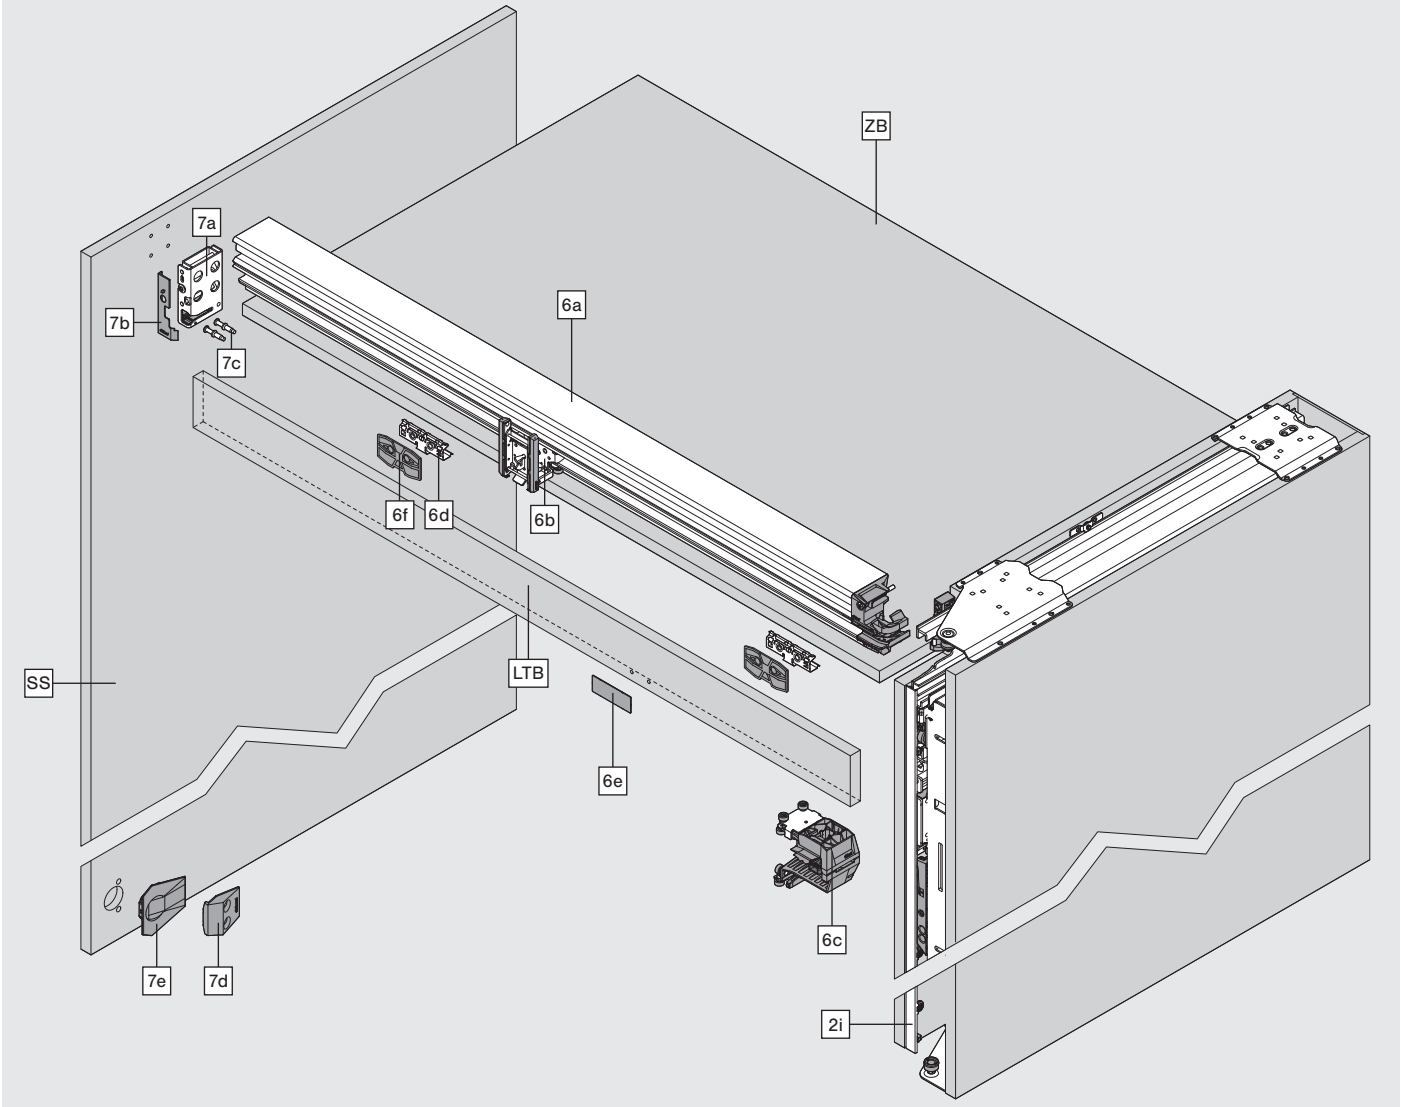

Consisting of:	
2i	Pocket cover strip
6a	Track
6b	Roller carriage
6c	Roller carriage transporter
6d	Mounting for track cover panel
6e	Catch plate
6f	Spacer
7a	Track fixing
7b	Cover for track fixing
7c	Pin for track fixing
7d	Door support on partition side
7e	Door support for decor panel/cabinet side
SS	Optional partition side
ZB	Fixed shelf
LTB	Track cover panel

REVEGO duo | Double door

Ordering information

1	Pocket profile set with TIP - ON		Blum No		Code	
	Nominal length NL (mm)	Min. pocket depth POT* (mm)	Left	Right	Left	Right
	450	550	802P450D.L3	802P450D.R3	7116515	7116516
	525	625	802P525D.L3	802P525D.R3	7116517	7116518
	600	700	802P600D.L3	802P600D.R3	7116519	7116520
	675	775	802P675D.L3	802P675D.R3	7116521	7116522
	750	850	802P750D.L3	802P750D.R3	7116523	7116524

* Specification without pocket back. A back construction with a thickness of at least 3mm is required.
Pocket and roller profiles as well as TIP - ON unit pocket can be shortened to any nominal length.

Consisting of:		
1a	1 x	Top pocket profile
1b	1 x	Bottom pocket profile
1c	1 x	Roller profile
1d	1 x	TIP - ON unit pocket
1e	6 x	Fixing clips
1f	1 x	BLUMOTION unit pocket
1g	5 x	Attachment for pocket cover strip

2	Hinge bracket set with TIP - ON	Blum No		Code	
	Pocket height (mm)	Left	Right	Left	Right
	1142 - 1356	802T1140.L3	802T1140.R3	7116525	7116526
	1357 - 1506	802T1350.L3	802T1350.R3	7116527	7116528
	1507 - 1656	802T1500.L3	802T1500.R3	7116529	7116530
	1657 - 1806	802T1650.L3	802T1650.R3	7116531	7116532
	1807 - 1956	802T1800.L3	802T1800.R3	7116533	7116534
	1957 - 2106	802T1950.L3	802T1950.R3	7116535	7116536
	2107 - 2256	802T2100.L3	802T2100.R3	7116537	7116538
	2257 - 2406	802T2250.L3	802T2250.R3	7116539	7116540
	2407 - 2556	802T2400.L3	802T2400.R3	7116541	7116542
	2557 - 2706	802T2550.L3	802T2550.R3	7116543	7116544
	2707 - 2856	802T2700.L3	802T2700.R3	7116545	7116546
	2857 - 2999	802T2850.L3	802T2850.R3	7116547	7116548

Cover strips must be shortened to the required length

Consisting of:		
2a	1 x	Hinge strip
2b	5 x	Centre hinge
2c	1 x	Roller carriage hinge
2d	1 x	TIP - ON unit door
2e	1 x	Support for door cover strip
2f	1 x	Hinge bracket
2i	1 x	Pocket cover strip, black anodised
2j	1 x	Door cover strip, black anodised
2k	4 x	Mounting for door cover strip
2l	2 - 5 x	Mountings for pocket cover strip
2m	1 x	Pocket cover strip support

REVEGO duo | Double door

Ordering information

Pocket connector set						
3	Application with plinth				Blum No	Code
	Pocket side thickness (mm)	Colour				
	15 - 17	Black			802V560B	7115220
	18 - 19	Black			802V580B	7115221
Pocket connector top + bottom: POVH 10mm for 0 - 6mm gap						
POVH Pocket connector height						
Consisting of:						
3a	2 x	Front pocket connector				
3b	2 x	Rear pocket connector				

Pocket connector set							
4	Application with plinth		Blum No		Code	
	Pocket side thickness (mm)	Colour	Left	Right	Left	Right
	15 - 17	Black	802V660B.L1	802V660B.R1	7115222	7115223
	18 - 19	Black	802V680B.L1	802V680B.R1	7115224	7115225
Top pocket connector: POVH 10mm for 0 - 6mm gap						
Bottom pocket connector: POVH 3mm for gap from 7 - 13mm						
POVH Pocket connector height						
Consisting of:						
4a	2 x	Front pocket connector				
4b	2 x	Rear pocket connector				

Pocket connector set						
5	Worktop - mounted cabinet application		Blum No		Code	
	Pocket side thickness (mm)	Colour	Left	Right	Left	Right
	15 - 17	Black	802V760B.L3	802V760B.R3	7116549	7116550
	18 - 19	Black	802V780B.L3	802V780B.R3	7116551	7116552
Top pocket connector: POVH 10mm for 0 - 6mm gap						
Bottom pocket connector: POVH 3mm for gap from 3 - 6mm						
POVH Pocket connector height						
Consisting of:						
5a	2 x	Front pocket connector				
5b	2 x	Rear pocket connector				

6	Track set		Blum No		Code	
	LWA double door (mm)	Colour	Left	Right	Left	Right
	1050	Black anodised	802L1050DL3	802L1050DR3	7116500	7116501
	1200	Black anodised	802L1200DL3	802L1200DR3	7116502	7116503
	1250	Black anodised	802L1250DL3	802L1250DR3	7116504	7116505
	1350	Black anodised	802L1350DL3	802L1350DR3	7116506	7116507
Track can be shortened to any length.						
LWA Internal width within the application						
Consisting of:						
6a	1 x	Track				
6b	1 x	Roller carriage				
6c	1 x	Roller carriage transporter				
6d	2 x	Mounting for track cover panels				
6e	1 x	Catch plate, black				
6f	2 x	Spacer				

REVEGO duo | Double door

Ordering information

7	Assembly set for one double door		Blum No		Code	
	Colour		Left	Right	Left	Right
	Black		802M0002.L2	802M0002.R2	7115185	7115186

Consisting of:		
7a	1 x	Track fixing
7b	1 x	Cover for track fixing
7c	2 x	Pin for track fixing
7d	1 x	Door support on partition side (can be selected depending on installation situation)
7e	1 x	Door support for decor panel/cabinet side incl. attachment (can be selected depending on installation situation)

Z	Accessories

	Scuff Guard	Blum No	Code
	For front thicknesses starting from 23mm	802ZA00S	7115226
	For front thicknesses less than 23mm, the scuff guard can be used as additional front protection		

Consisting of:	
3 x	External pocket side scuff guard
2 x	Internal pocket side scuff guard

	Screws	Pack Qty	Blum No	Code
	6 x 14.5mm system screws, nickel plated	1,000	661.1450.HG	7115105
	6 x 14.5mm system screws, onyx black	1,000	661.1450.HG	7116554

	Pocket Connector	Blum No	Code
	Rear pocket connector, pocket connector height (POVH) 10mm	801V5002	7116576
	Additional pocket connector for set - back plinth leg		

	EXPANDO T - for thin fronts	Blum No	Code
	EXPANDO T - single	70T4532T	7102466
	EXPANDO T suitable for thin fronts - see page 83		
	For front thicknesses less than 18mm, we recommend a trial application		
	Screws are not included in the scope of delivery		

Alignment/adjustment fitting for distorted doors		Code
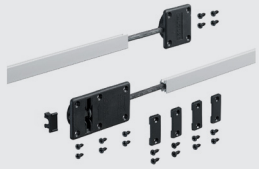	Alignment/adjustment fitting – Aluminium - For door / front thicknesses of 18-30mm. - Maximum door / front panel height 2600mm. - Length of the adjustment fitting 1990mm, can be shortened as required. - It is recommended that 2 vertical adjustment fittings are installed near the outer edge.	7113636
	Alignment/adjustment fitting – Plastic - For door / front panel thicknesses from 16mm. - Maximum door / front panel height 2600mm. - Length of the adjustment fitting 1990mm, can be shortened as required. - It is recommended that 2 vertical adjustment fittings are installed near the outer edge.	7113858

Please refer to the Lincoln Sentry website for installation instructions and drilling information.

REVEGO duo | Double door

Planning

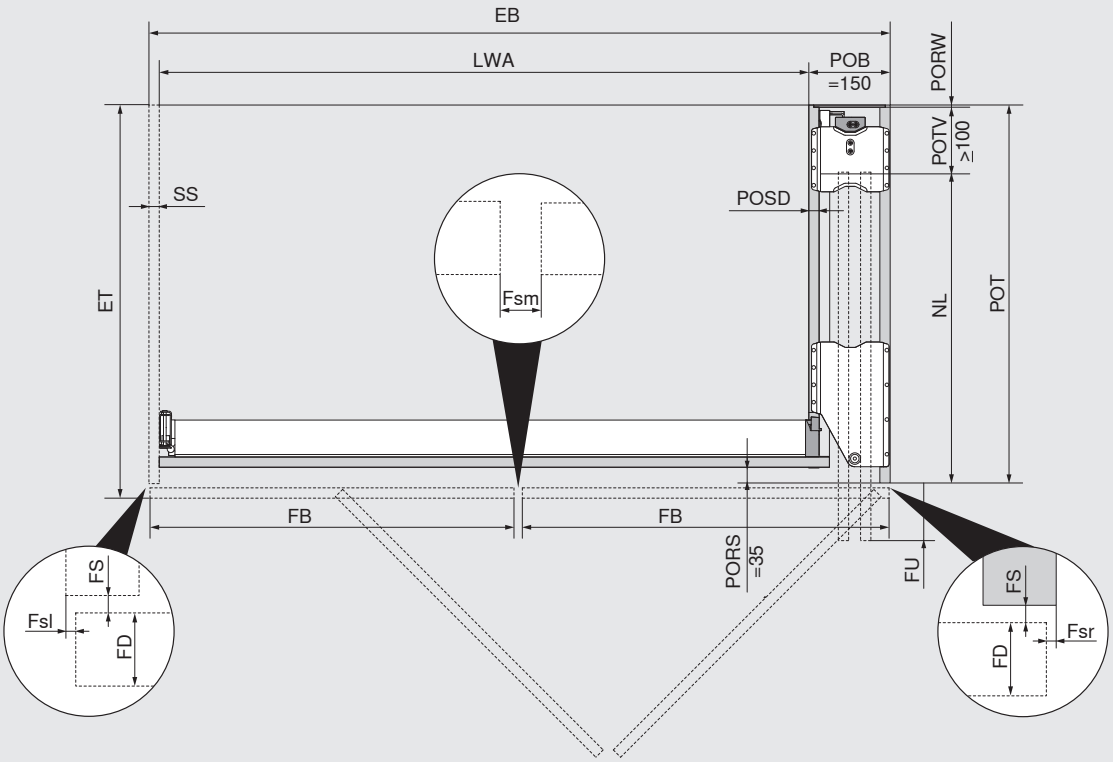

Installation width/internal width within the application
Without partition side: EB = LWA + POB (150mm)
With partition side: EB = LWA + POB (150mm) + SS
Front width/front protrusion
FB = (EB - Fsl - Fsm - Fsr) : 2 (fronts)
Fsl/Fsr = 1.0 - 4.0mm; Fsm = 2.0 - 8.0mm
Max. NL = FB + 8mm
FU = FB - NL + 15mm
(min. FU = 7mm)
Installation depth/pocket depth
ET = POT + FS (2mm) + FD
FD = 18 - 26mm
Min. POT = NL + POTV (≥ 100mm) + PORW (≥ 3mm)
POSD = 15 - 19mm

- By cutting the profiles to size, the front protrusion (FU) can be customised.
- To ensure optimum functionality, the fronts are at a slight angle inside the pocket.
- The internal width within the application determines the maximum width available for the internal cabinetry.
- For front thicknesses (FD) less than 18mm (possible depending on material/stability), we recommend a trial application.

EB	Installation width
ET	Installation depth
Fsl	Gap left
Fsr	Gap right
Fsm	Centre side gap (between the fronts)
FB	Front width
FD	Front thickness
FS	Front gap
FU	Front protrusion
LWA	Internal width within the application
NL	Nominal length
POB	Pocket width
POT	Pocket depth
PORS	Pocket back cut
PORW	Pocket back
POSD	Pocket side thickness
POTV	Pocket depth loss
SS	Partition side (optional)

REVEGO duo | Double door

Planning

Minimum side gap

Pocket to pocket/adjacent cabinet

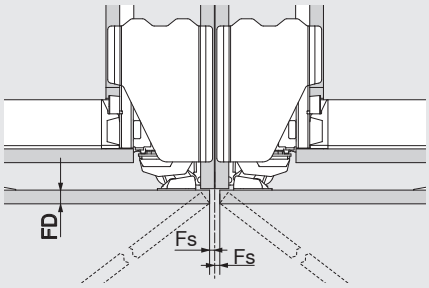

Pocket to wall/decor panel

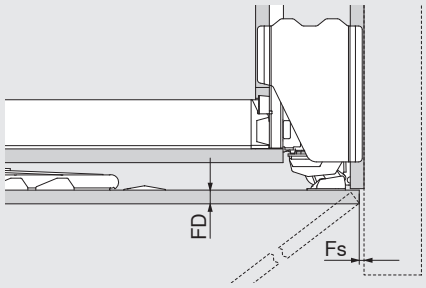

FD (mm)	Min. Fs (mm)
18 - 20	2
20.1 - 23	2.5
23.1 - 26	3

FD	Front thickness
Fs	Side gap

Installation height, front height

Application with plinth

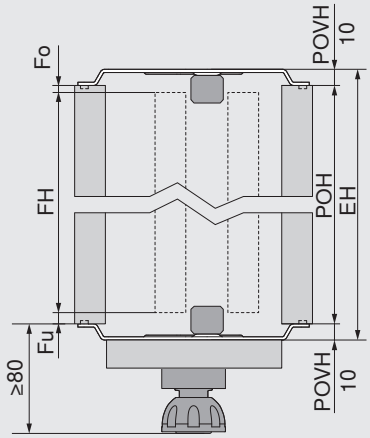

FH = POH - Fo - Fu

EH = POH + POVH top and bottom

POVH 10mm: gap 0 - 6mm

- Take into account that the pocket must be tilted during installation.
- Minimum distance to the next movable element above 3mm, for non - movable elements a front insertion space of 6mm must be taken into account
- The pocket connector height must be taken into account during planning
- Minimum plinth height 80mm

EH	Installation height
Fo	Top gap
Fu	Bottom gap
FH	Front height
POH	Pocket height
POVH	Pocket connector height

Application with set - back plinth

Additional rear pocket connector

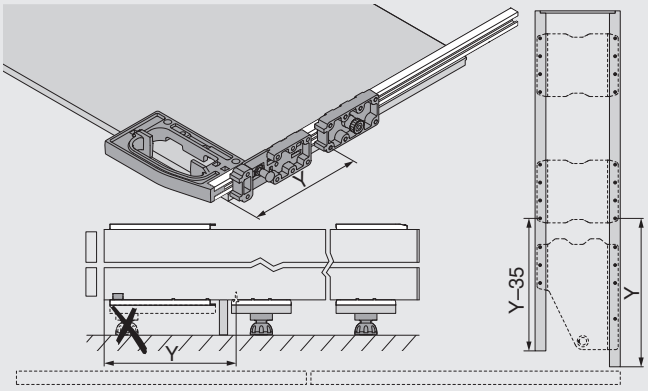

REVEGO duo | Double door

Planning

Installation height, front height

Application without plinth

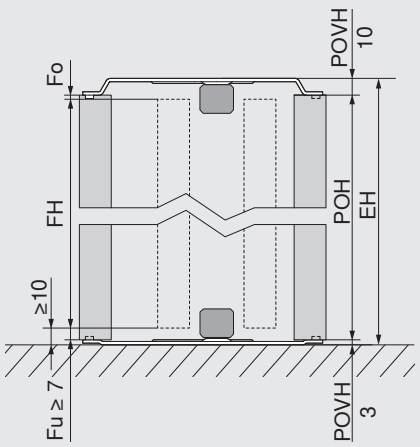

FH = POH - Fo - Fu

EH = POH + POVH top and bottom

POVH top 10mm: gap 0 - 6mm

POVH bottom 3mm: gap from 7 - 13mm

- Take into account that the pocket must be tilted during installation.
- Minimum distance from the bottom front edge to the floor or next element below is 10mm
- Minimum distance to the next movable element above 3mm,
  for non - movable elements a front insertion space of 6mm must be taken into account
- The pocket connector height must be taken into account during planning

EH	Installation height
Fo	Top gap
Fu	Bottom gap
FH	Front height
POH	Pocket height
POVH	Pocket connector height

Installation height, front height

Worktop - mounted cabinet application

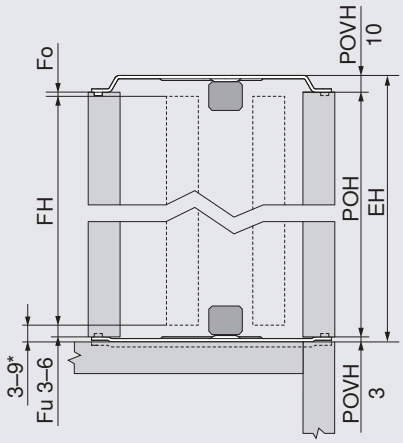

* If the distance between the front and the next element below is < 6mm, the pocket connector must be embedded in the worktop

FH = POH - Fo - Fu

EH = POH + POVH top and bottom

POVH top 10mm: gap 0 - 6mm

POVH bottom 3mm: gap from 3 - 6mm

- Take into account that the pocket must be tilted during installation.
- The minimum distance between the front and the next element below with a flush front
  (e.g. worktop is not visible) is 3mm
- The minimum distance between the front and the next element below with a protruding element
  (e.g. worktop is visible) is 6mm
- Minimum distance to the next movable element above 3mm,
  for non - movable elements a front insertion space of 6mm must be taken into account
- A trial application is recommended in the edge areas
- The pocket connector height must be taken into account during planning
- The distance between the front and the next element above and below is made up of Fu or Fo + POVH

EH	Installation height
Fo	Top gap
Fu	Bottom gap
FH	Front height
POH	Pocket height
POVH	Pocket connector height

REVEGO duo | Double door

Planning

Max. front weights for worktop - mounted cabinets in kg per front

Front height FH (mm)	Front width FB (mm)						
	450	500	550	600	650	700	750
1130 - 1349	22	20	18	16	15	14	13
1350 - 1499	23	21	19	18	17	16	15
1500 - 1649	25	23	21	19	18	17	16
1650 - 1799	27	25	23	21	20	19	18

Note

- The max. pocket height when planning a worktop - mounted cabinet is 1806mm

Door support on partition side

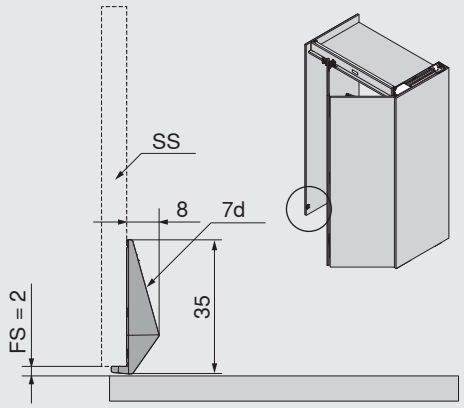

- Assembly height of the door support ideally as far down as possible, however up to a maximum height of 1000mm from the front bottom edge
- Ensure collision - free installation

FS	Front gap
SS	Partition side
7d	Door support on partition side

Door support for decor panel/cabinet side

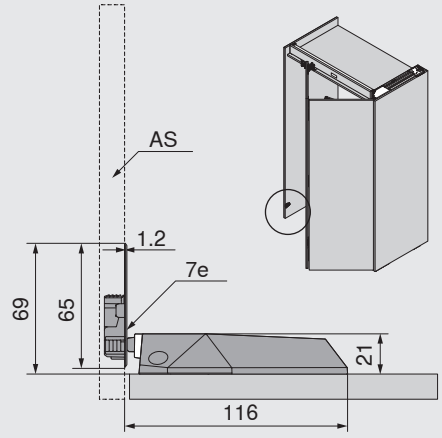

- Installation height AS: 64mm + Fu from the decor panel/cabinet bottom edge
- Installation height front: 64mm from the front bottom edge
- Ensure collision - free installation

AS	Decor panel/cabinet side
Fu	Bottom gap
7e	Door support for decor panel/cabinet side

REVEGO duo | Double door

Planning

Track installation dimension

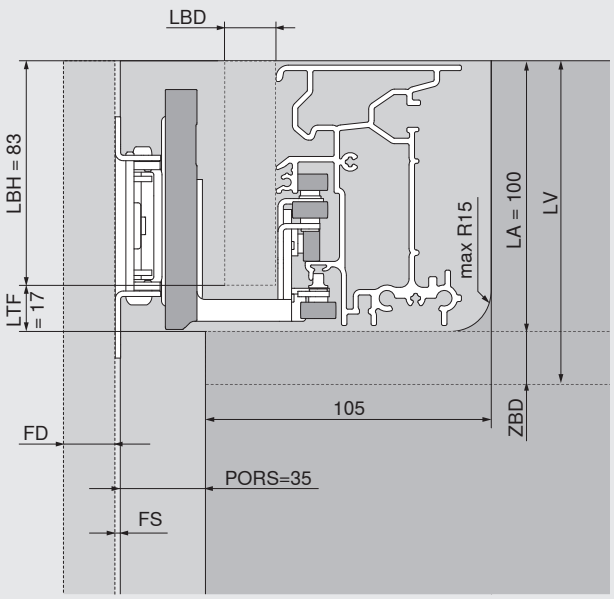

LBH = 83mm

LBD = 15 - 19mm
(the spacer must be used ≤ 17mm)

LTF = 17mm

LA = 100mm

LV = LA + ZBD (≥ 15mm)

- We recommend using a cross member to stabilise the fixed shelf. Minimum distance to front edge of internal pocket side = 170mm
- A solid connection between the fixed shelf and the pocket with connector fittings is recommended for an attractive gap layout
- No mounting of add - on parts directly on the track

FD	Front thickness
LA	Track cut - out
LV	Track installation
LBD	Track cover panel thickness
LBH	Track cover panel height
LTF	Track gap
PORS	Pocket back cut
ZBD	Fixed shelf thickness

Internal height and internal depth within the application

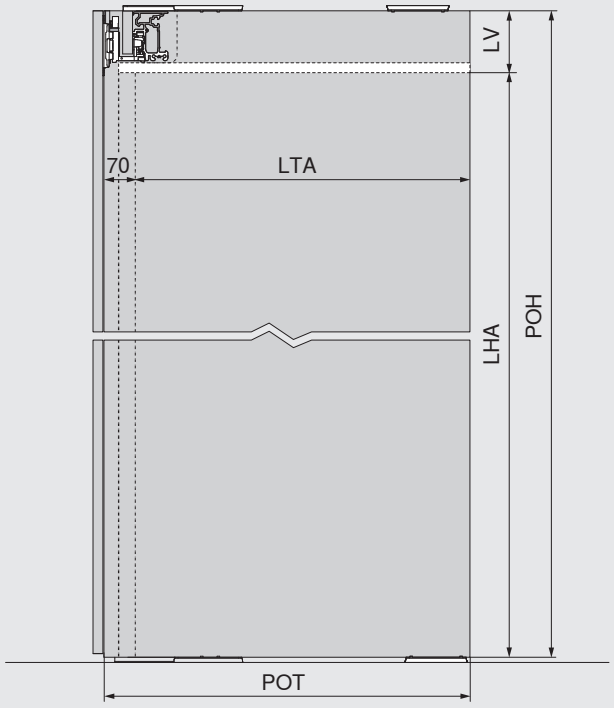

LHA = POH - LV

LTA = POT - 70mm

- The internal height/internal depth within the application determines the maximum height/depth available for the internal cabinetry.

LHA	Internal height within the application
LTA	Internal depth within the application
LV	Track installation
POH	Pocket height
POT	Pocket depth

REVEGO uno + duo | Single door and double door combined

REVEGO uno + duo - single door right or left and double door right or left

Space requirement			
Installation dimensions (mm)	**Installation width EB**	**Installation height EH**	**Installation depth ET**
	1350 - 2400	1155 - 3012	from 573
Internal dimensions within the application (mm)	**Internal width within the application LWA**	**Internal height within the application LHA**	**Internal depth within the application LTA**
	up to 2150	up to 2884	from 483
Pocket dimensions (mm)	**Pocket width POB**	**Pocket height POH**	**Pocket depth POT**
	100 / 150	1142 - 2999	from 553
Front dimensions (mm)	**Front width FB**	**Front height FH**	**Front thickness FD**
	442 - 898/748	1130 - 2980	18 - 26
Front weight FG	up to 35 kg per front		

Overview

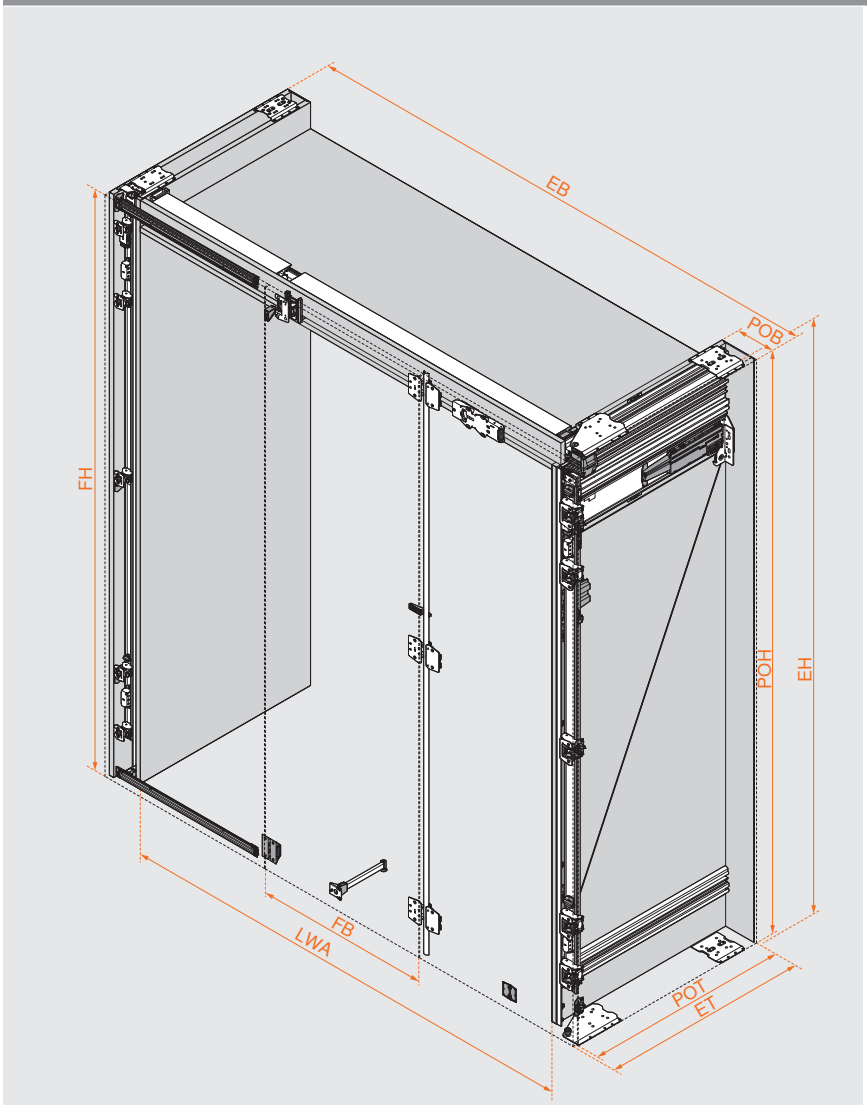

Fittings selection made easy

It is easy to work out the fittings and drilling positions you need using the Product Configurator.

With every product configuration, you will receive manufacturing drawings, cutting lists for wooden parts and fittings, 3D CAD data for your design software, as well as CAM programs including drilling information for direct machining on your CNC machine, in addition to the checked parts list.

Enter the web code in the Product Configurator, click on the short URL or scan the QR code.
Don't have login information for digital services yet? Register here and get access free of charge.

Web code **DQIVXA**

Product Configurator
www.blum.com/rev11

Assembly and adjustment
www.blum.com/rev7

REVEGO uno + duo | Single door and double door combined

Double door component overview

Pocket

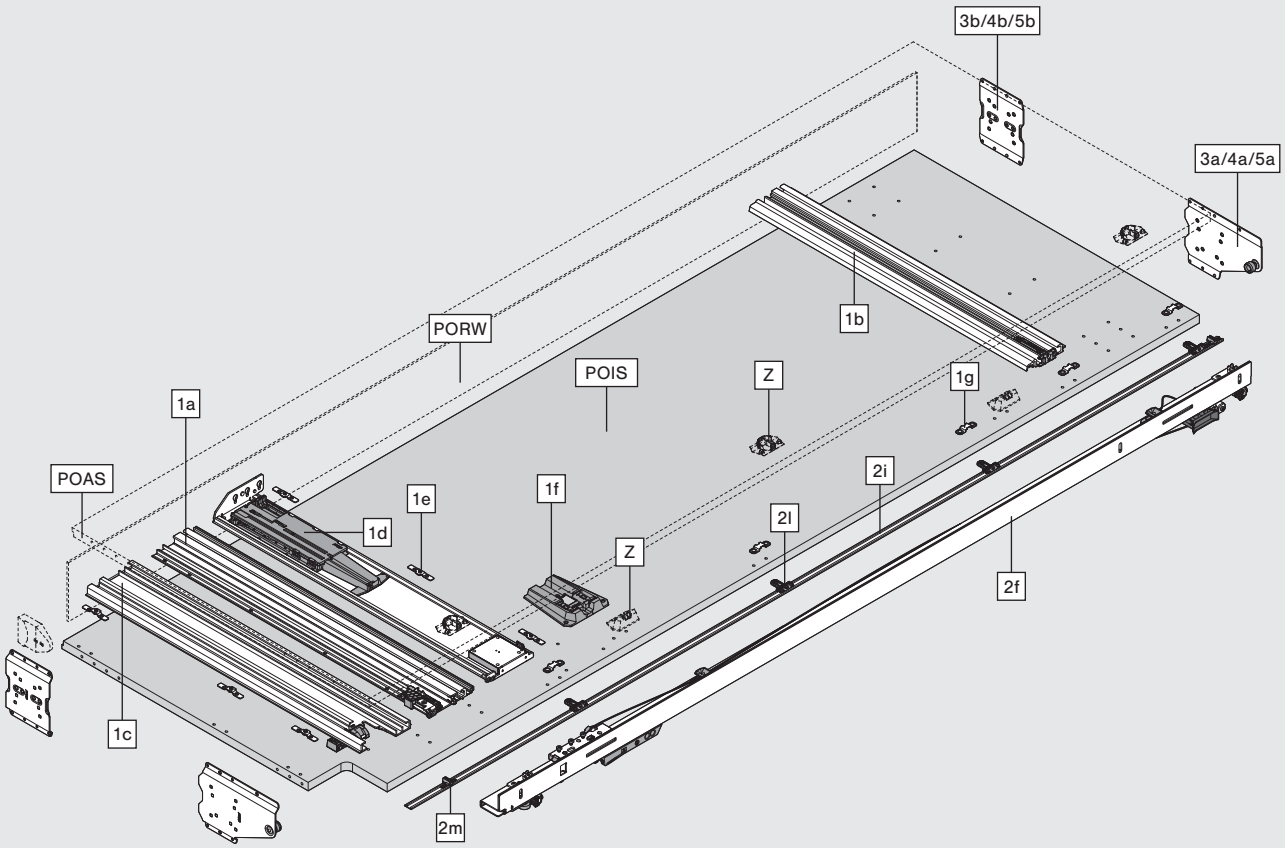

Consisting of:	
1a	Top pocket profile
1b	Bottom pocket profile
1c	Roller profile
1d	TIP - ON unit pocket
1e	Fixing clips
1f	BLUMOTION unit pocket
1g	Attachment for pocket cover strip
2f	Hinge bracket
2i	Pocket cover strip
2l	Mounting for pocket cover strip
2m	Pocket cover strip support
3a/4a/5a	Front pocket connector
3b/4b/5b	Rear pocket connector
Z	Scuff guard
POAS	External pocket side
POIS	Internal pocket side
PORW	Pocket back

REVEGO uno + duo | Single door and double door combined

Double door component overview

Front

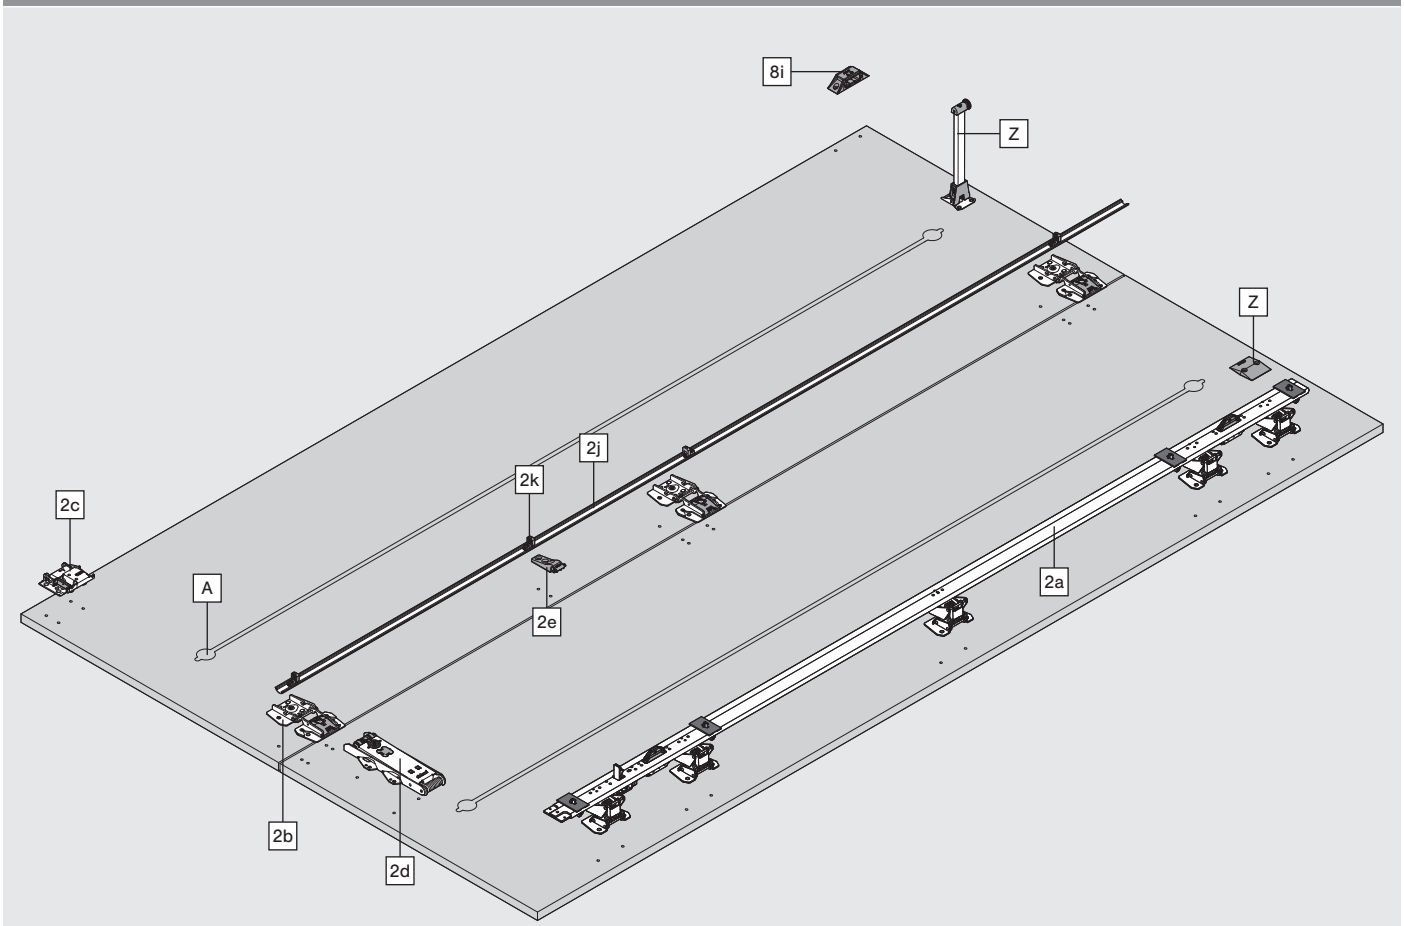

Consisting of:	
2a	Hinge strip
2b	Centre hinge
2c	Roller carriage hinge
2d	TIP - ON unit door
2e	Support for door cover strip
2j	Door cover strip
2k	Mounting for door cover strip
8i	Inter - door support
Z	Inner door support incl. tip - assist

A We recommend at least one alignment fitting per front with a maximum installation height of 20mm.
The space available between the pair of folding fronts is 20mm.

REVEGO uno + duo | Single door and double door combined

Double door component overview

Track

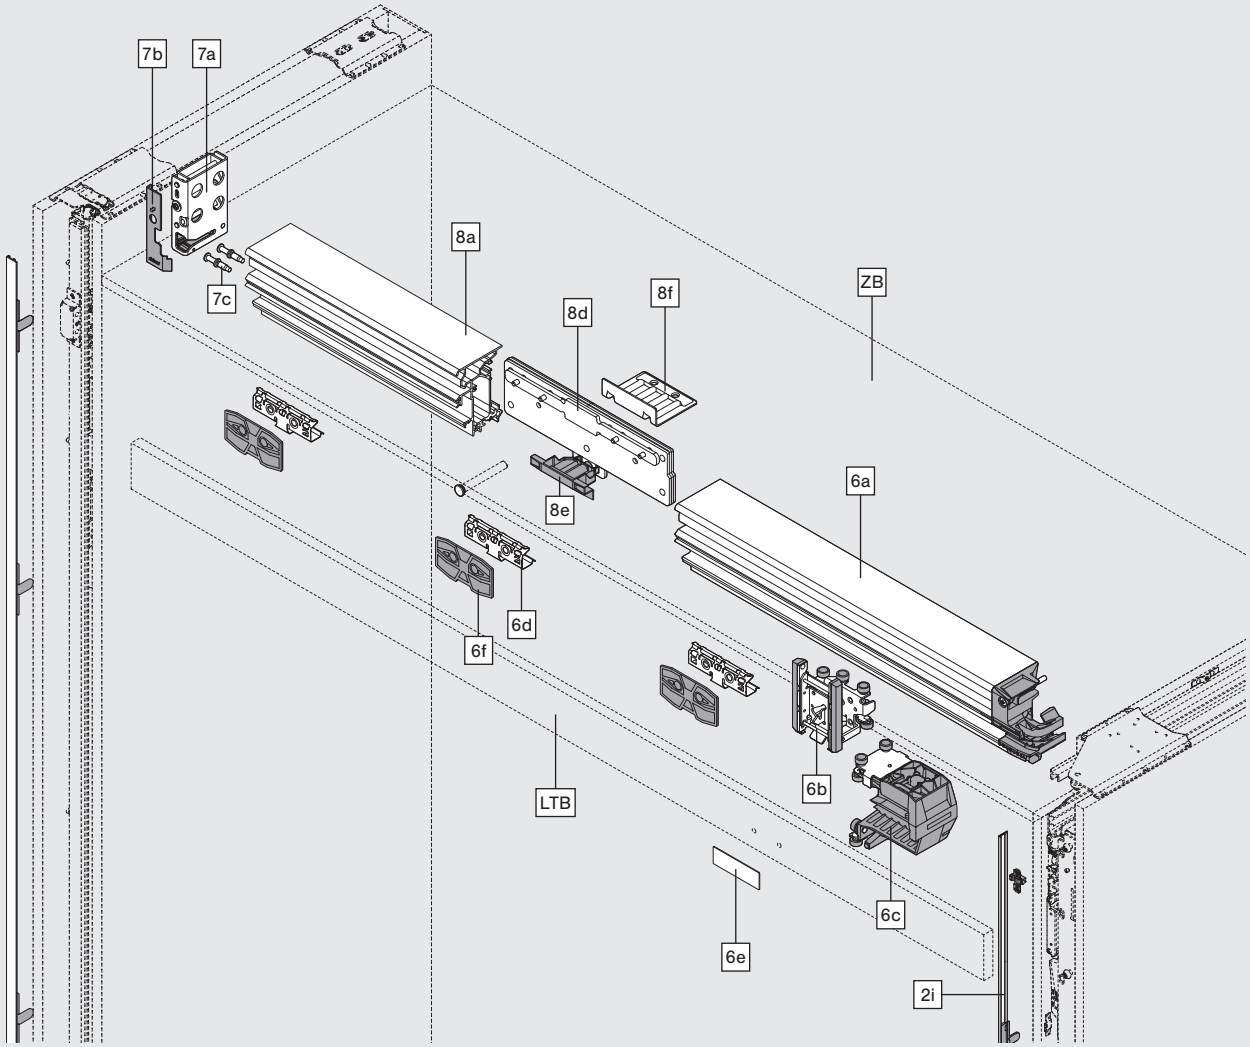

Consisting of:	
2h	TIP - ON incl. catch plate
2i	Pocket cover strip incl. mounting
6a	Track
6b	Roller carriage
6c	Roller carriage transporter
6d	Mounting for track cover panels
6e	Catch plate
6f	Spacer
7a	Track fixing
7b	Cover for track fixing
7c	Pin for track fixing
8a	Track extension
8d	Track connection
8e	Cover for track connection
8f	Support angle for depth adjustment
LTB	Track cover panel
ZB	Fixed shelf

REVEGO uno + duo | Single door and double door combined

Single door component overview

Pocket

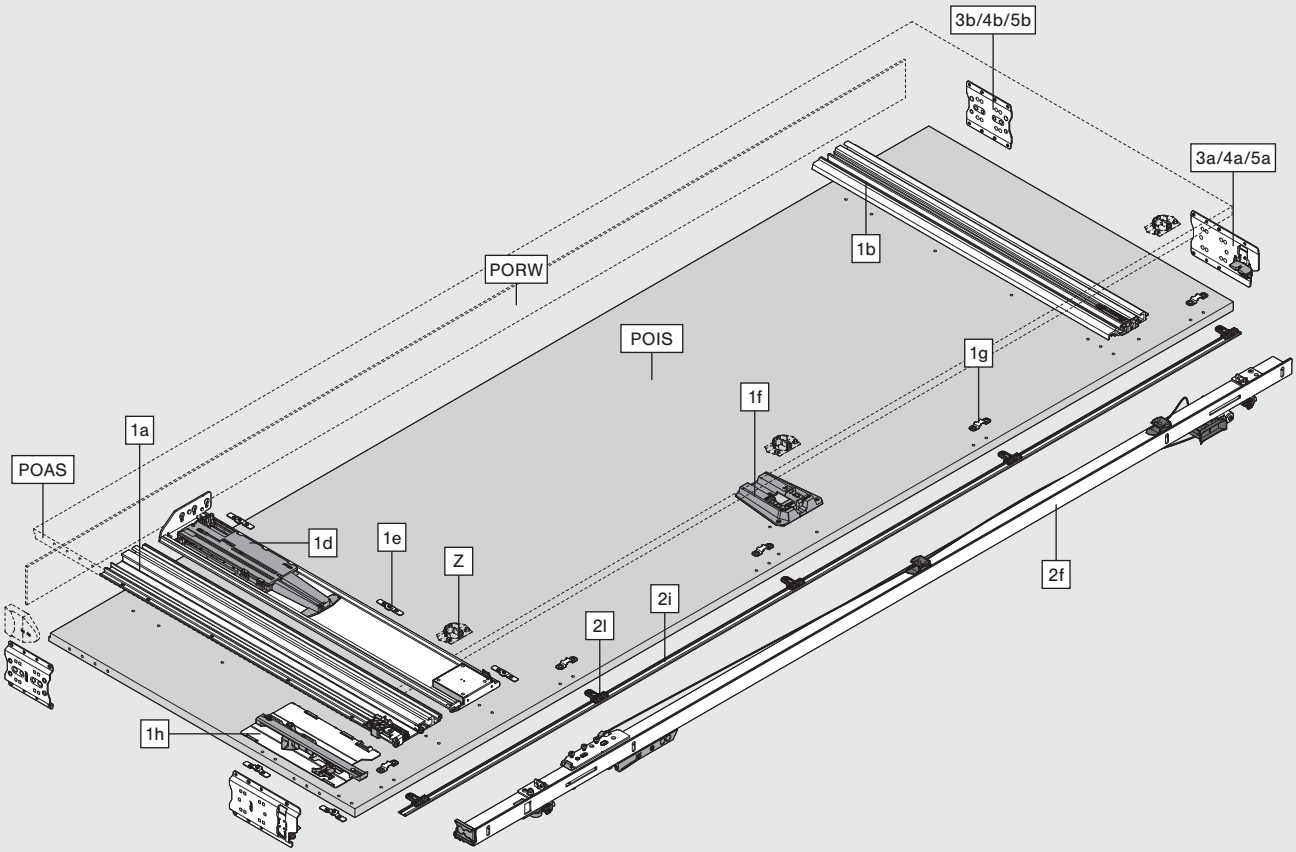

Consisting of:	
1a	Top pocket profile
1b	Bottom pocket profile
1d	TIP - ON unit pocket
1e	Fixing clips
1f	BLUMOTION unit pocket
1g	Attachment for pocket cover strip
1h	BLUMATIC unit
2f	Hinge bracket
2i	Pocket cover strip
2l	Mounting for pocket cover strip
3a/4a/5a	Front pocket connector
3b/4b/5b	Rear pocket connector
Z	Scuff guard
POAS	External pocket side
POIS	Internal pocket side
PORW	Pocket back

REVEGO uno + duo | Single door and double door combined

Single door component overview

Front

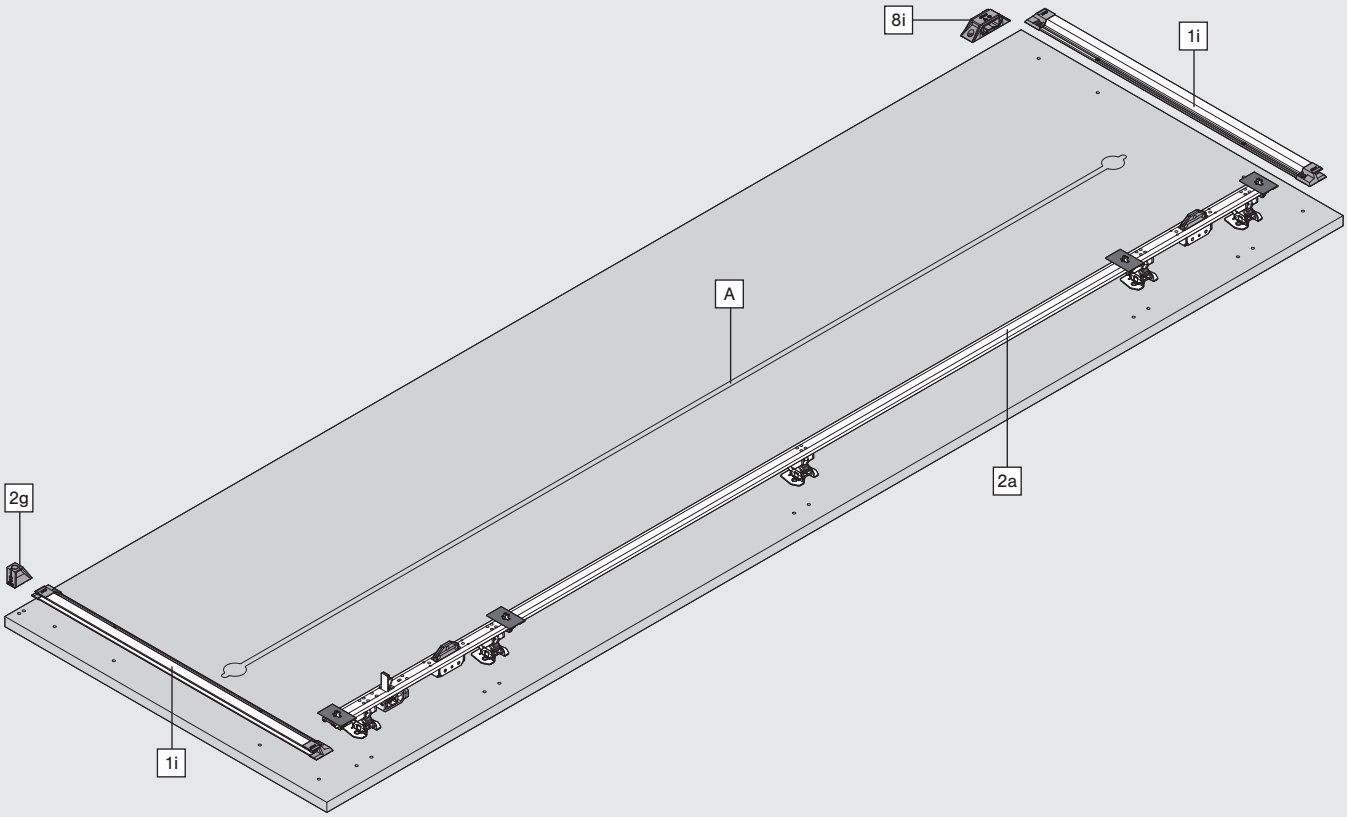

Consisting of:	
1i	Door stabiliser
2a	Hinge strip
2g	TIP - ON spacer
8i	Inter - door support

A We recommend at least one alignment fitting with a maximum installation height of 3mm.
Alignment fittings with a height of more than 3mm must not be used in the pocket.

REVEGO uno + duo | Single door and double door combined

Double door ordering information

1	Pocket profile set with TIP - ON		Blum No		Code	
	Nominal length NL (mm)	Min. pocket depth POT* (mm)	Left	Right	Left	Right
	450	550	802P450D.L3	802P450D.R3	7116515	7116516
	525	625	802P525D.L3	802P525D.R3	7116517	7116518
	600	700	802P600D.L3	802P600D.R3	7116519	7116520
	675	775	802P675D.L3	802P675D.R3	7116521	7116522
	750	850	802P750D.L3	802P750D.R3	7116523	7116524

* Specification without pocket back. A back construction with a thickness of at least 3mm is required.
Pocket and roller profiles as well as TIP - ON unit pocket can be shortened to any nominal length.

Consisting of:		
1a	1 x	Top pocket profile
1b	1 x	Bottom pocket profile
1c	1 x	Roller profile
1d	1 x	TIP - ON unit pocket
1e	6 x	Fixing clips
1f	1 x	BLUMOTION unit pocket
1g	5 x	Attachment for pocket cover strip

2	Hinge bracket set with TIP - ON	Blum No		Code	
	Pocket height (mm)	Left	Right	Left	Right
	1142 - 1356	802T1140.L3	802T1140.R3	7116525	7116526
	1357 - 1506	802T1350.L3	802T1350.R3	7116527	7116528
	1507 - 1656	802T1500.L3	802T1500.R3	7116529	7116530
	1657 - 1806	802T1650.L3	802T1650.R3	7116531	7116532
	1807 - 1956	802T1800.L3	802T1800.R3	7116533	7116534
	1957 - 2106	802T1950.L3	802T1950.R3	7116535	7116536
	2107 - 2256	802T2100.L3	802T2100.R3	7116537	7116538
	2257 - 2406	802T2250.L3	802T2250.R3	7116539	7116540
	2407 - 2556	802T2400.L3	802T2400.R3	7116541	7116542
	2557 - 2706	802T2550.L3	802T2550.R3	7116543	7116544
	2707 - 2856	802T2700.L3	802T2700.R3	7116545	7116546
	2857 - 2999	802T2850.L3	802T2850.R3	7116547	7116548

Cover strips must be shortened to the required length

Consisting of:		
2a	1 x	Hinge strip
2b	5 x	Centre hinge
2c	1 x	Roller carriage hinge
2d	1 x	TIP - ON unit door
2e	1 x	Support for door cover strip
2f	1 x	Hinge bracket
2i	1 x	Pocket cover strip, black anodised
2j	1 x	Door cover strip, black anodised
2k	4 x	Mounting for door cover strip
2l	2 - 5 x	Mountings for pocket cover strip
2m	1 x	Pocket cover strip support

REVEGO uno + duo | Single door and double door combined

Double door ordering information

Pocket connector set						
3		Application with plinth			Blum No	Code
		Pocket side thickness (mm)	Colour			
		15 - 17	Black		802V560B	7115220
		18 - 19	Black		802V580B	7115221
Pocket connector top + bottom: POVH 10mm for 0 - 6mm gap						
POVH Pocket connector height						
Consisting of:						
3a	2 x	Front pocket connector				
3b	2 x	Rear pocket connector				

Pocket connector set							
4		Application with plinth		Blum No		Code	
		Pocket side thickness (mm)	Colour	Left	Right	Left	Right
		15 - 17	Black	802V660B.L1	802V660B.R1	7115222	7115223
		18 - 19	Black	802V680B.L1	802V680B.R1	7115224	7115225
Top pocket connector: POVH 10mm for 0 - 6mm gap							
Bottom pocket connector: POVH 3mm for gap from 7 - 13mm							
POVH Pocket connector height							
Consisting of:							
4a	2 x	Front pocket connector					
4b	2 x	Rear pocket connector					

Pocket connector set							
5		Worktop - mounted cabinet application		Blum No		Code	
		Pocket side thickness (mm)	Colour	Left	Right	Left	Right
		15 - 17	Black	802V760B.L3	802V760B.R3	7116549	7116550
		18 - 19	Black	802V780B.L3	802V780B.R3	7116551	7116552
Top pocket connector: POVH 10mm for 0 - 6mm gap							
Bottom pocket connector: POVH 3mm for gap from 3 - 6mm							
POVH Pocket connector height							
Consisting of:							
5a	2 x	Front pocket connector					
5b	2 x	Rear pocket connector					

REVEGO uno + duo | Single door and double door combined

Double door ordering information

6		Track set		Blum No		Code	
		LWA double door (mm)	Colour	Left	Right	Left	Right
		1050	Black anodised	802L1050DL3	802L1050DR3	7116500	7116501
		1200	Black anodised	802L1200DL3	802L1200DR3	7116502	7116503
		1250	Black anodised	802L1250DL3	802L1250DR3	7116504	7116505
		1350	Black anodised	802L1350DL3	802L1350DR3	7116506	7116507
Track can be shortened to any length.							
LWA2 Internal width within the application							
Consisting of:							
6a	**1 x**	Track					
6b	**1 x**	Roller carriage					
6c	**1 x**	Roller carriage transporter					
6d	**2 x**	Mounting for track cover panels					
6e	**1 x**	Catch plate, black					
6f	**2 x**	Spacer					

8		Assembly set for a single door and double door combined	Blum No		Code	
		LWA1 single door (mm)	Left	Right	Left	Right
		600	802M6003.L3	802M6003.R3	7116509	7116510
		700	802M7003.L3	802M7003.R3	7116511	7116512
		800	802M8003.L3	802M8003.R3	7116513	7116514
Track extension can be shortened to any length.						
Internal width within the application, single door						
6d	**1 x**	Mounting for track cover panel				
6f	**1 x**	Spacer				
7a	**1 x**	Track fixing				
7b	**1 x**	Cover for track fixing				
7c	**2 x**	Pin for track fixing				
8a	**1 x**	Track extension				
8d	**1 x**	Track connection				
8e	**1 x**	Cover for track connection				
8f	**1 x**	Support angle for depth adjustment				
8i	**1 x**	Inter - door support (right + left)				

REVEGO uno + duo | Single door and double door combined

Double door ordering information

Z	Accessories

	Inner door support incl. tip - assist	Blum No	Code
	Length of support: 218mm	802ZA030	7115227
	Length of support: 350mm	802ZA031	7116555
For additional support on the worktop area, plinth front, cabinet, etc.			

	Scuff Guard	Blum No	Code
	For front thicknesses starting from 23mm	802ZA00S	7115226
	For front thicknesses less than 23mm, the scuff guard can be used as additional front protection		
Consisting of:			
3 x	External pocket side scuff guard		
2 x	Internal pocket side scuff guard		

	Screws	Pack Qty	Blum No	Code
	6 x 14.5mm system screws, nickel plated	1,000	661.1450.HG	7115105
	6 x 14.5mm system screws, onyx black	1,000	661.1450.HG	7116554

	Pocket Connector	Blum No	Code
	Rear pocket connector, pocket connector height (POVH) 10mm	801V5002	7116576
Additional pocket connector for set - back plinth leg			

	EXPANDO T - for thin fronts	Blum No	Code
	EXPANDO T - single	70T4532T	7102466
EXPANDO T suitable for thin fronts - see page 83			
For front thicknesses less than 18mm, we recommend a trial application			
Screws are not included in the scope of delivery			

Alignment/adjustment fitting for distorted doors		Code
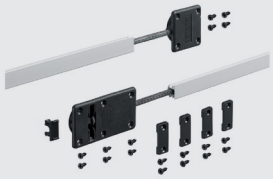	Alignment/adjustment fitting – Aluminium - For door / front thicknesses of 18-30mm. - Maximum door / front panel height 2600mm. - Length of the adjustment fitting 1990mm, can be shortened as required. - It is recommended that 2 vertical adjustment fittings are installed near the outer edge.	7113636
	Alignment/adjustment fitting – Plastic - For door / front panel thicknesses from 16mm. - Maximum door / front panel height 2600mm. - Length of the adjustment fitting 1990mm, can be shortened as required. - It is recommended that 2 vertical adjustment fittings are installed near the outer edge.	7113858

Please refer to the Lincoln Sentry website for installation instructions and drilling information.

REVEGO uno + duo | Single door and double door combined

Single door ordering information

1	Pocket profile set with TIP - ON		Blum No		Code	
	Nominal length NL (mm)	Min. pocket depth POT* (mm)	Left	Right	Left	Right
	450	550	801P450E.L3	801P450E.R3	7116404	7116405
	500	600	801P500E.L3	801P500E.R3	7116466	7116467
	600	700	801P600E.L3	801P600E.R3	7116468	7116469
	700	800	801P700E.L3	801P700E.R3	7116470	7116471
	800	900	801P800E.L3	801P800E.R3	7116472	7116473

* Specification without pocket back. A back construction with a thickness of at least 3mm is required.
Pocket profiles and TIP - ON unit pocket can be shortened to any nominal length.

Consisting of:		
1a	1 x	Top pocket profile
1b	1 x	Bottom pocket profile
1d	1 x	TIP - ON unit pocket
1e	5 x	Fixing clips
1f	1 x	BLUMOTION unit pocket
1g	5 x	Attachment for pocket cover strip
1h	1 x	BLUMATIC unit
1i	2 x	Door stabiliser: runner profile incl. end cap, black anodised

2	Hinge bracket set with TIP-ON		Blum No		Code	
	Pocket height (mm)		Left	Right	Left	Right
	1142 - 1356		801T1140.L3	801T1140.R3	7116474	7116475
	1357 - 1506		801T1350.L3	801T1350.R3	7116476	7116477
	1507 - 1656		801T1500.L3	801T1500.R3	7116478	7116479
	1657 - 1806		801T1650.L3	801T1650.R3	7116480	7116481
	1807 - 1956		801T1800.L3	801T1800.R3	7116482	7116483
	1957 - 2106		801T1950.L3	801T1950.R3	7116484	7116485
	2107 - 2256		801T2100.L3	801T2100.R3	7116486	7116487
	2257 - 2406		801T2250.L3	801T2250.R3	7116488	7116489
	2407 - 2556		801T2400.L3	801T2400.R3	7116490	7116491
	2557 - 2706		801T2550.L3	801T2550.R3	7116492	7116493
	2707 - 2856		801T2700.L3	801T2700.R3	7116494	7116495
	2857 - 2999		801T2850.L3	801T2850.R3	7116496	7116497

Cover strips must be shortened to the required length

Consisting of:		
2a	1 x	Hinge strip, black
2f	1 x	Hinge bracket
2g	1 x	TIP - ON spacer
2h	1 x	TIP - ON incl. catch plate, black
2i	1 x	Pocket cover strip, black anodised
2l	3 - 5 x	Mountings for pocket cover strip
-	21 x	System screws for 1i, 2a and 2g, 6 x 14.5mm, black

REVEGO uno + duo | Single door and double door combined

Single door ordering information

Pocket connector set					
3	Application with plinth			Blum No	Code
	Pocket side thickness (mm)	Colour			
	15 - 19	Black		801V505B	7115172
Pocket connector top + bottom: POVH 10mm for 0 - 6mm gap					
POVH Pocket connector height					
Consisting of:					
3a	2 x	Front pocket connector			
3b	2 x	Rear pocket connector			

Pocket connector set						
4	Application with plinth		Blum No		Code	
	Pocket side thickness (mm)	Colour	Left	Right	Left	Right
	15 - 19	Black	801V605B.L1	801V605B.R1	7115173	7115174
Top pocket connector: POVH 10mm for 0 - 6mm gap						
Bottom pocket connector: POVH 3mm for gap from 7 - 13mm						
POVH Pocket connector height						
Consisting of:						
4a	2 x	Front pocket connector				
4b	2 x	Rear pocket connector				

Pocket connector set						
5	Worktop - mounted cabinet application		Blum No		Code	
	Pocket side thickness (mm)	Colour	Left	Right	Left	Right
	15 - 19	Black	801V705B.L3	801V705B.R3	7116498	7116499
Top pocket connector: POVH 10mm for 0 - 6mm gap						
Bottom pocket connector: POVH 3mm for gap from 3 - 6mm						
POVH Pocket connector height						
Consisting of:						
5a	2 x	Front pocket connector				
5b	2 x	Rear pocket connector				

REVEGO uno + duo | Single door and double door combined

Single door ordering information

Z	Accessories

	Scuff Guard	Blum No	Code
	For front thicknesses starting from 23mm	801ZA00S	7115175
	For front thicknesses less than 23mm, the scuff guard can be used as additional front protection		
Consisting of:			
3 x	External pocket side scuff guard (POAS)		

	Screws	Pack Qty	Blum No	Code
	6 x 14.5mm system screws, nickel plated	1,000	661.1450.HG	7115105
	6 x 14.5mm system screws, onyx black	1,000	661.1450.HG	7116554

	Pocket Connector	Blum No	Code
	Rear pocket connector, pocket connector height (POVH) 10mm	801V5002	7116576
Additional pocket connector for set - back plinth leg			

	EXPANDO T - for thin fronts	Blum No	Code
	EXPANDO T - single	70T4532T	7102466
EXPANDO T suitable for thin fronts - see page 83			
For front thicknesses less than 18mm, we recommend a trial application			
Screws are not included in the scope of delivery			

Alignment/adjustment fitting for distorted doors		Code
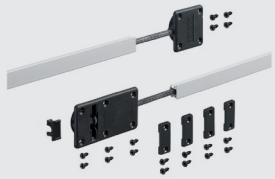	Alignment/adjustment fitting – Aluminium - For door / front thicknesses of 18-30mm. - Maximum door / front panel height 2600mm. - Length of the adjustment fitting 1990mm, can be shortened as required. - It is recommended that 2 vertical adjustment fittings are installed near the outer edge.	7113636
	Alignment/adjustment fitting – Plastic - For door / front panel thicknesses from 16mm. - Maximum door / front panel height 2600mm. - Length of the adjustment fitting 1990mm, can be shortened as required. - It is recommended that 2 vertical adjustment fittings are installed near the outer edge.	7113858

Please refer to the Lincoln Sentry website for installation instructions and drilling information.

REVEGO uno + duo | Single door and double door combined

Planning

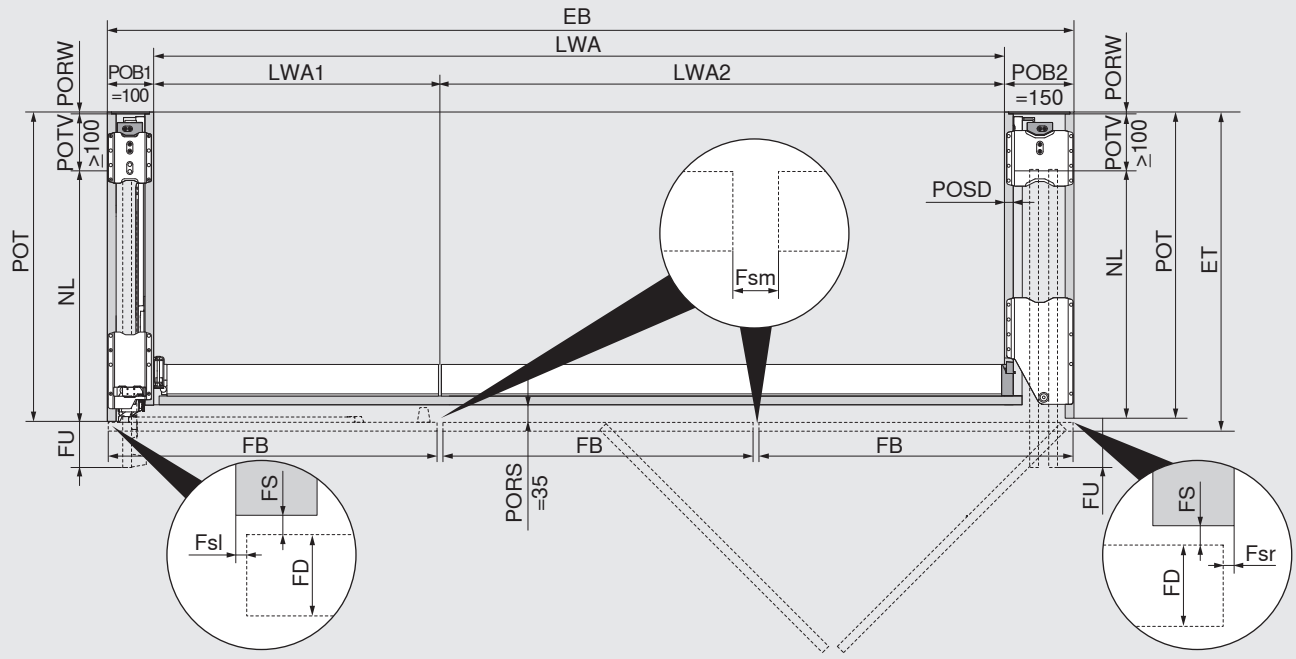

Installation width/internal width within the application
EB = LWA1 + LWA2 + POB1 (100mm) + POB2 (150mm)
Front width/front protrusion
Double door: FB = (LWA2 + POB2 - Fsl - Fsm - Fsr): 2 (fronts)
Single door: FB = LWA1 + POB1 - Fsl - Fsr
Fsl/Fsr = 1.0 - 4.0mm; Fsm = 2.0 - 8.0mm
Max. NL = FB + 8mm
FU = FB - NL + 15mm
(min. FU = 7mm)
Installation depth/pocket depth
ET = POT + FS (2mm) + FD
FD = 18 - 26mm
Min. POT = NL + POTV (≥ 100mm) + PORW (≥ 3mm)
POSD = 15 - 19mm

- By cutting the profiles to size, the front protrusion (FU) can be customised.
- To ensure optimum functionality, the fronts are at a slight angle inside the pocket.
- The internal width within the application determines the maximum width available for the internal cabinetry.
- For front thicknesses (FD) less than 18mm (possible depending on material/stability), we recommend a trial application.

EB	Installation width
ET	Installation depth
Fsl	Gap left
Fsr	Gap right
Fsm	Centre side gap (between the fronts)
FB	Front width
FD	Front thickness
FS	Front gap
FU	Front protrusion
LWA	Internal width within the application
LWA1	Internal width within the application, single door
LWA2	Internal width within the application, double door
NL	Nominal length
POB1	Single door pocket width
POB2	Double door pocket width
POT	Pocket depth
PORS	Pocket back cut
PORW	Pocket back
POSD	Pocket side thickness
POTV	Pocket depth loss

REVEGO uno + duo | Single door and double door combined

Planning

Minimum side gap

Pocket to pocket/adjacent cabinet

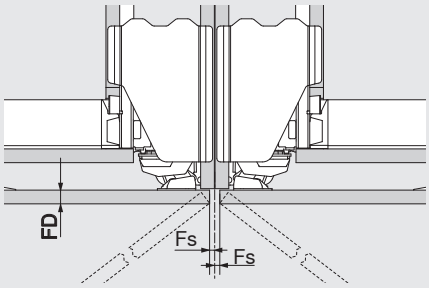

Pocket to wall/decor panel

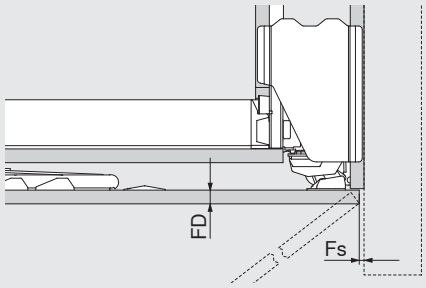

FD (mm)	Min. Fs (mm)
18 - 20	2
20.1 - 23	2.5
23.1 - 26	3

FD Front thickness
Fs Side gap

Installation height, front height

Application with plinth

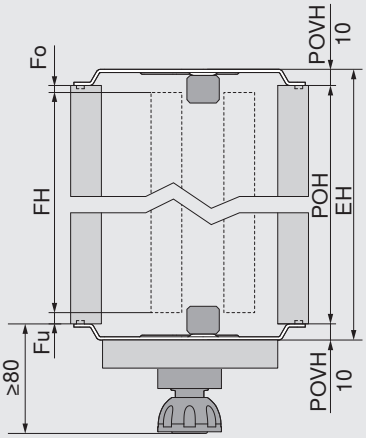

FH = POH - Fo - Fu

EH = POH + POVH top and bottom

POVH 10mm: gap 0 - 6mm

- Take into account that the pocket must be tilted during installation.
- Minimum distance to the next movable element above 3mm, for non - movable elements a front insertion space of 6mm must be taken into account
- The pocket connector height must be taken into account during planning
- Minimum plinth height 80mm

EH Installation height
Fo Top gap
Fu Bottom gap
FH Front height
POH Pocket height
POVH Pocket connector height

Application with set - back plinth

Additional rear pocket connector

REVEGO uno

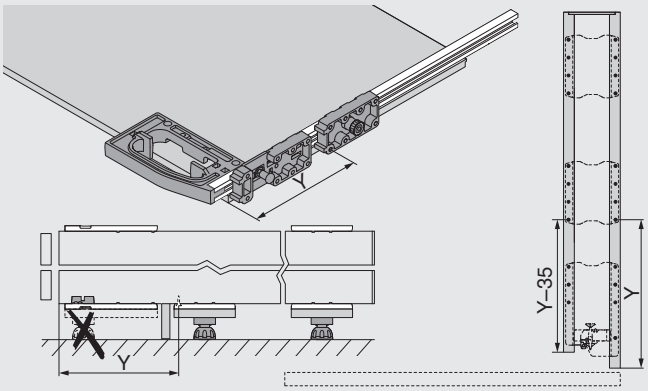

REVEGO duo

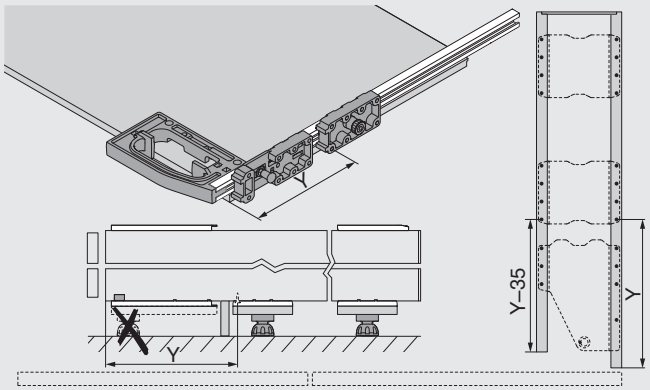

REVEGO uno + duo | Single door and double door combined

Planning

Installation height, front height

Application without plinth

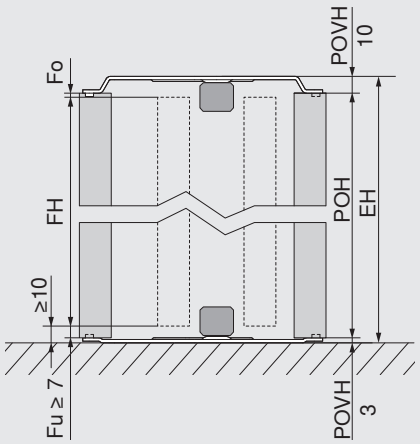

FH = POH - Fo - Fu

EH = POH + POVH top and bottom

POVH top 10mm: gap 0 - 6mm

POVH bottom 3mm: gap from 7 - 13mm

- Take into account that the pocket must be tilted during installation.
- Minimum distance from the bottom front edge to the floor or next element below is 10mm
- Minimum distance to the next movable element above 3mm, for non - movable elements a front insertion space of 6mm must be taken into account
- The pocket connector height must be taken into account during planning

EH	Installation height
Fo	Top gap
Fu	Bottom gap
FH	Front height
POH	Pocket height
POVH	Pocket connector height

Installation height, front height

Worktop - mounted cabinet application

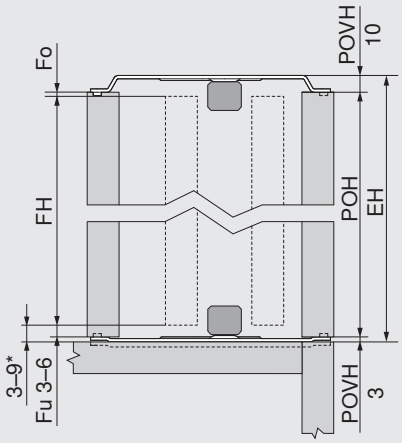

* If the distance between the front and the next element below is < 6mm, the pocket connector must be embedded in the worktop

FH = POH - Fo - Fu

EH = POH + POVH top and bottom

POVH top 10mm: gap 0 - 6mm

POVH bottom 3mm: gap from 3 - 6mm

- Take into account that the pocket must be tilted during installation.
- The minimum distance between the front and the next element below with a flush front (e.g. worktop is not visible) is 3mm
- The minimum distance between the front and the next element below with a protruding element (e.g. worktop is visible) is 6mm
- Minimum distance to the next movable element above 3mm, for non - movable elements a front insertion space of 6mm must be taken into account
- A trial application is recommended in the edge areas
- The pocket connector height must be taken into account during planning
- The distance between the front and the next element above and below is made up of Fu or Fo + POVH

EH	Installation height
Fo	Top gap
Fu	Bottom gap
FH	Front height
POH	Pocket height
POVH	Pocket connector height

REVEGO uno + duo | Single door and double door combined

Planning

Max. front weights for worktop - mounted cabinets in kg per front

Front height FH (mm)	Front width FB (mm)						
	450	500	550	600	650	700	750
1130 - 1349	22	20	18	16	15	14	13
1350 - 1499	23	21	19	18	17	16	15
1500 - 1649	25	23	21	19	18	17	16
1650 - 1799	27	25	23	21	20	19	18

Note

REVEGO uno:
- The max. front width when planning a worktop - mounted cabinet is 750mm
- The max. pocket height when planning a worktop - mounted cabinet is 1806mm

REVEGO duo:
- The max. pocket height when planning a worktop - mounted cabinet is 1806mm

Inter - door support

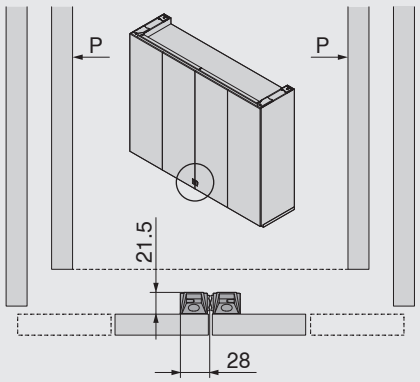

- Supports a single door against a double door, two single doors against each other or two double doors against each other

P Pocket

Inner door support incl. tip - assist

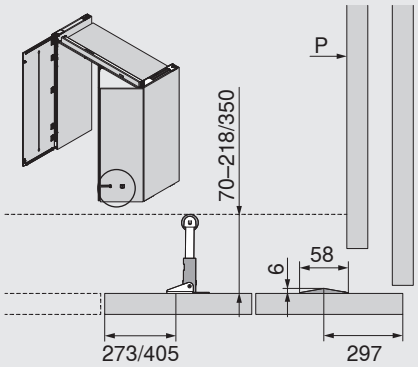

- Support on the worktop area, plinth front, cabinet, etc.
- Distance from internal cabinetry: 70 - 218/350mm
- Assembly height of the door support ideally as far down as possible, however up to a maximum height of 1000mm from the front bottom edge

P Pocket

REVEGO uno + duo | Single door and double door combined

Planning

Track installation dimension

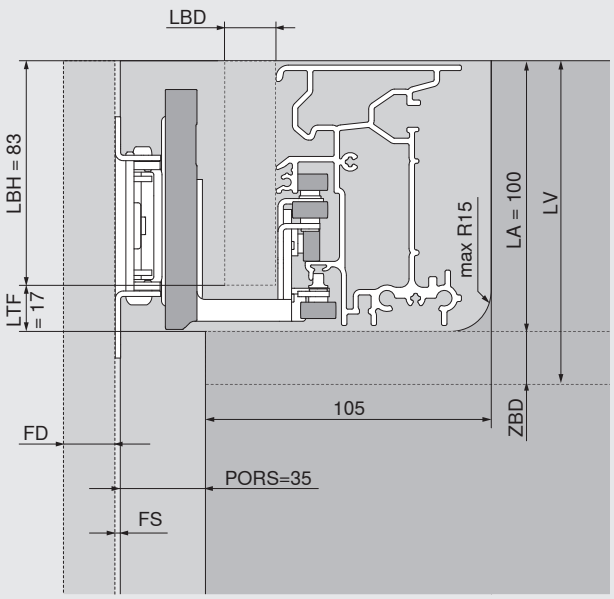

LBH = 83mm

LBD = 15 - 19mm
(the spacer must be used ≤ 17mm)

LTF = 17mm

LA = 100mm

LV = LA + ZBD (≥ 15mm)

- We recommend using a cross member to stabilise the fixed shelf. Minimum distance to front edge of internal pocket side = 170mm
- A solid connection between the fixed shelf and the pocket with connector fittings is recommended for an attractive gap layout
- No mounting of add - on parts directly on the track

FD	Front thickness
LA	Track cut - out
LV	Track installation
LBD	Track cover panel thickness
LBH	Track cover panel height
LTF	Track gap
PORS	Pocket back cut
ZBD	Fixed shelf thickness

Internal height and internal depth within the application

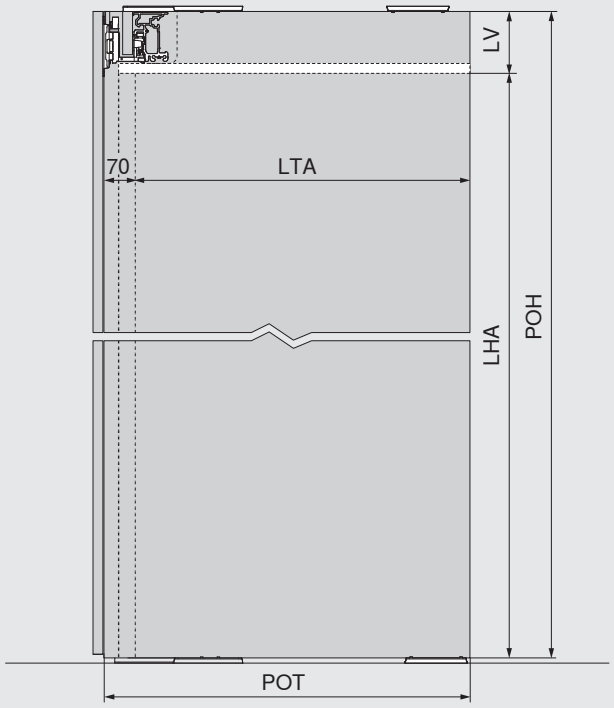

LHA = POH - LV

LTA = POT - 70mm

- The internal height/internal depth within the application determines the maximum height/depth available for the internal cabinetry.

LHA	Internal height within the application
LTA	Internal depth within the application
LV	Track installation
POH	Pocket height
POT	Pocket depth

REVEGO duo + duo | Two double doors combined

REVEGO duo + duo - double door right and double door left

Space requirement			
Installation dimensions (mm)	**Installation width EB**	**Installation height EH**	**Installation depth ET**
	1800 - 3000	1155 - 3012	from 573
Internal dimensions within the application (mm)	**Internal width within the application LWA**	**Internal height within the application LHA**	**Internal depth within the application LTA**
	up to 2700	up to 2884	from 483
Pocket dimensions (mm)	**Pocket width POB**	**Pocket height POH**	**Pocket depth POT**
	150	1142 - 2999	from 553
Front dimensions (mm)	**Front width FB**	**Front height FH**	**Front thickness FD**
	442 - 748	1130 - 2980	18 - 26
Front weight FG	up to 35 kg per front		

Overview

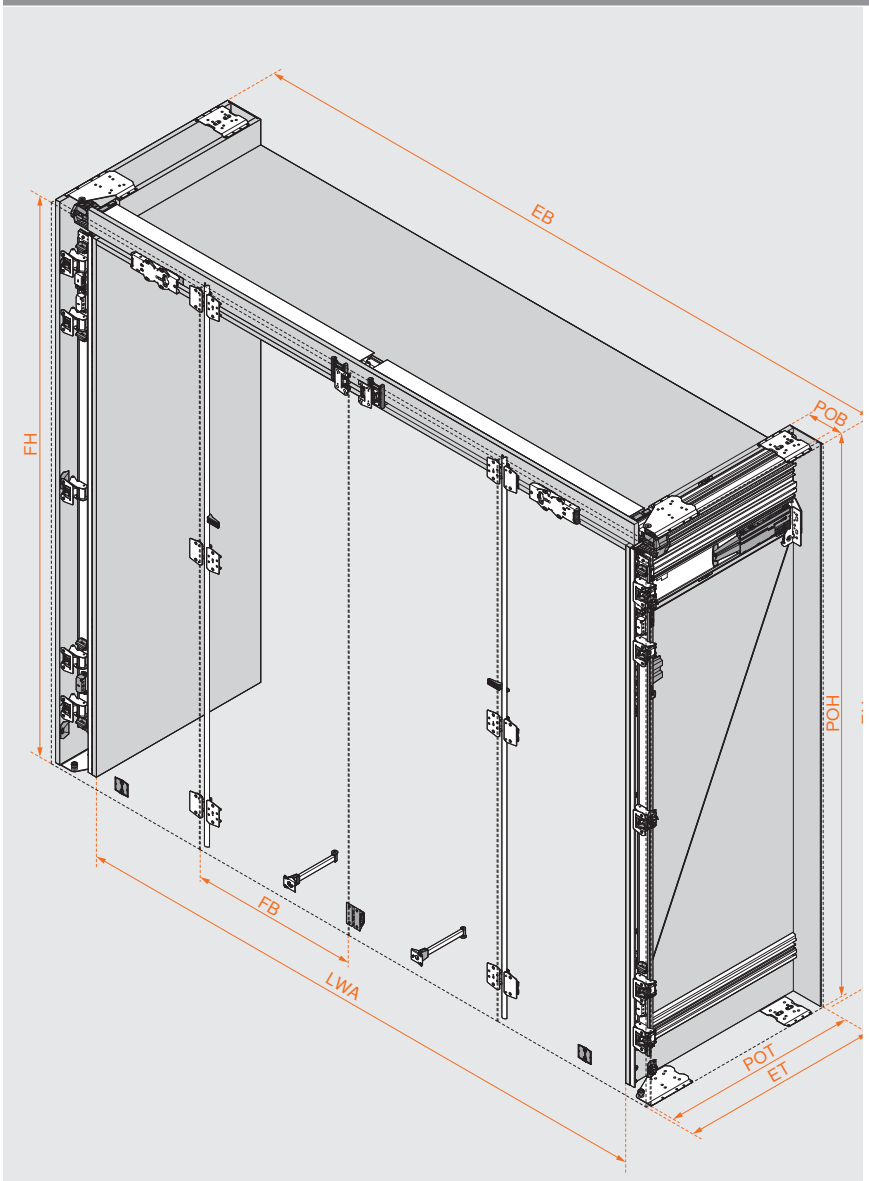

Fittings selection made easy

It is easy to work out the fittings and drilling positions you need using the Product Configurator.

With every product configuration, you will receive manufacturing drawings, cutting lists for wooden parts and fittings, 3D CAD data for your design software, as well as CAM programs including drilling information for direct machining on your CNC machine, in addition to the checked parts list.

Enter the web code in the Product Configurator, click on the short URL or scan the QR code.
Don't have login information for digital services yet? Register here and get access free of charge.

Web code **DQIVMM**

Product Configurator
www.blum.com/rev12

Assembly and adjustment
www.blum.com/rev6

REVEGO duo + duo | Two double doors combined

Component overview

Pocket

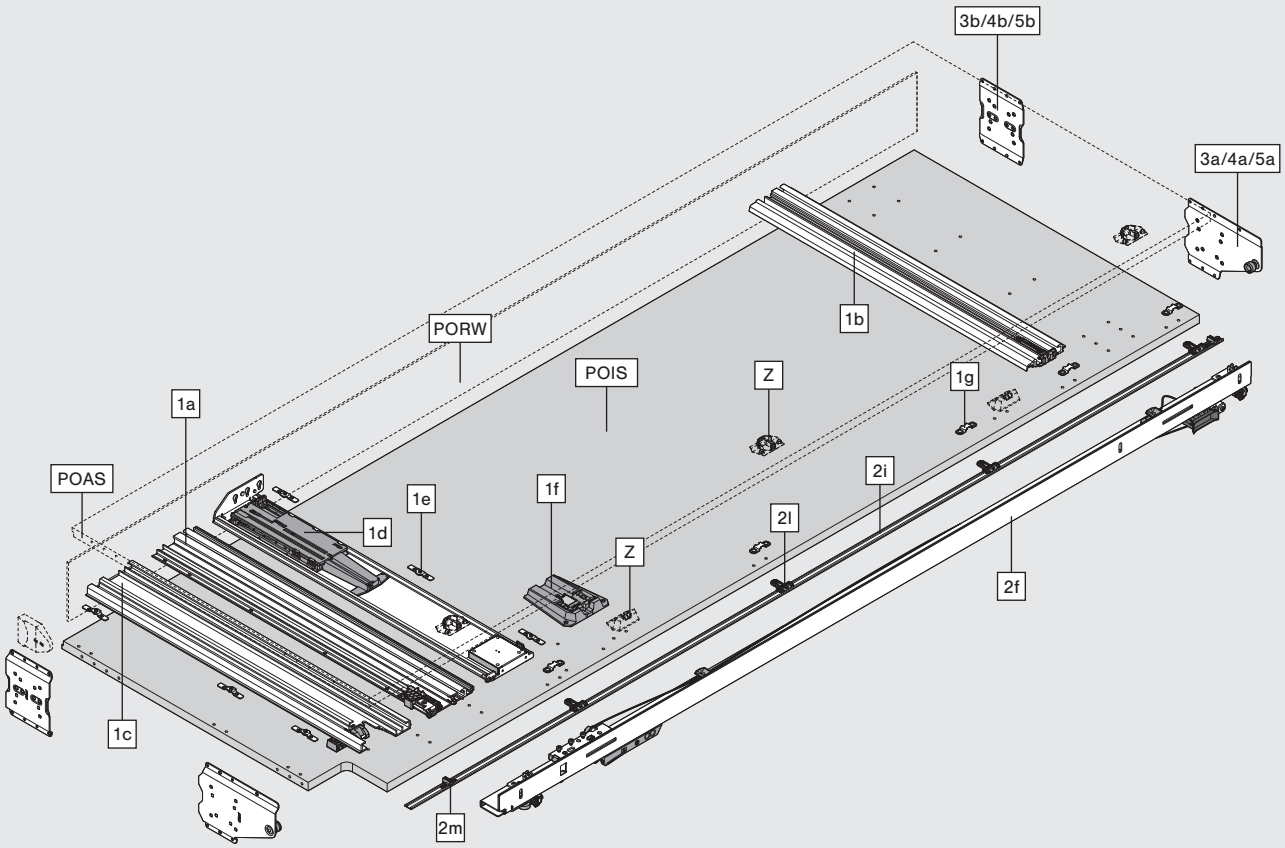

Consisting of:	
1a	Top pocket profile
1b	Bottom pocket profile
1c	Roller profile
1d	TIP - ON unit pocket
1e	Fixing clips
1f	BLUMOTION unit pocket
1g	Attachment for pocket cover strip
2f	Hinge bracket
2i	Pocket cover strip
2l	Mounting for pocket cover strip
2m	Pocket cover strip support
3a/4a/5a	Front pocket connector
3b/4b/5b	Rear pocket connector
Z	Scuff guard
POAS	External pocket side
POIS	Internal pocket side
PORW	Pocket back

REVEGO duo + duo | Two double doors combined

Component overview

Front

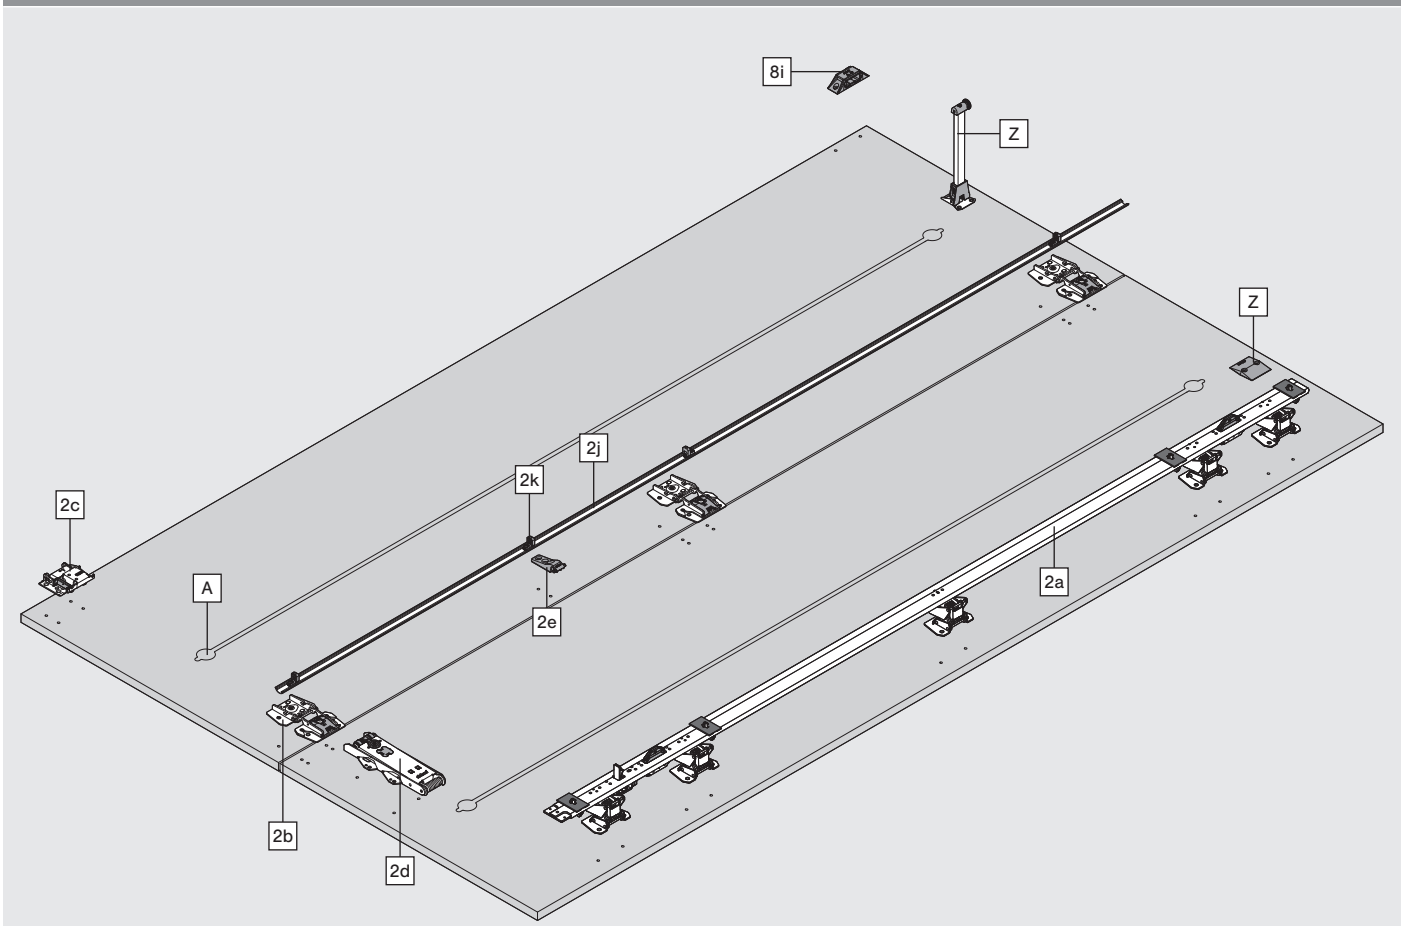

Consisting of:	
2a	Hinge strip
2b	Centre hinge
2c	Roller carriage hinge
2d	TIP - ON unit door
2e	Support for door cover strip
2j	Door cover strip
2k	Mounting for door cover strip
8i	Inter - door support
Z	Inner door support incl. tip - assist

A We recommend at least one alignment fitting per front with a maximum installation height of 20mm.
The space available between the pair of folding fronts is 20mm.

REVEGO duo + duo | Two double doors combined

Component overview

Track

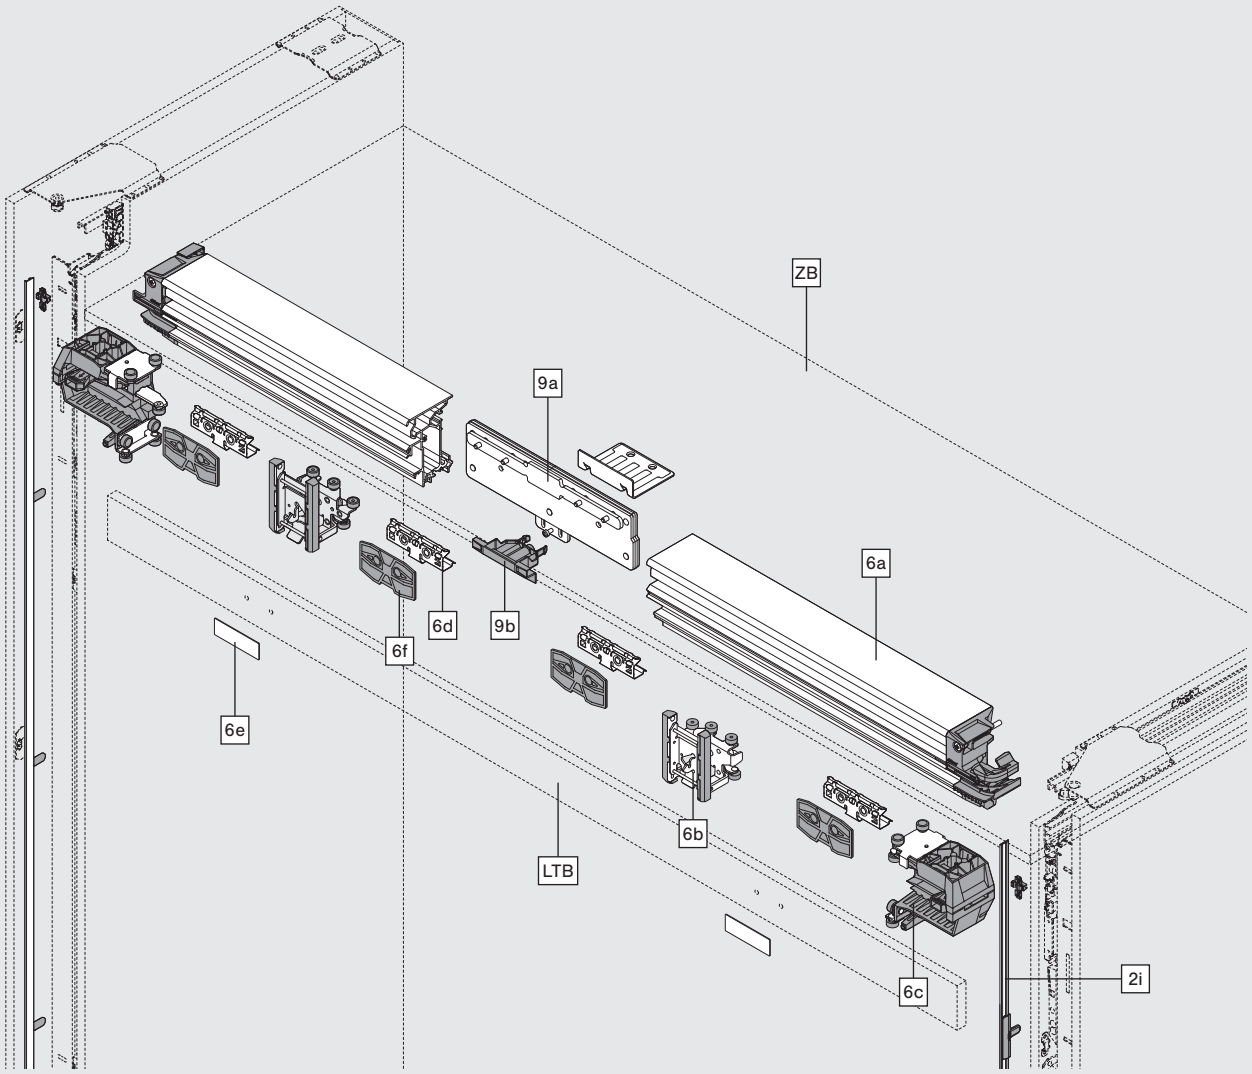

Consisting of:	
2i	Pocket cover strip incl. mounting
6a	Track
6b	Roller carriage
6c	Roller carriage transporter
6d	Mounting for track cover panels
6e	Catch plate
6f	Spacer
9a	Track connection
9b	Cover for track connection
9c	Support angle for depth adjustment
LTB	Track cover panel
ZB	Fixed shelf

REVEGO duo + duo | Two double doors combined

Ordering information

1	Pocket profile set with TIP - ON		Blum No		Code	
	Nominal length NL (mm)	Min. pocket depth POT* (mm)	Left	Right	Left	Right
	450	550	802P450D.L3	802P450D.R3	7116515	7116516
	525	625	802P525D.L3	802P525D.R3	7116517	7116518
	600	700	802P600D.L3	802P600D.R3	7116519	7116520
	675	775	802P675D.L3	802P675D.R3	7116521	7116522
	750	850	802P750D.L3	802P750D.R3	7116523	7116524

* Specification without pocket back. A back construction with a thickness of at least 3mm is required.
Pocket and roller profiles as well as TIP - ON unit pocket can be shortened to any nominal length.

Consisting of:		
1a	1 x	Top pocket profile
1b	1 x	Bottom pocket profile
1c	1 x	Roller profile
1d	1 x	TIP - ON unit pocket
1e	6 x	Fixing clips
1f	1 x	BLUMOTION unit pocket
1g	5 x	Attachment for pocket cover strip

Order set for each double door, 1x left and 1x right

2	Hinge bracket set with TIP - ON	Blum No		Code	
	Pocket height (mm)	Left	Right	Left	Right
	1142 - 1356	802T1140.L3	802T1140.R3	7116525	7116526
	1357 - 1506	802T1350.L3	802T1350.R3	7116527	7116528
	1507 - 1656	802T1500.L3	802T1500.R3	7116529	7116530
	1657 - 1806	802T1650.L3	802T1650.R3	7116531	7116532
	1807 - 1956	802T1800.L3	802T1800.R3	7116533	7116534
	1957 - 2106	802T1950.L3	802T1950.R3	7116535	7116536
	2107 - 2256	802T2100.L3	802T2100.R3	7116537	7116538
	2257 - 2406	802T2250.L3	802T2250.R3	7116539	7116540
	2407 - 2556	802T2400.L3	802T2400.R3	7116541	7116542
	2557 - 2706	802T2550.L3	802T2550.R3	7116543	7116544
	2707 - 2856	802T2700.L3	802T2700.R3	7116545	7116546
	2857 - 2999	802T2850.L3	802T2850.R3	7116547	7116548

Cover strips must be shortened to the required length

Consisting of:		
2a	1 x	Hinge strip
2b	5 x	Centre hinge
2c	1 x	Roller carriage hinge
2d	1 x	TIP - ON unit door
2e	1 x	Support for door cover strip
2f	1 x	Hinge bracket
2i	1 x	Pocket cover strip, black anodised
2j	1 x	Door cover strip, black anodised
2k	4 x	Mounting for door cover strip
2l	2 - 5 x	Mountings for pocket cover strip
2m	1 x	Pocket cover strip support

Order set for each double door, 1x left and 1x right

REVEGO duo + duo | Two double doors combined

Ordering information

Pocket connector set					
3	Application with plinth			Blum No	Code
	Pocket side thickness (mm)	Colour			
	15 - 17	Black		802V560B	**7115220**
	18 - 19	Black		802V580B	**7115221**
Pocket connector top + bottom: POVH 10mm for 0 - 6mm gap					
POVH Pocket connector height					
Consisting of:					
3a	**2 x**	Front pocket connector			
3b	**2 x**	Rear pocket connector			

Pocket connector set						
4	Application with plinth		Blum No		Code	
	Pocket side thickness (mm)	Colour	Left	Right	Left	Right
	15 - 17	Black	802V660B.L1	802V660B.R1	**7115222**	**7115223**
	18 - 19	Black	802V680B.L1	802V680B.R1	**7115224**	**7115225**
Top pocket connector: POVH 10mm for 0 - 6mm gap						
Bottom pocket connector: POVH 3mm for gap from 7 - 13mm						
POVH Pocket connector height						
Consisting of:						
4a	**2 x**	Front pocket connector				
4b	**2 x**	Rear pocket connector				
Order set for each double door, 1x left and 1x right						

Pocket connector set						
5	Worktop - mounted cabinet application		Blum No		Code	
	Pocket side thickness (mm)	Colour	Left	Right	Left	Right
	15 - 17	Black	802V760B.L3	802V760B.R3	**7116549**	**7116550**
	18 - 19	Black	802V780B.L3	802V780B.R3	**7116551**	**7116552**
Top pocket connector: POVH 10mm for 0 - 6mm gap						
Bottom pocket connector: POVH 3mm for gap from 3 - 6mm						
POVH Pocket connector height						
Consisting of:						
5a	**2 x**	Front pocket connector				
5b	**2 x**	Rear pocket connector				
Order set for each double door, 1x left and 1x right						

REVEGO duo + duo | Two double doors combined

Ordering information

6	Track set		Blum No		Code	
	**LWA double door (mm)**	**Colour**	**Left**	**Right**	**Left**	**Right**
	1050	Black anodised	802L1050DL3	802L1050DR3	**7116500**	**7116501**
	1200	Black anodised	802L1200DL3	802L1200DR3	**7116502**	**7116503**
	1250	Black anodised	802L1250DL3	802L1250DR3	**7116504**	**7116505**
	1350	Black anodised	802L1350DL3	802L1350DR3	**7116506**	**7116507**
Track can be shortened to any length.						
LWA Internal width within the application						
Consisting of:						
6a	**1 x**	Track				
6b	**1 x**	Roller carriage				
6c	**1 x**	Roller carriage transporter				
6d	**2 x**	Mounting for track cover panels				
6e	**1 x**	Catch plate, black				
6f	**2 x**	Spacer				
Order set for each double door, 1x left and 1x right						

9	Assembly set for two double doors combined	Blum No	Code
	Colour		
	Black	802M0004.03	**7116508**
Consisting of:			
9a	**1 x**	Track connection	
9b	**1 x**	Cover for track connection	
9c	**1 x**	Support angle for depth adjustment	
9e	**1 x**	Inter - door support (right + left)	

REVEGO duo + duo | Two double doors combined

Ordering information

Z	Accessories

	Inner door support incl. tip - assist	Blum No	Code
	Length of support: 218mm	802ZA030	7115227
	Length of support: 350mm	802ZA031	7116555
For additional support on the worktop area, plinth front, cabinet, etc.			

	Scuff Guard	Blum No	Code
	For front thicknesses starting from 23mm	802ZA00S	7115226
	For front thicknesses less than 23mm, the scuff guard can be used as additional front protection		
Consisting of:			
3 x	External pocket side scuff guard		
2 x	Internal pocket side scuff guard		

	Screws	Pack Qty	Blum No	Code
	6 x 14.5mm system screws, nickel plated	1,000	661.1450.HG	7115105
	6 x 14.5mm system screws, onyx black	1,000	661.1450.HG	7116554

	Pocket Connector	Blum No	Code
	Rear pocket connector, pocket connector height (POVH) 10mm	801V5002	7116576
Additional pocket connector for set - back plinth leg			

	EXPANDO T - for thin fronts	Blum No	Code
	EXPANDO T - single	70T4532T	7102466
EXPANDO T suitable for thin fronts - see page 83			
For front thicknesses less than 18mm, we recommend a trial application			
Screws are not included in the scope of delivery			

Alignment/adjustment fitting for distorted doors		Code
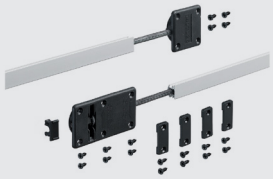	Alignment/adjustment fitting – Aluminium - For door / front thicknesses of 18-30mm. - Maximum door / front panel height 2600mm. - Length of the adjustment fitting 1990mm, can be shortened as required. - It is recommended that 2 vertical adjustment fittings are installed near the outer edge.	7113636
	Alignment/adjustment fitting – Plastic - For door / front panel thicknesses from 16mm. - Maximum door / front panel height 2600mm. - Length of the adjustment fitting 1990mm, can be shortened as required. - It is recommended that 2 vertical adjustment fittings are installed near the outer edge.	7113858

Please refer to the Lincoln Sentry website for installation instructions and drilling information.

REVEGO duo + duo | Two double doors combined

Planning

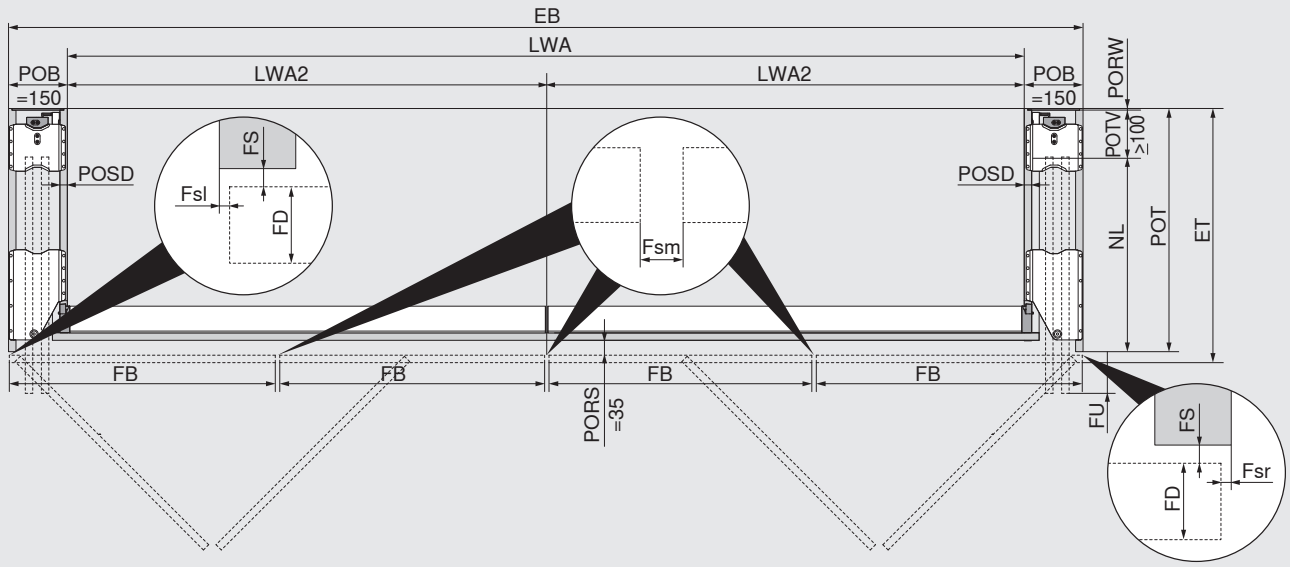

Installation width/internal width within the application
EB = 2 x LWA2 + 2 x POB (150 + 150mm)
Front width/front protrusion
FB = (EB - Fsl - 3x Fsm - Fsr): 4 (fronts)
Fsl/Fsr = 1.0 - 4.0mm; Fsm = 2.0 - 8.0mm
Max. NL = FB + 8mm
FU = FB - NL + 15mm
(min. FU = 7mm)
Installation depth/pocket depth
ET = POT + FS (2mm) + FD
FD = 18 - 26mm
Min. POT = NL + POTV (≥ 100mm) + PORW (≥ 3mm)
POSD = 15 - 19mm

- By cutting the profiles to size, the front protrusion (FU) can be customised.
- To ensure optimum functionality, the fronts are at a slight angle inside the pocket.
- The internal width within the application determines the maximum width available for the internal cabinetry.
- For front thicknesses (FD) less than 18mm (possible depending on material/stability), we recommend a trial application.

EB	Installation width
ET	Installation depth
Fsl	Gap left
Fsr	Gap right
Fsm	Centre gap (between the fronts)
FB	Front width
FD	Front thickness
FS	Front gap
FU	Front protrusion
LWA	Internal width within the application
LWA2	Internal width within the application, double door
NL	Nominal length
POB	Pocket width
POT	Pocket depth
PORS	Pocket back cut
PORW	Pocket back
POSD	Pocket side thickness
POTV	Pocket depth loss

Minimum side gap

Pocket to pocket/adjacent cabinet

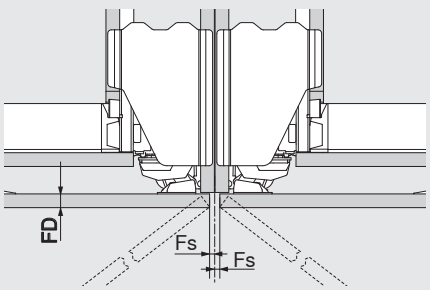

Pocket to wall/decor panel

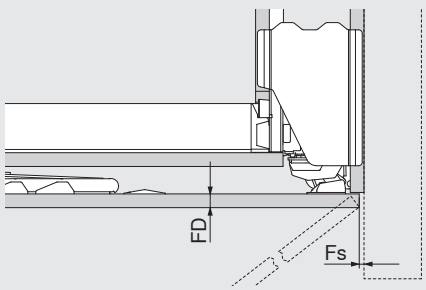

FD (mm)	Min. Fs (mm)
18 - 20	2
20.1 - 23	2.5
23.1 - 26	3

FD	Front thickness
Fs	Side gap

REVEGO duo + duo | Two double doors combined

Planning

Installation height, front height

Application with plinth

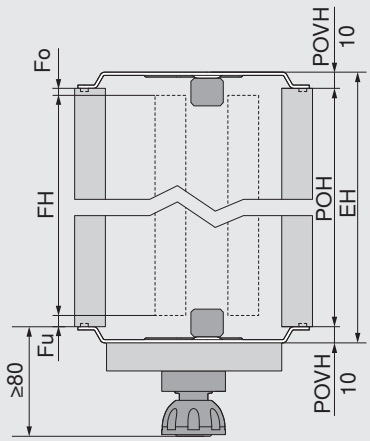

FH = POH - Fo - Fu

EH = POH + POVH top and bottom

POVH 10mm: gap 0 - 6mm

- Take into account that the pocket must be tilted during installation.
- Minimum distance to the next movable element above 3mm, for non - movable elements a front insertion space of 6mm must be taken into account
- The pocket connector height must be taken into account during planning
- Minimum plinth height 80mm

EH	Installation height
Fo	Top gap
Fu	Bottom gap
FH	Front height
POH	Pocket height
POVH	Pocket connector height

Application with set - back plinth

Additional rear pocket connector

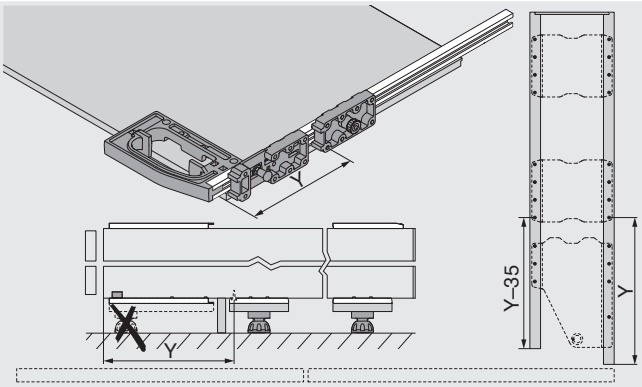

Installation height, front height

Application without plinth

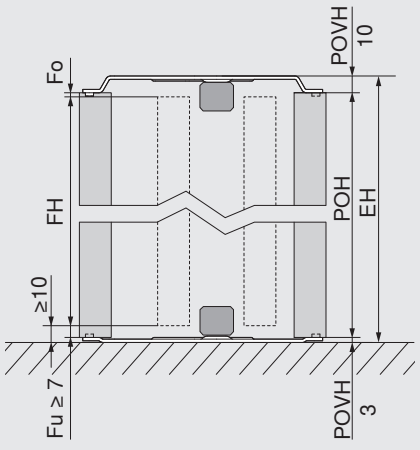

FH = POH - Fo - Fu

EH = POH + POVH top and bottom

POVH top 10mm: gap 0 - 6mm

POVH bottom 3mm: gap from 7 - 13mm

- Take into account that the pocket must be tilted during installation.
- Minimum distance from the bottom front edge to the floor or next element below is 10mm
- Minimum distance to the next movable element above 3mm, for non - movable elements a front insertion space of 6mm must be taken into account
- The pocket connector height must be taken into account during planning

EH	Installation height
Fo	Top gap
Fu	Bottom gap
FH	Front height
POH	Pocket height
POVH	Pocket connector height

REVEGO duo + duo | Two double doors combined

Planning

Installation height, front height

Worktop - mounted cabinet application

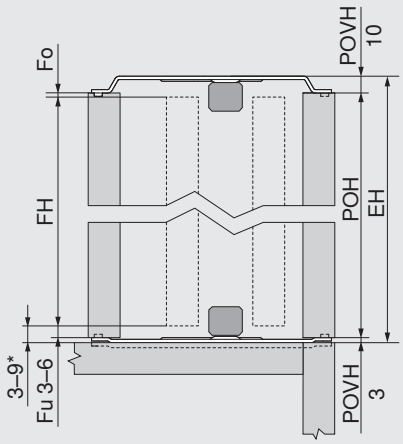

* If the distance between the front and the next element below is < 6mm, the pocket connector must be embedded in the worktop

FH = POH - Fo - Fu

EH = POH + POVH top and bottom

POVH top 10mm: gap 0 - 6mm

POVH bottom 3mm: gap from 3 - 6mm

- Take into account that the pocket must be tilted during installation.
- The minimum distance between the front and the next element below with a flush front (e.g. worktop is not visible) is 3mm
- The minimum distance between the front and the next element below with a protruding element (e.g. worktop is visible) is 6mm
- Minimum distance to the next movable element above 3mm, for non - movable elements a front insertion space of 6mm must be taken into account
- A trial application is recommended in the edge areas
- The pocket connector height must be taken into account during planning
- The distance between the front and the next element above and below is made up of Fu or Fo + POVH

EH	Installation height
Fo	Top gap
Fu	Bottom gap
FH	Front height
POH	Pocket height
POVH	Pocket connector height

Max. front weights for worktop - mounted cabinets in kg per front

Front height FH (mm)	Front width FB (mm)						
	450	500	550	600	650	700	750
1130 - 1349	22	20	18	16	15	14	13
1350 - 1499	23	21	19	18	17	16	15
1500 - 1649	25	23	21	19	18	17	16
1650 - 1799	27	25	23	21	20	19	18

Note

- The max. pocket height when planning a worktop - mounted cabinet is 1806mm

REVEGO duo + duo | Two double doors combined

Planning

Inner door support

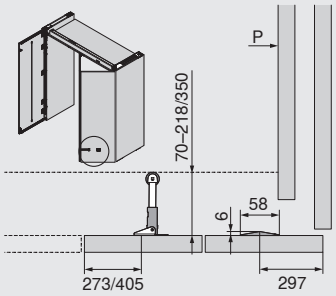

- Support on the worktop area, plinth front, cabinet, etc.
- Distance from internal cabinetry: 70 - 218/350mm
- Assembly height of the door support ideally as far down as possible, however up to a maximum height of 1000mm from the front bottom edge

P Pocket

Inter - door support

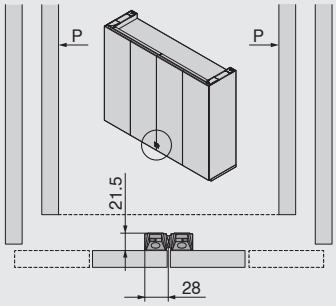

- Supports a single door against a double door, two single doors against each other or two double doors against each other

P Pocket

Track installation dimension

LBH = 83mm

LBD = 15 - 19mm
(the spacer must be used ≤ 17mm)

LTF = 17mm

LA = 100mm

LV = LA + ZBD (≥ 15mm)

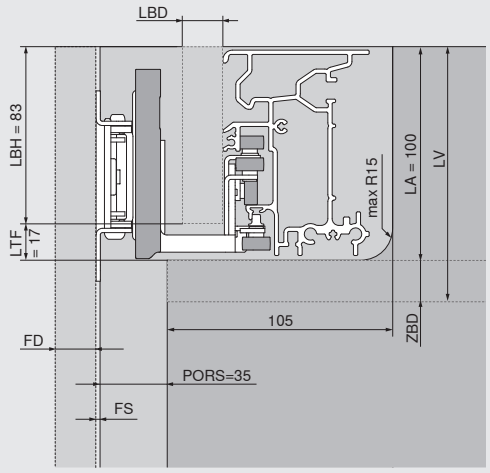

- We recommend using a cross member to stabilise the fixed shelf. Minimum distance to front edge of internal pocket side = 170mm
- A solid connection between the fixed shelf and the pocket with connector fittings is recommended for an attractive gap layout
- No mounting of add - on parts directly on the track

FD	Front thickness
LA	Track cut - out
LV	Track installation
LBD	Track cover panel thickness
LBH	Track cover panel height
LTF	Track gap
PORS	Pocket back cut
ZBD	Fixed shelf thickness

Internal height and internal depth within the application

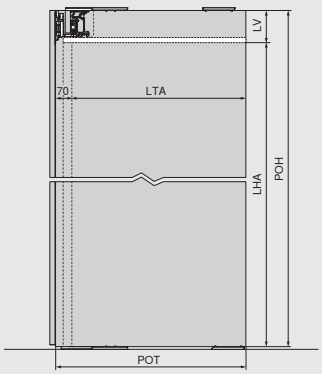

LHA = POH - LV

LTA = POT - 70mm

- The internal height/internal depth within the application determines the maximum height/depth available for the internal cabinetry

LHA	Internal height within the application
LTA	Internal depth within the application
LV	Track installation
POH	Pocket height
POT	Pocket depth

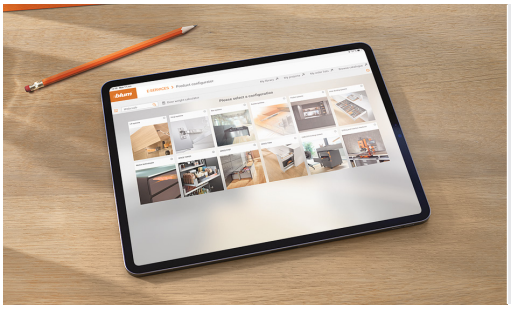

Product Configurator

Obtain the exact calculation for assembling the cut - to - size profiles quickly and efficiently using the Product Configurator. The configurator calculates all the dimensions for each configuration and also outputs them as drawings.

www.blum.com/rev1

Calculations and assembly of the profiles

REVEGO duo | Double door

Pocket cover strip, door cover strip

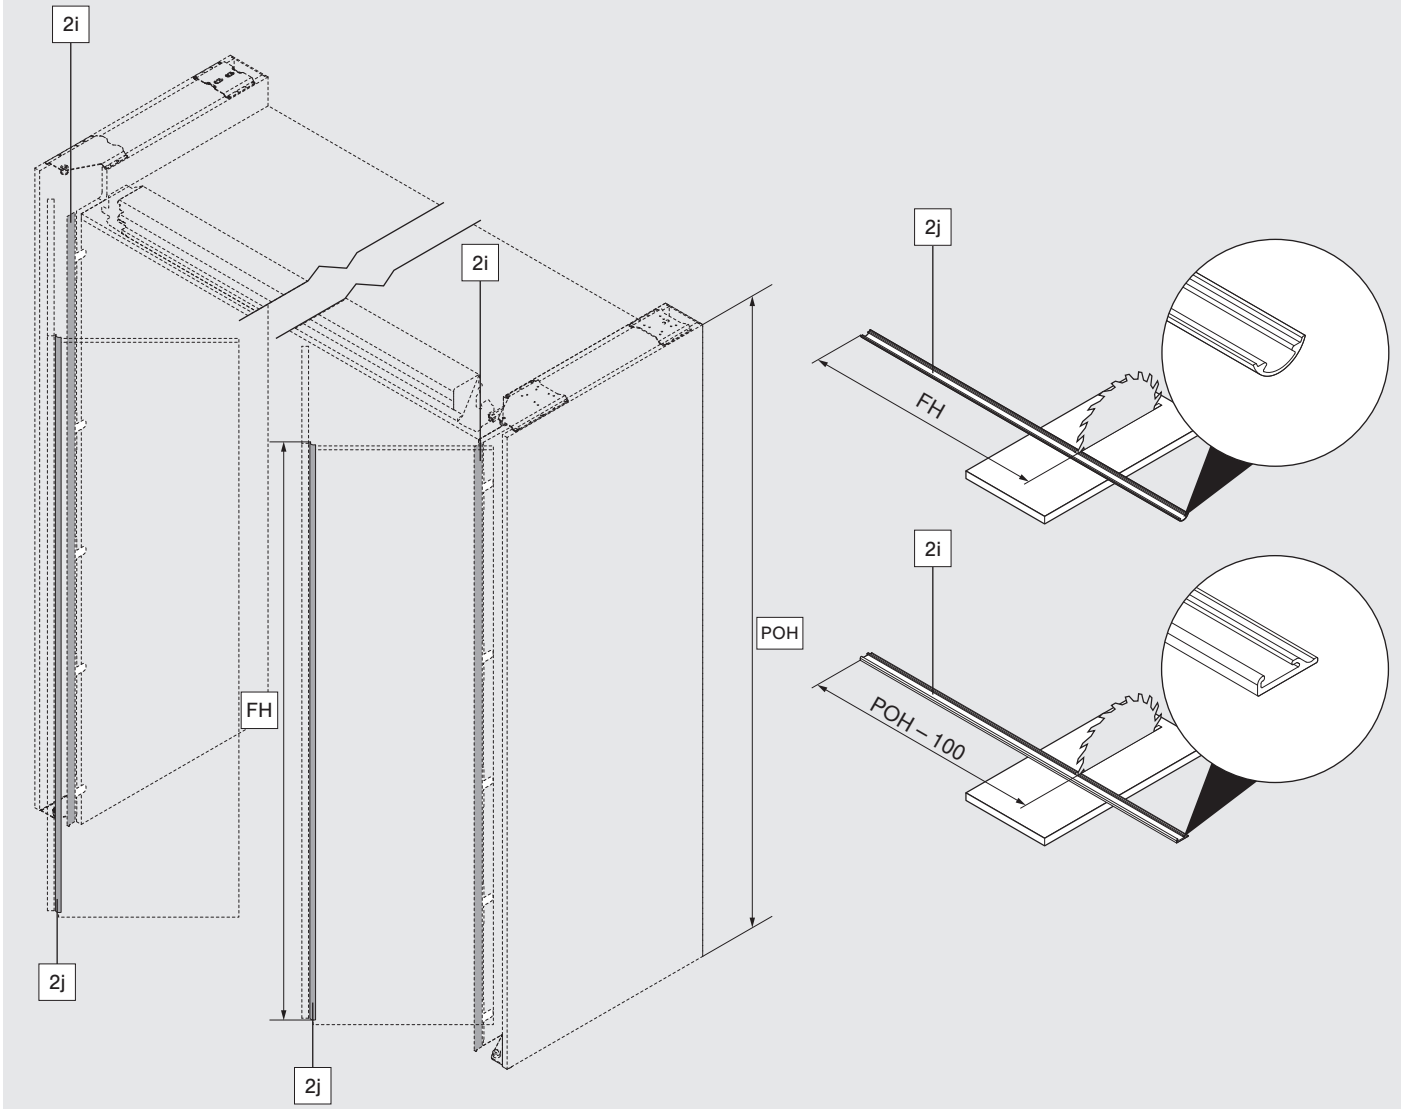

FH	Front height
POH	Pocket height
2i	Pocket cover strip
2j	Door cover strip

Calculations and assembly of the profiles

REVEGO duo | Double door

Roller profile, pocket profile, TIP - ON unit pocket

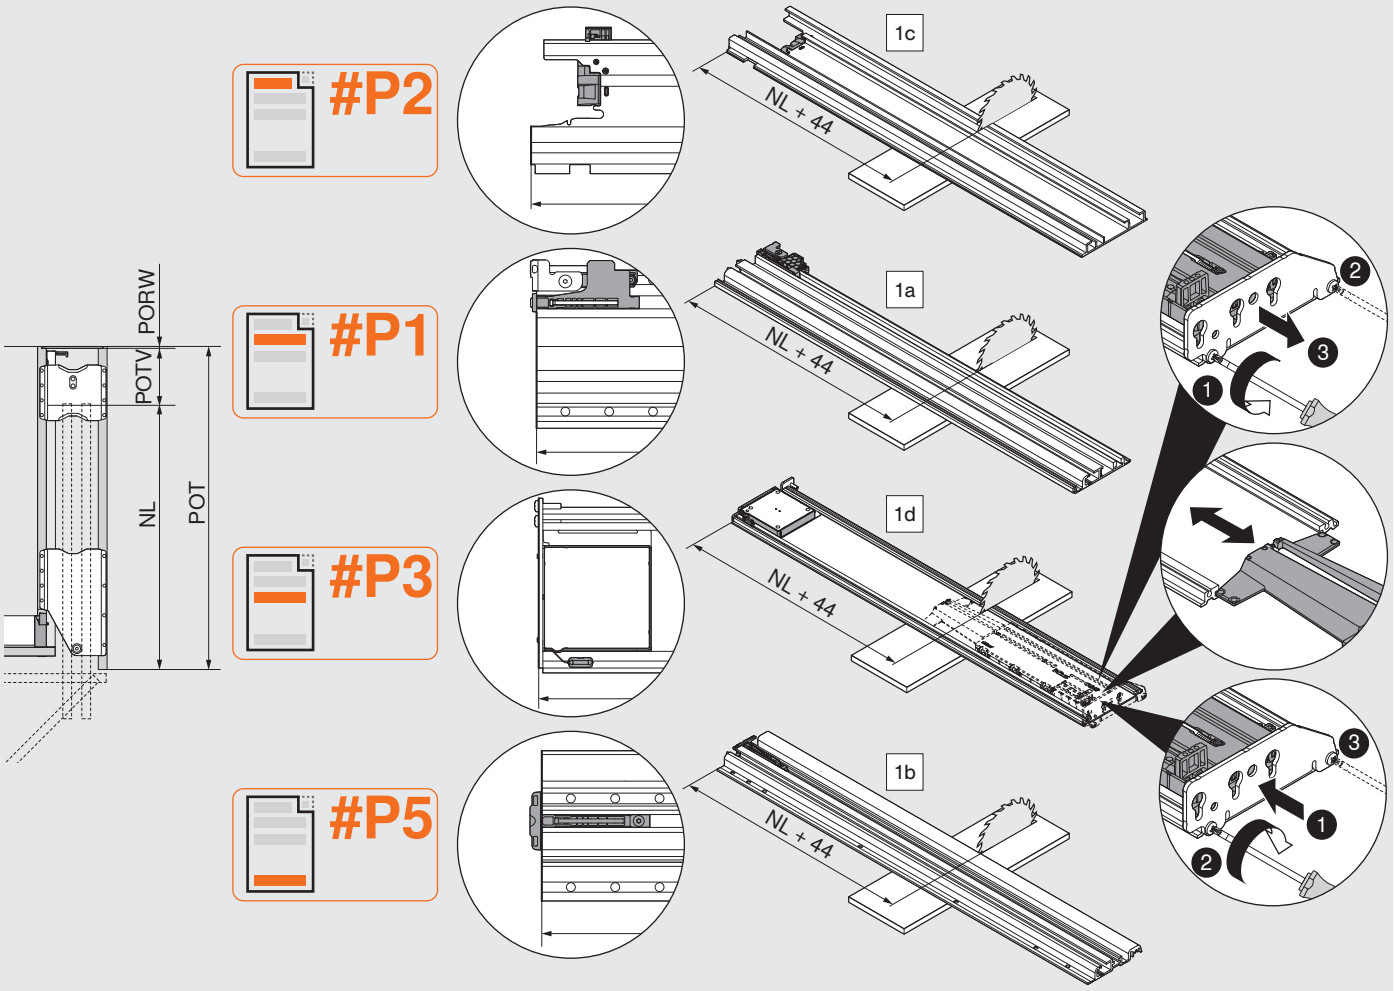

NL = POT - POTV - PORW

#P1	1a	Top pocket profile
#P2	1c	Roller profile
#P3	1d	TIP - ON unit pocket
#P5	1b	Bottom pocket profile

NL	Nominal length
POT	Pocket depth
PORW	Pocket back
POTV	Pocket depth loss

Note

- Pocket and roller profiles as well as TIP - ON unit pocket must not be damaged during cutting to size.
- Pocket and roller profiles as well as TIP - ON unit pocket must be cleaned to remove any dirt and deburred before installation.

Calculations and assembly of the profiles

REVEGO uno | Single door

Pocket cover strip

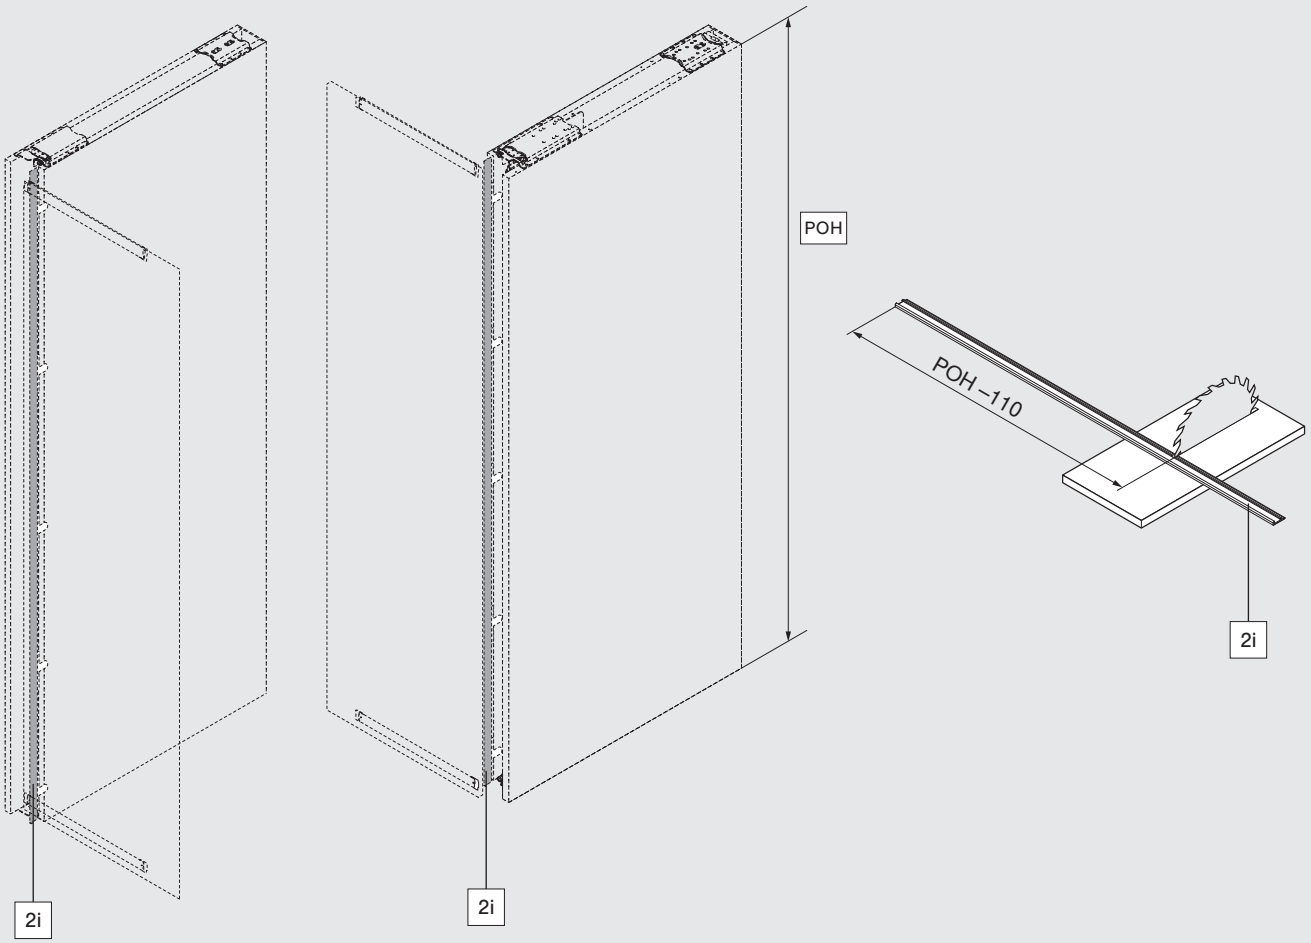

POH	Pocket height
2i	Pocket cover strip

Calculations and assembly of the profiles

REVEGO uno | Single door

Pocket profile, TIP - ON unit pocket, door stabiliser

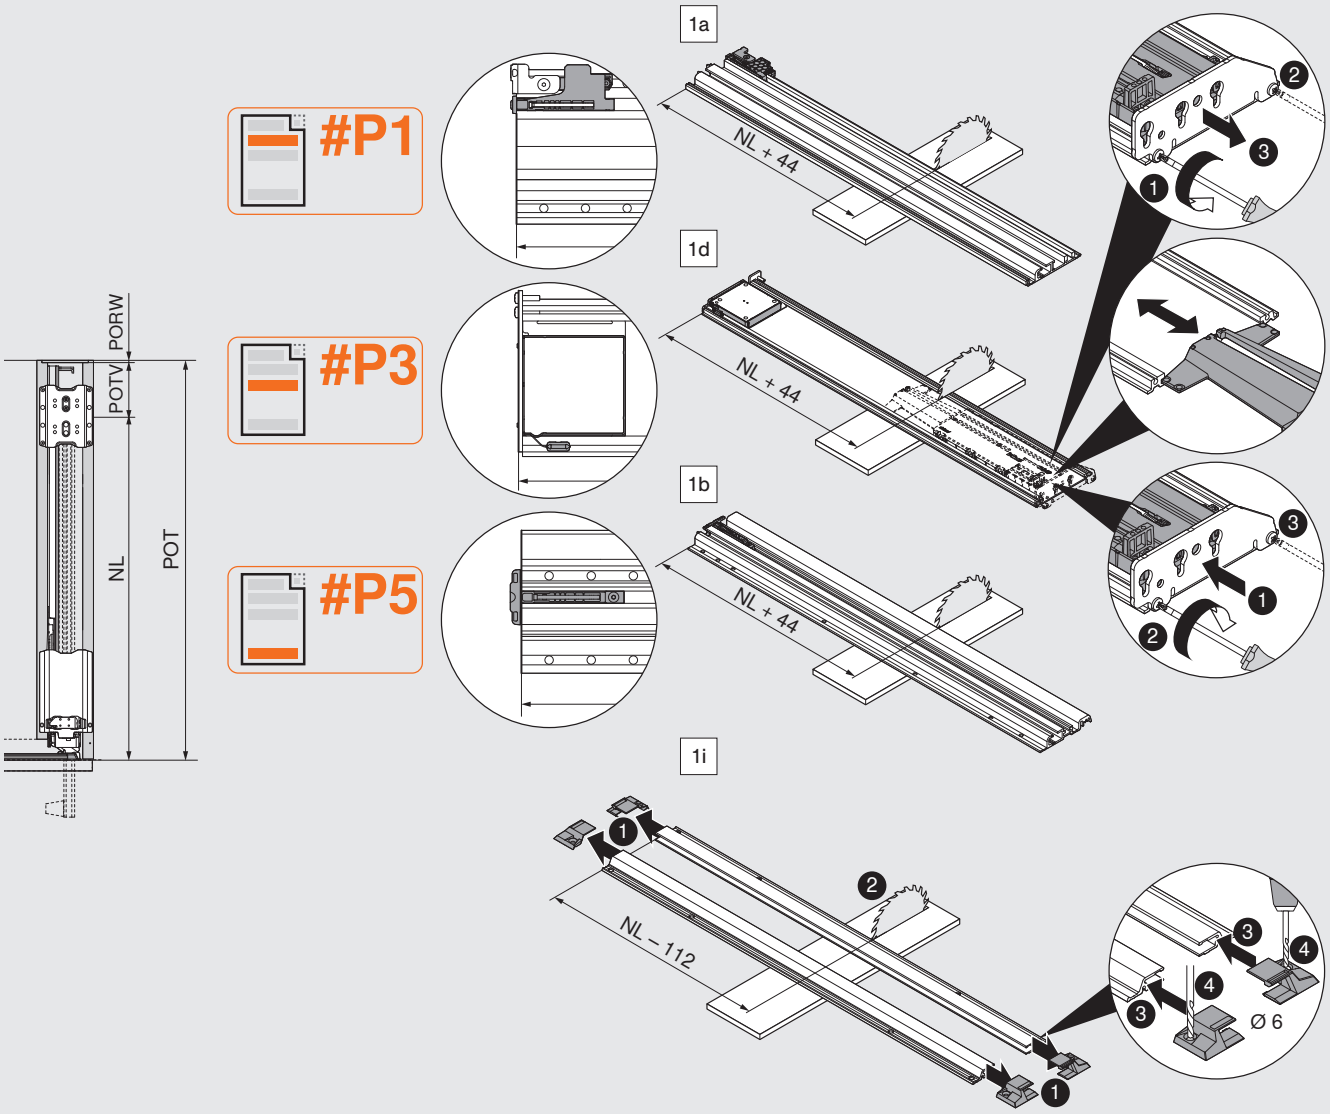

NL = POT - POTV - PORW

#P1	1a	Top pocket profile
#P3	1d	TIP - ON unit pocket
#P5	1b	Bottom pocket profile
	1i	Door stabiliser

NL	Nominal length
POT	Pocket depth
PORW	Pocket back
POTV	Pocket depth loss

Note

- Pocket profiles, TIP - ON unit pocket and door stabiliser must not be damaged during cutting to size.
- Pocket profiles, TIP - ON unit pocket and door stabiliser must be cleaned to remove any dirt and deburred before installation.

Calculations and assembly of the profiles

REVEGO duo | Double door

Track, track extension

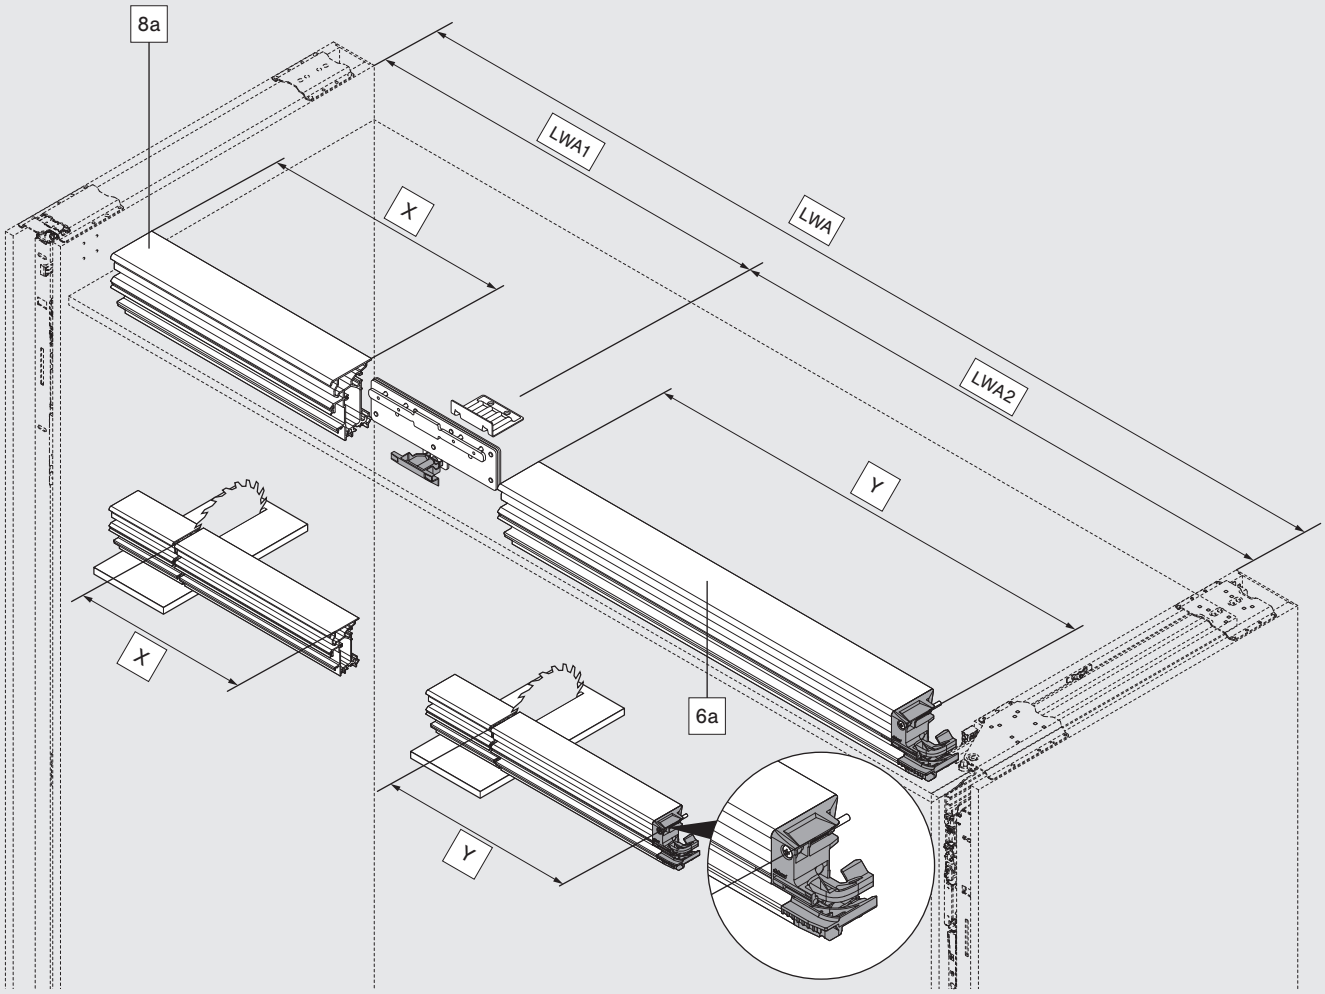

Application	X	Y
REVEGO duo	-	LWA - 12mm
REVEGO uno + duo	LWA1 - 58mm	LWA2 - 12mm
REVEGO duo + duo	-	LWA2 - 12mm

LWA	Internal width within the application
LWA1	Internal width within the application, single door
LWA2	Internal width within the application, double door
6a	Track
8a	Track extension

EXPANDO T

- EXPANDO T - fixing system
- Thin fronts measuring 8mm or more
- Different front materials

EXPANDO T - single			Blum No	Code
	Colour	**Material**		
	Dark grey	Nylon/steel	70T4532T	**7102466**

Drilling depth | Screw selection - EXPANDO T

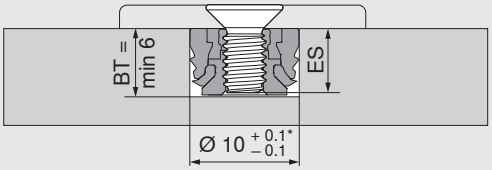

Screws with M4 thread have to be used for EXPANDO T single

Select the lowest possible drilling depth to suit the screw length when using the single dowel

BT Drilling depth

ES Screw penetration depth

ES min. = 4mm

ES max. = BT - 0.5mm

* Stone and ceramic +0.2/ - 0.1mm

Assembly - EXPANDO T

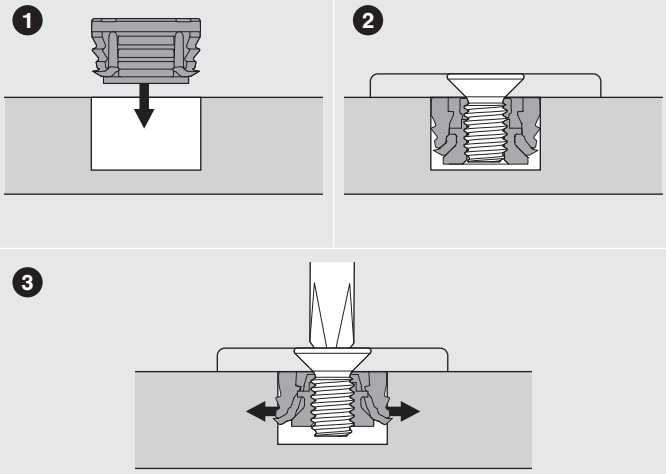

Area of application and assembly recommendation

EXPANDO T is suitable for fixing Blum fittings to thin cabinet fronts of all types of materials. Front materials can be just 8mm thick or more, provided they are sufficiently stable and strong.

A trial application is recommended.

Nm Minimum tightening torque

Materials tested by Blum	Nm
Chipboard (transverse tensile strength > 0.4 N/mm²)	1.5
MDF (transverse tensile strength > 0.6 N/mm²)	1.5
HDF	2
HPL	2
Mineral composites	2
Front weight	
Max. 35 kg per front	

Limitation of liability

Blum accepts no liability for the use of EXPANDO T in combination with materials not listed or fittings from other manufacturers. It is recommended that assembly be carried out by an experienced furniture manufacturer.

Find more information on assembly and adjustment of EXPANDO T at **www.blum.com/rev13**

Assembly devices

Gauge set for REVEGO pocket connector

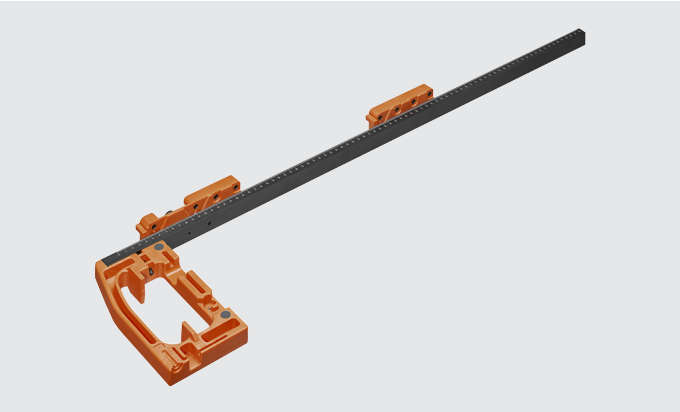

- Drilling template for horizontal drillings of REVEGO pocket connectors on the pocket side wall
- Material: nylon/steel/aluminium

Ordering information	Blum No	Code
	STL.8000.01	7115229

Internal testing and inspection regulations

Durability

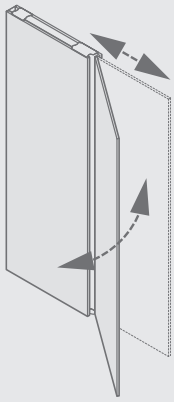

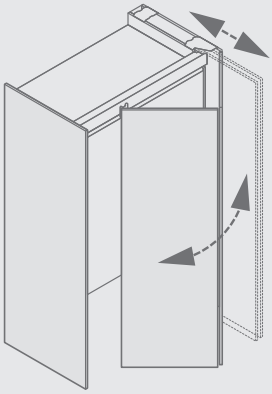

40,000 opening and closing cycles.

Abuse test

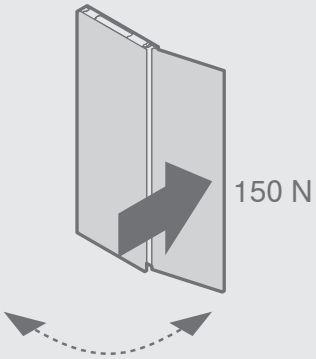

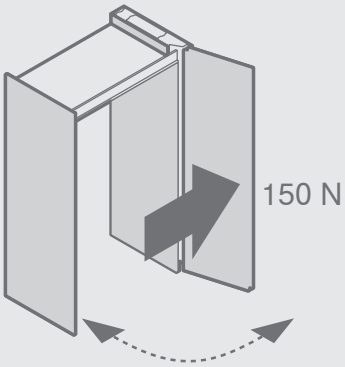

Horizontal load test to ensure that system will withstand misuse

Slam open/slam shut test

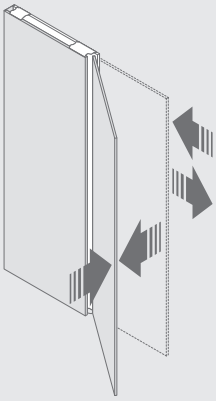

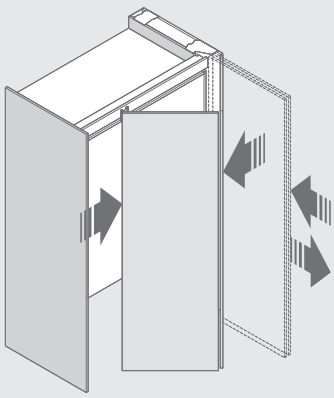

To simulate overload when opening and closing and ensure that the fronts do not detach from fittings.

Corrosion testing

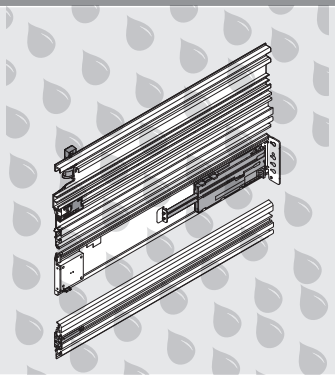

Based on DIN EN ISO 9227 and DIN EN ISO 6270 - 2 for simulating corrosion influences.

Notes

Notes

LEADING DISTRIBUTOR

PREMIUM BRANDS

EXPERT SUPPORT

National Customer
Support Centre
Ph: 1300 551 919

www.lincolnsentry.com.au

Get Social

@lincolnsentry
@lincolnsentry
Lincoln Sentry Group Pty. Ltd

Lincoln Sentry logos are registered trade marks of
Lincoln Sentry Group Pty Limited